



CSC Ground Effects Installation Instructions when Goldstrike Highway Pegs are used.

11/11/2022

Parts included

1pc GFX-31063R GFX Mt Tab, Highway Pegs, R

1pc GFX-31063L GFX Mt Tab, Highway Pegs, L


2pcs FST-72808 SHCS, M8-1.25 X 100mm



Parts not used



Goldstrike Peg Mts installed on motorcycle prior to CSC GFX installation.

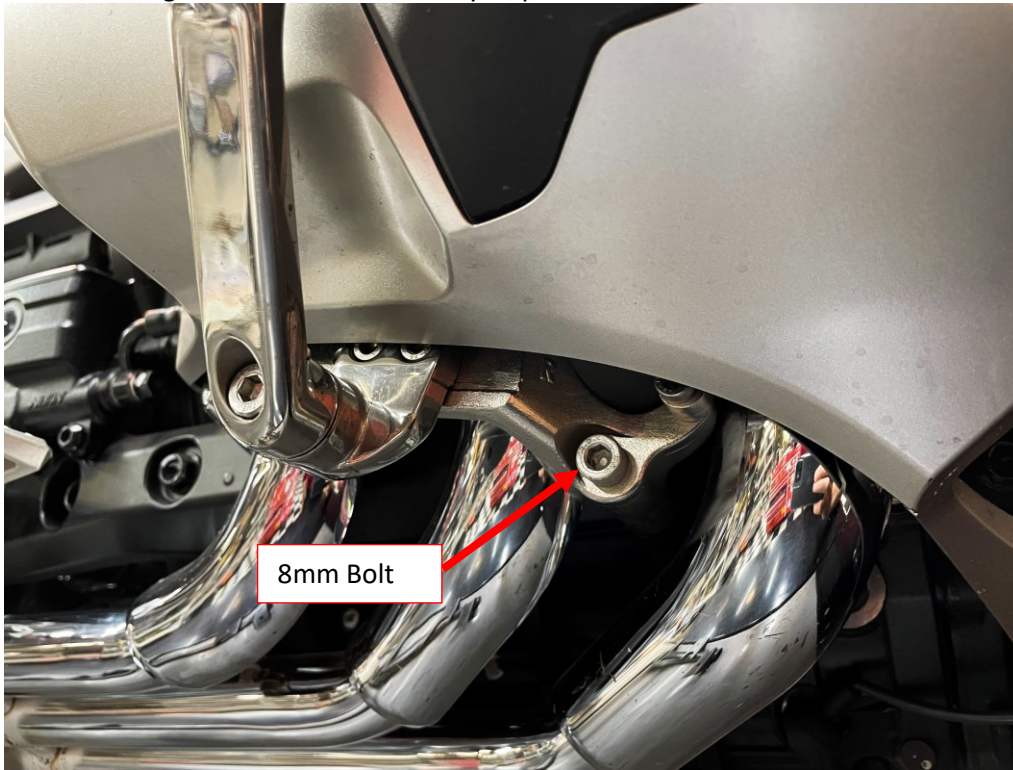

1. Remove lower 8mm bolt from Goldstrike Mount. Install CSC GFX Mt and CSC 8mm bolt. If installing Goldstrike mounts at the same time as the GFX simply add the CSC bracket and use the CSC 8mm bolt in place of the Goldstrike 8mm bolt.

CSC GFX Mts installed with Goldstrike Peg Mts. Right Side



CSC GFX Mts installed with Goldstrike Peg Mts. Right Side



Final installation, right side.



2. Finish installing GFX as normal per Encore GFX instructions.
3. **Done**