18 Volt Modi^M Wiring Harness

INSTALLATION IS QUICK EASY AND FULLY REVERSIBLE.

FIRST ENSURE YOU HAVE ENOUGH SPACE TO ACCOMMODATE THE BATTERIES.

DISCONNECT YOUR BATTERY FROM YOUR GUITAR/BASS.

CONNECT THE HARNESS CONNECTOR LABELED "TO GUITAR" TO THE GUITAR/BASS 9 VOLT CONNECTOR. INSTALL (2) 9 VOLT BATTERIES TO THE PROPER CONNECTIONS ON THE OTHER END OF THE HARNESS.

IF INSTALLING INSIDE GUITAR/BASS CAVITY WE RECOMMENDED INSULATING BATTERIES. YOU CAN PURCHASE INSULATORS AND INSULATED BATTERIES ON OUR SITE.

TO RETURN TO NORMAL 9 VOLT OPERATION JUST REMOVE THE HARNESS AND REINSTALL 9 VOLT BATTERY.

*NOT COMPATIBLE WITH CONTACT STYLE BATTERY BOXES.

YOU CAN ALSO WRAP THE BATTERIES WITH ELECTRICAL TAPE.

LOOKING FOR THE ULTIMATE UPGRADE? CHECK OUT THE 24 VOLT MOD™




AWARNING: A !CHOKING AND SUFFOCATION HAZARD!

CONTAINS SMALL PARTS WHICH POSE A CHOIKING HAZARD. PLASTIC WRAP POSES A SUFFOCATION RISK.

KEEP AWAY FROM CHILDREN AND PETS!

Use of this product is done so at the users own risk. Most active pickups are rated for up to 27 volts; however, increasing the voltage always poses a small risk of damage. We are not responsible for any damages accidental or incidental from use of the this product and all liability lies solely with the user.

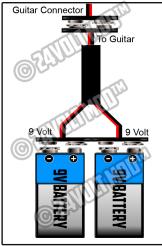

VISIT OUR WEBSITE FOR EVEN MORE GREAT PRODUCTS.

WWW.24VOLTMOD.COM