

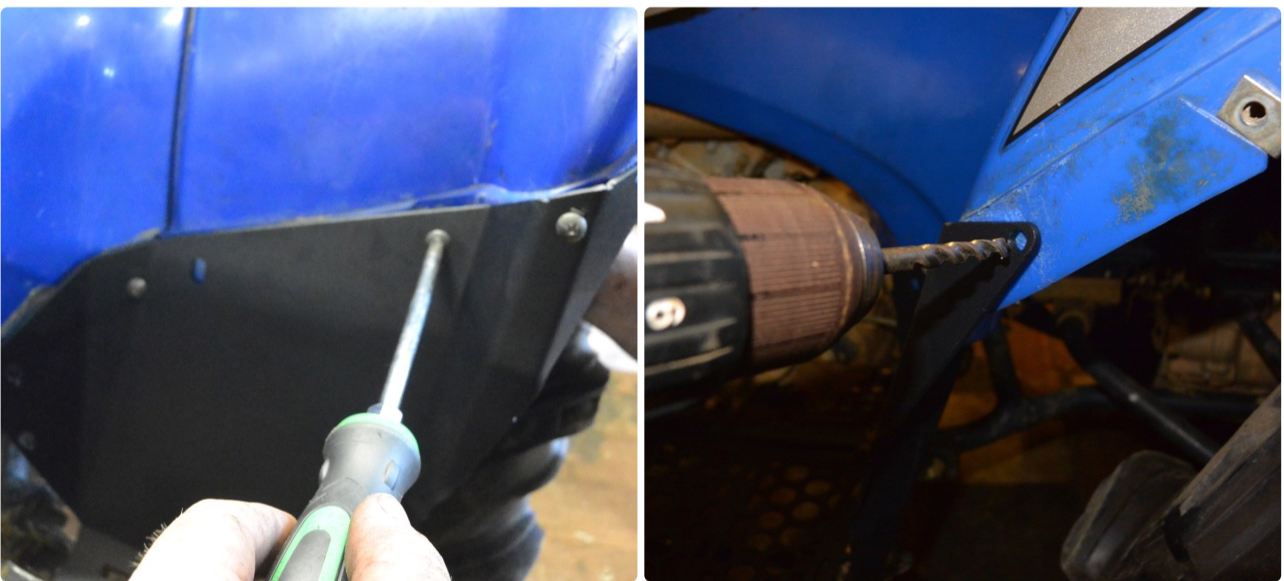


2005-2024 Kawasaki Brute Force 650 & 750 High Clearance Floorboards, Footwells

1. Remove factory floorboards and footpegs, save the factory hardware as you will be reusing some of it for the install.
2. Clean support area if desired.
3. Install new Lucky 7 floorboards, using the (8) factory mounting bolts.
4. Mount floorboards to fenders in all factory locations using factory phillips head screws, and drill the holes that have plastic behind them. (See Photos)

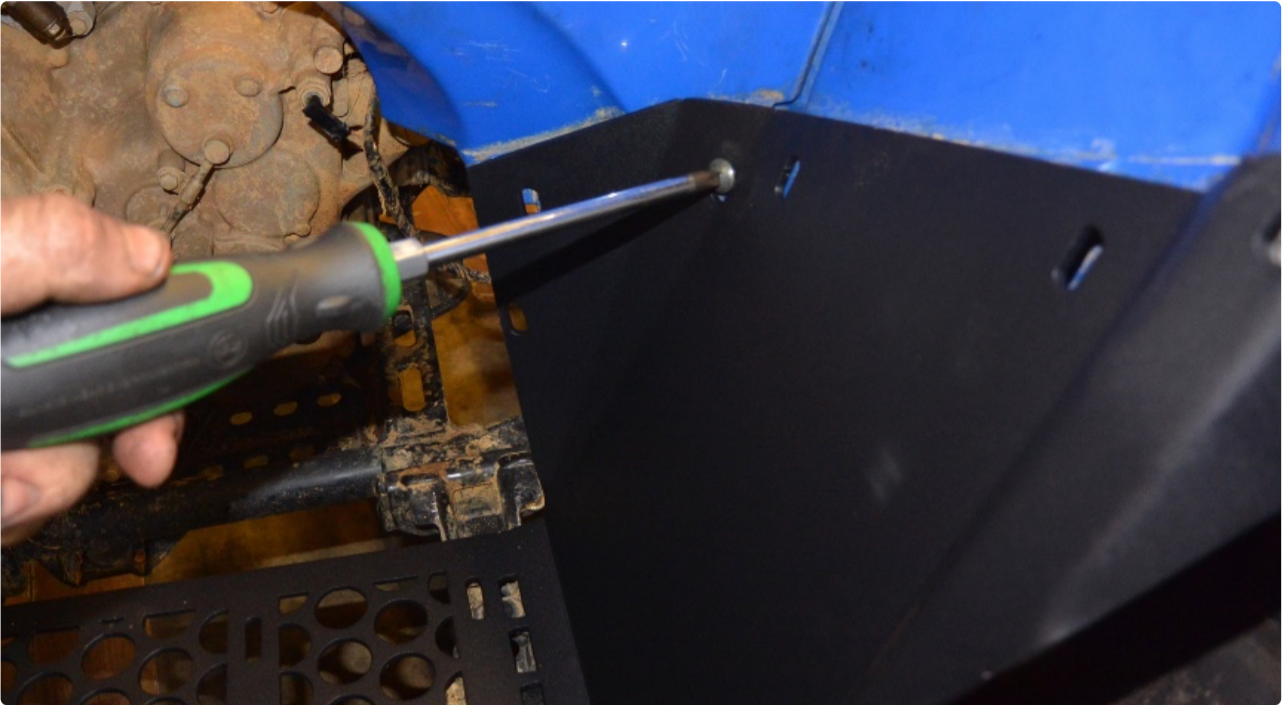

1. Use the included M6 button head bolts and nuts to bolt the floorboard to the fenders, finger tighten all hardware for now.
2. Make needed adjustments to align floorboards with bike and allow clearance for belt box and brake lever.
3. Tighten all hardware (double check that you retightened your 13mm nuts on the brake lever).
4. Removable side plate can be installed last using 3 M6 button head bolts.

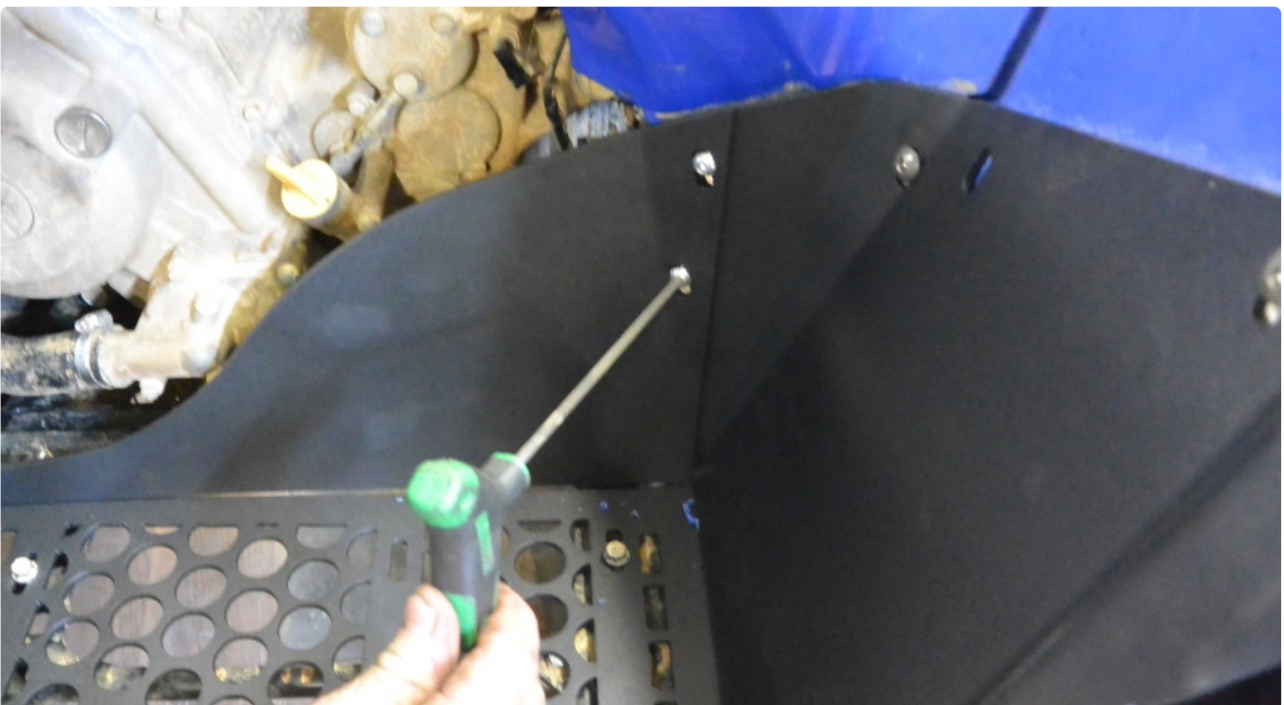

Tighten everything down / Enjoy!