



2016-2024 INTEGRATED SOUND Polaris Sportsman Highlifter Edition 850/1000 Radiator Cover

1. Remove factory plastic radiator cover.
2. Using the Lucky 7 Cover as a template, set the cover on the 4 wheeler.

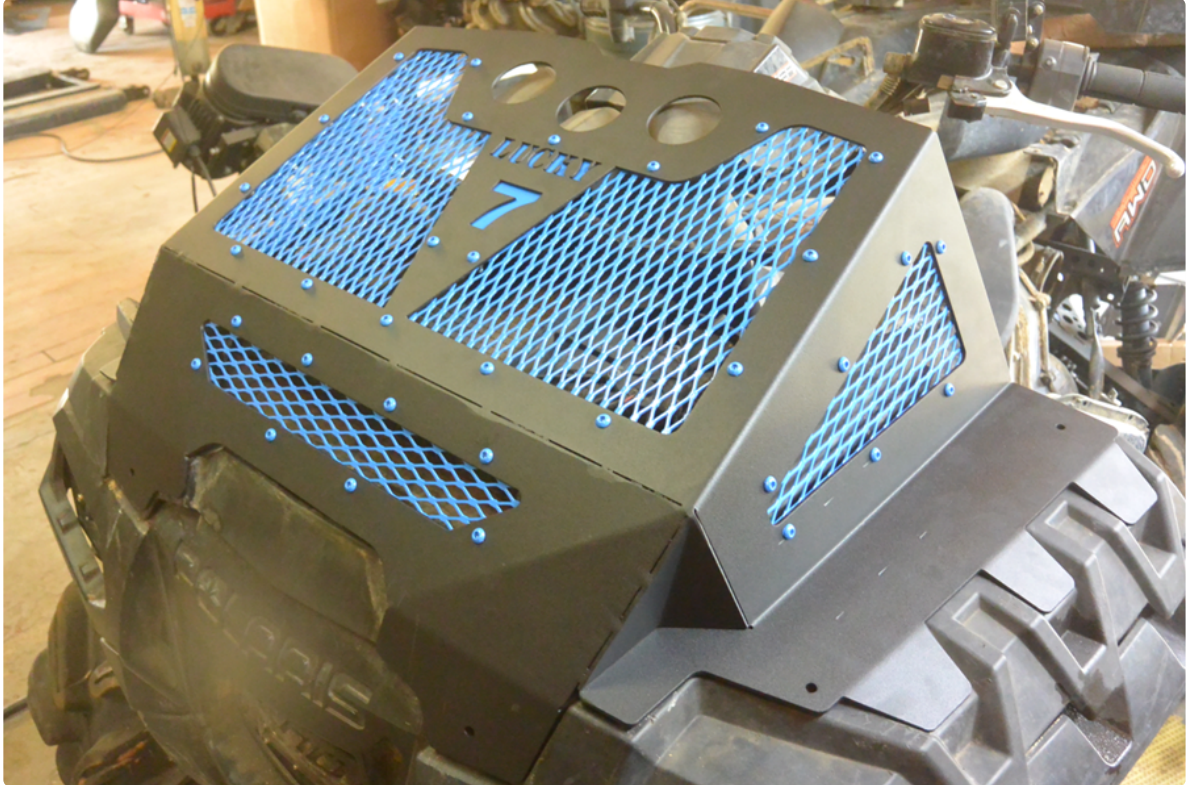

Mark and Drill 4 holes along sides. Front holes do not need drilled.

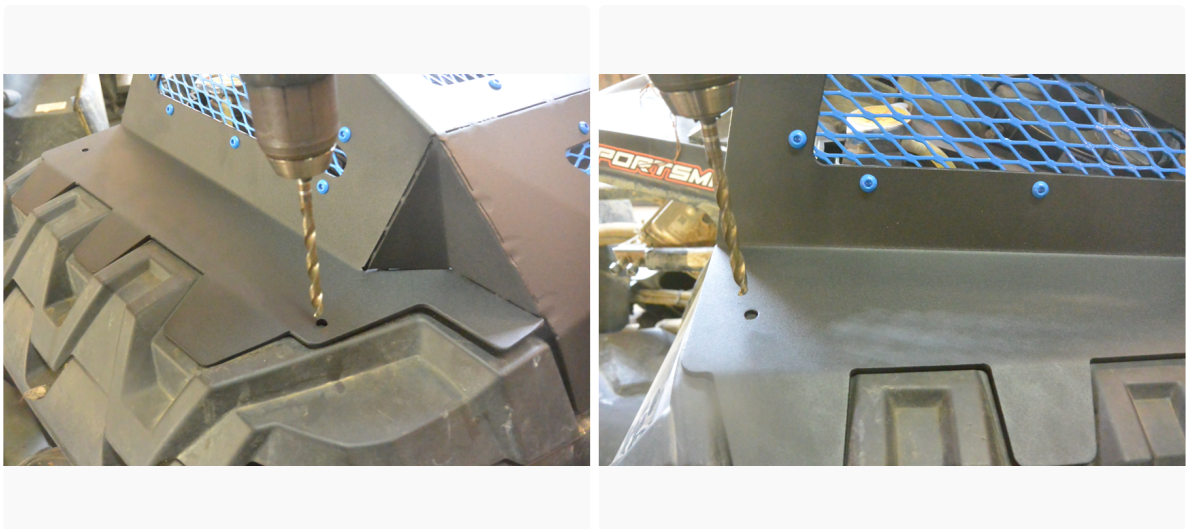

3. Remove Front Bumper (fascia) to gain access to tighten nuts.
4. Carefully replace bumper while tucking underneath the rad cover, replace bolts holding front bumper.
5. Using included bolts, and fender washers, attach the front 2 bolts. You can reach up in the wheel wells to hold the nut with a wrench.
6. Tighten everything down.
7. Enjoy.