


Polaris Sportsman Metal Floorboards 2014 - 2024 570 & 2016-2024 450 HO Hawkeye 325

1. Remove factory floorboards, and save mounting hardware, you will need it to install the Lucky 7 Floorboards.
2. Loosely attach floorboards to mounts on the bike, the holes are slotted for adjustment.
3. Drill Rear fender as shown:

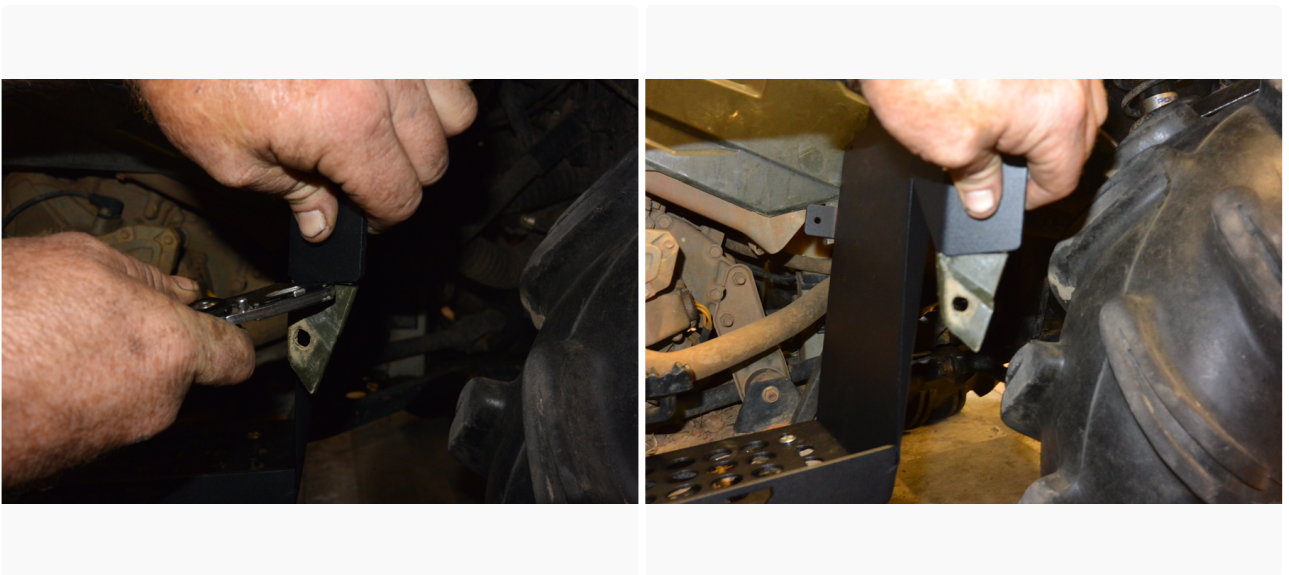

You can attach the floorboards without cutting the fender, but we recommend trimming it as shown:



4. Attach front fender using Included M6 1.0 Hardware
5. Using An M6 1.0 Attach inner plastics to the tab on the floorboards. Use a washer behind the plastics to prevent the plastic breaking.
6. Using the floorboards as a template, drill holes through the floorboard holes, into the plastics, Use included hardware, and washer / nut to attach.
7. Tighten Bolts attaching floorboards to the frame.



SIDE PLATE INSTALLATION

1. Hold side plate up to front fender on the 4-Wheeler. Find a spot where it looks centered on the water pump etc, and mark holes in floorboards.
2. Drill floorboards
3. Attach side plate to the floorboards using included hardware.