




## Deflink John Deere Adblue off

**Step 1** Turn off machine let sit for 5mins

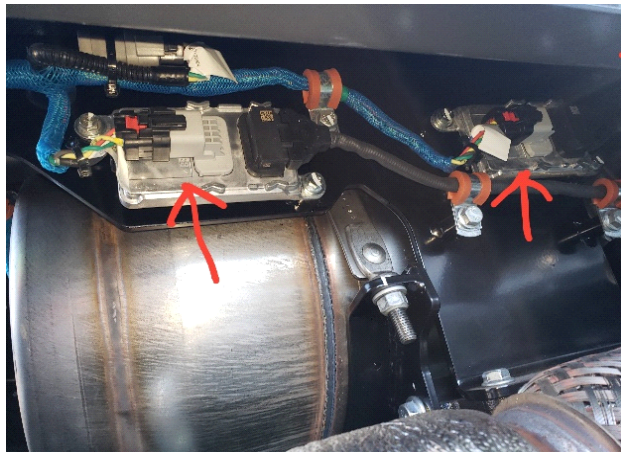

**Step 2** Locate nox sensors and make sure you have two a inlet and outlet nox labeled B5502 and B5503

**Step 3** Remove **both** plugs from nox sensors

**Step 4** Install deflink to inlet nox sensor either B5502 **OR** B5503 .Secure the deflink box safe location away from heat, preferably by other electronics.

**Step 5** Full tank with def

**Step 6** Run machine and verify no Adblue usage. Top up if required.

**BE SURE TO SECURE THE COMPUTER BOX IN CAB OF THE MACHINE AWAY FROM WATER AND EXTREME HEAT.**