



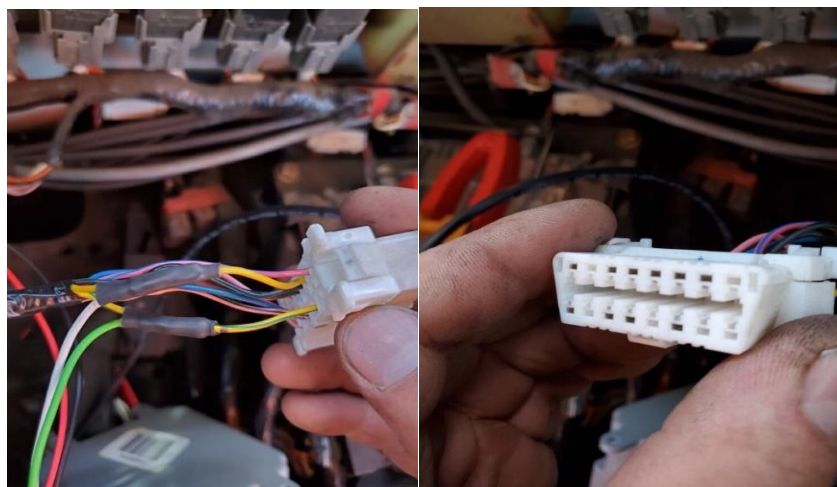

## Link belt instructions

- 1- Remove panels behind seat in cab.
- 2- Locate the obd2 diagnostic connector, we will be splicing into two wires behind it  
We will be splicing into 6 and 14 pin as shown in picture.
- 3- Splice the green from the Def Link box to the yellow with green stripe pin 14.
- 4- Splice the white from the Def Link box to yellow pin 6.
- 5- Locate 24v fused power in cab black is ground red is power connect to the Def Link box Red and Black wires.
- 6- Locate dcu controller in cab and unplug the Bosch Isuzu controller plugs located on the door side of the cab. Tie off and leave disconnected.
- 7- Turn key on and verify def gauge goes to about 3/4 full.

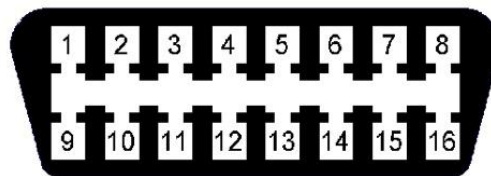

**This unit does not leave any trace when removed**

