

8GRILLS.COM Outer & Inner Set - Installation Instructions

YOU DO NOT NEED TO LIFT THE VEHICLE TO PERFORM THIS INSTALLATION

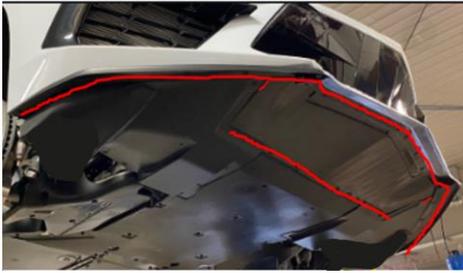


Figure 1

Remove the T15 Torx and 7 mm screws from the areas shown in red above.



Figure 2

Remove the panel marked above with a blue "X" in Figure 2 by sliding it back and pulling it down.



Figure 3

Pull down the corner panels on each side of the bumper.



Figure 4

Slide the Inner grill insert behind the opening and into the inner vent location and secure with the provided zip fasteners (3 or 4 on each side).



Figure 5

Slide the Outer grill insert behind the opening and up into the location with one hand and then guiding it through the front opening with the other hand.



Figure 6

Use a zip tie as a helper in the center to hold the grill in place while you secure it with the small ties in the locations marked in yellow in Figure 6. Snip the excess off the zip ties and push the lock tabs back for maximum concealment. Reinstall all of the undercarriage screws.

Additional instructional video clips can be found at c8grills.com.

Package Contents:

Left and Right Outer Grill Inserts
Zip Fasteners (Qty 10)

Left and Right Inner Grill Inserts
Zip Fasteners (Qty 8)

These Installation Instructions