

# **C 8GRILLS.COM** Installation Instructions

YOU DO NOT NEED TO LIFT THE VEHICLE TO PERFORM THIS INSTALLATION.

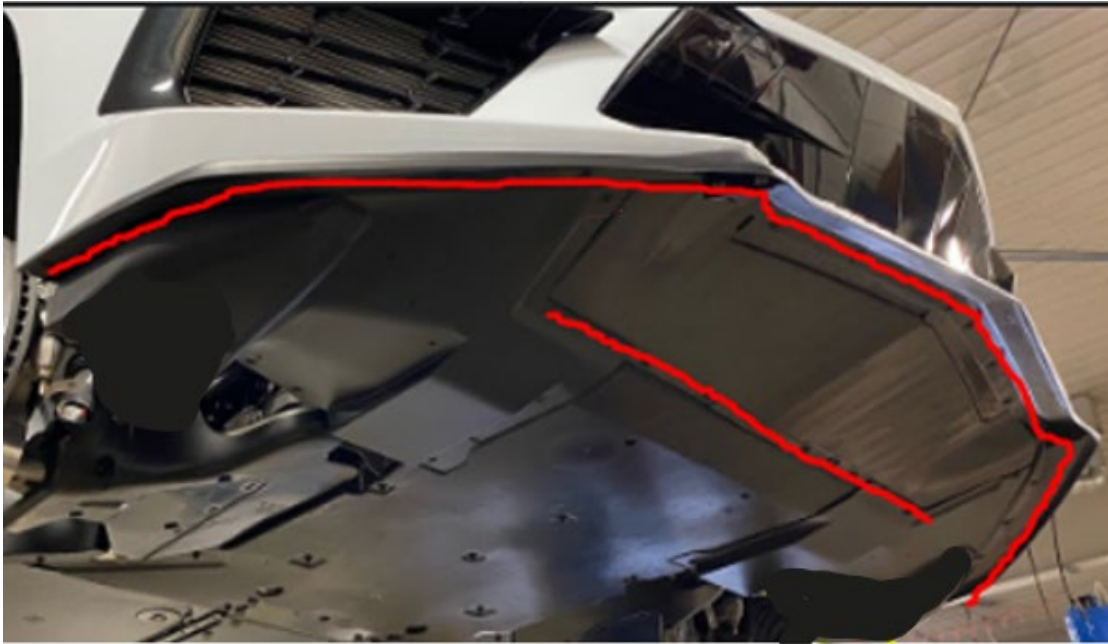


Figure 1

Remove the T15 Torx and 7 mm screws from the areas shown in red above.



Figure 2

Remove the panel marked above with a blue "X" in Figure 2 by sliding it back and pulling it down.



*Figure 3*

Pull down the corner panels on each side of the bumper.



*Figure 4*

Slide the grill insert behind the opening up into the location with one hand and then guiding it through the front opening with the other hand.



*Figure 5*

Use the long tie wrap as a helper to hold the grill in place while you secure it with the small ties in the locations marked in yellow in Figure 5. Snip the excess off the zip ties and push the lock tabs back for maximum concealment. Snip and remove the helper ties and reinstall all of the undercarriage screws.

Additional instructional video clips can be found at [c8grills.com](http://c8grills.com).

**Package Contents:**

Left and Right Grill Inserts  
2 Long Tie Wraps (helper ties)  
10 Small Black Tie Wraps (2 extra)  
These Installation Instructions