

The Sardo Driver's Protective Shield Installation Guidelines and Instructions

Please Watch our Installation Video
at sardoprotectiveshields.com
and Read All Instructions Before Beginning Installation


Easily Viewed on
Your Mobile Device

This product is designed to fit a large variety of bus models and configurations. The basic instructions apply for most models and the actual location of your placement will be based on your model.


Items Required for Installation - Scissors, Measuring Tape, Marker, Straight Edge & Alcohol with Cleaning Towel.

STEP 1 - Measure and Cut 3 Strips of Supplied Self Adhesive Hook Velcro.

Strip 1, Door Side measures from door side ceiling corner to center line of ceiling over aisle.

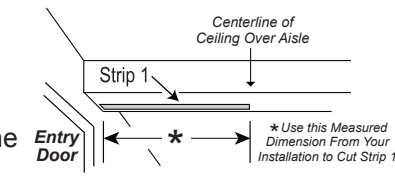

Strip 2, Driver Side measures from driver side ceiling corner to 10" past center line of ceiling over aisle.

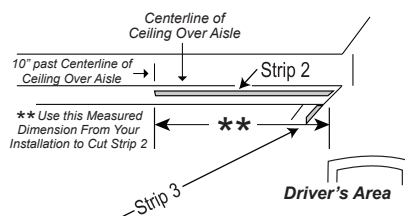


Strip 3, measures 10" for "L" strip behind driver.

STEP 2 - Using Alcohol, thoroughly clean areas where hook Velcro Strips apply to bus. This step is extremely critical in order that the hook Velcro adheres firmly to substrat.

STEP 3 - Apply Self Adhesive Velcro Strips

Peel off backer and press firmly into place.

- First, apply Door Side Strip 1 from ceiling corner to centerline of ceiling over aisle.
- Second, apply Driver Side Strip 2 from the ceiling corner to 10" past centerline of ceiling over aisle.
- Apply the 10" Driver Side "L" Strip 3 last.

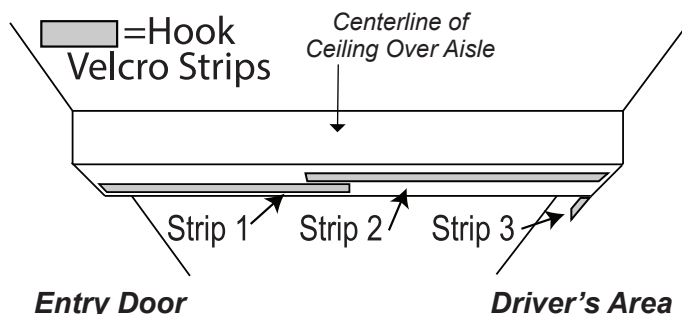


Note: Supplied Panels are 54" wide x 90" in length from the factory.

STEP 4 - Panel on Door Side

Measure from door side ceiling corner to center line of ceiling over aisle. Mark Door Side Panel and cut to match that width, this will match the Door Side Hook Strip One in step 1.

STEP 5 - Panel on Driver Side

Measure from driver side ceiling corner to 10" past center line of ceiling over aisle then add an additional 10" for the Driver Side "L". Mark Driver Side Panel and cut to match that width.

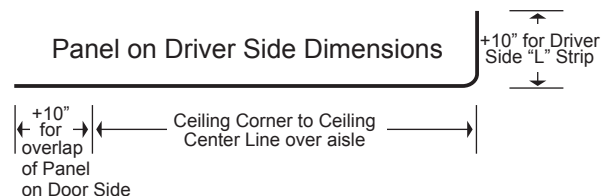

STEP 6 - Attach Panels

Start with Panel on Door Side, matching loop Velcro strip on panel to hook Velcro strip 1 on bus, align and press into place. Repeat with the Panel on Driver Side, starting at the end of the "L" strip 3 and working towards the center of the ceiling, Strip 2. This panel overlaps the Panel on the Door Side.

