


Vanity Sink Base Drawer Assembly Instructions

FIRST tasks - build the **BOTTOM ASSEMBLY** and **SINK ASSEMBLY** (next page).

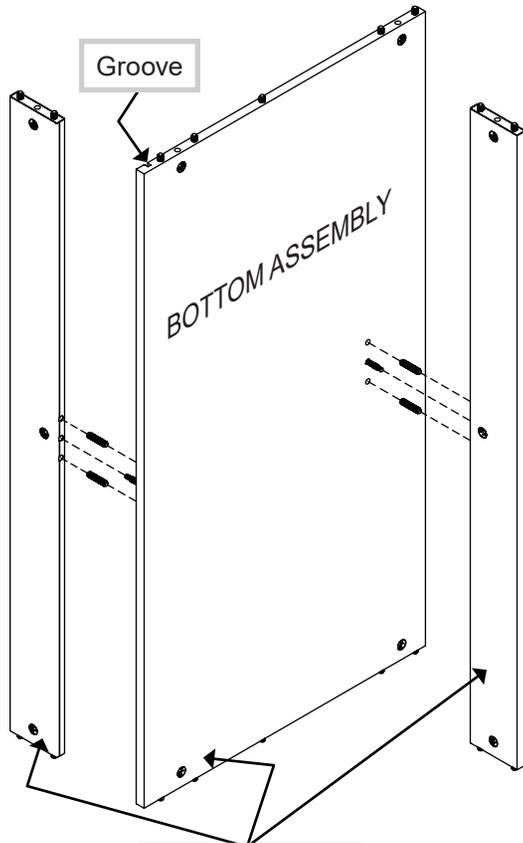


Surface with **HIDDEN CAMS**

Completely Tighten

Maximum 210 degrees


Minimum 190 degrees

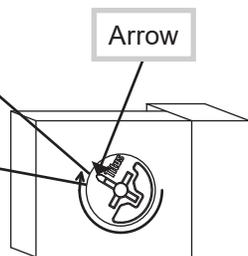


Glue is recommended for structural integrity.

First, build the **BOTTOM** and **SINK** (next page) **ASSEMBLIES**.


Before assembly, install hardware to parts as shown.

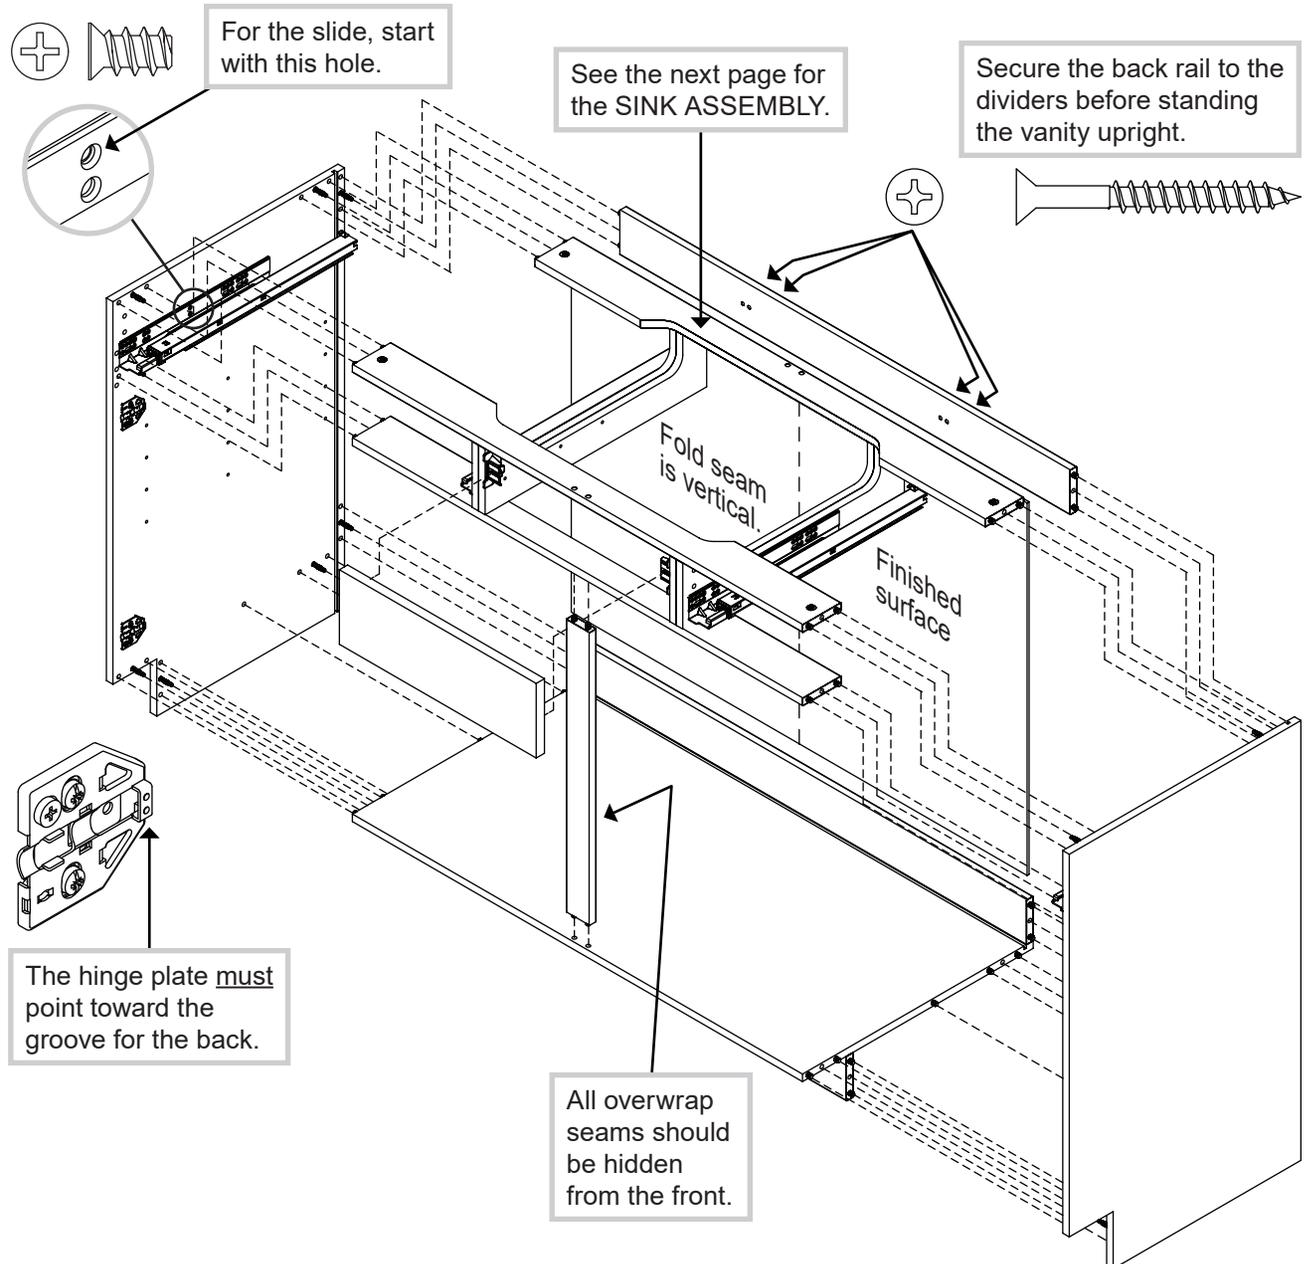

(12 used in the four dividers)

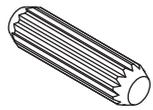

1

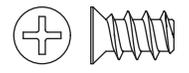

For the slide, start with this hole.

LEFT set of dividers

RIGHT set of dividers

Back to back

Back to back

Rubber mallet

Tap on the edges - NOT on the center.

3

2

LEFT set of dividers

RIGHT set of dividers

Tap on the edges - NOT on the center.

Rubber mallet

Curved edge faces in.

IMPORTANT:
The wider edge overhangs the edge slightly. This hardware cannot be removed without damage.

