




Use a 6" bit for the drawer clips.

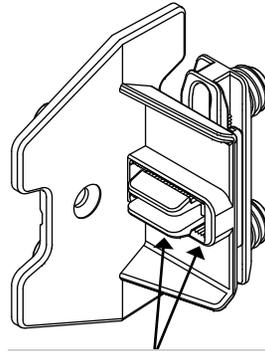


Push a hidden cam into the part. The arrow in the hidden cam must point toward the hole in the edge of the board.

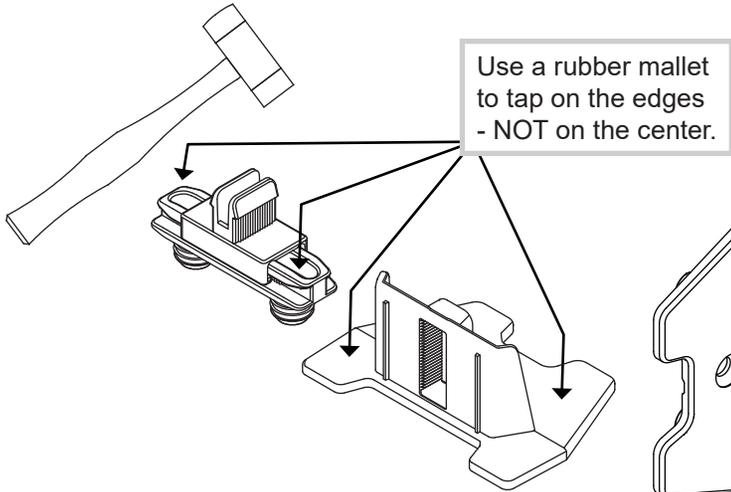

The hinge plate must point toward the groove for the back.

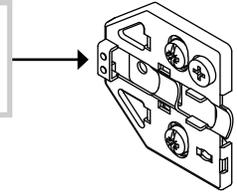


To carry the base, lift on the rails close to the end panel and lean against your legs.

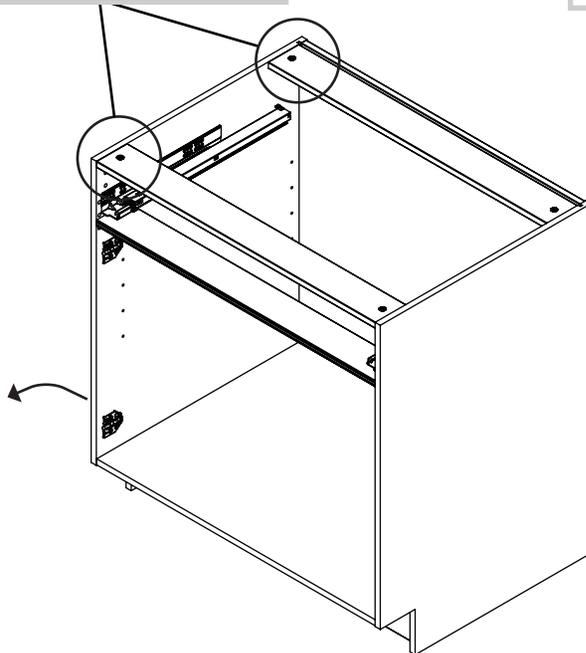

Be sure the two pieces "click" together during final assembly.

Insert the plastic end into the center hole of the three holes in the surface of the part.

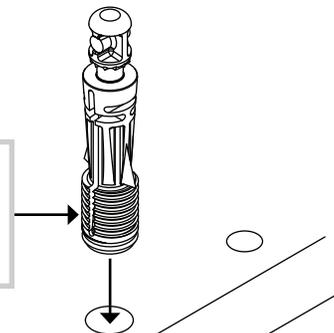

⚠ Caution


Risk of damage or injury. HIDDEN CAMS must be completely tightened. HIDDEN CAMS that are not completely tightened may loosen, and parts may separate.

To completely tighten:

Start

The arrow must point toward the edge of the board.

The plastic end is inserted into the surface of the part.

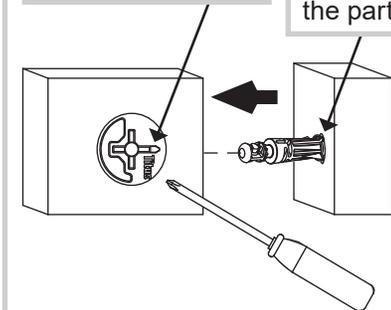

Completely Tighten

Maximum 210 degrees

Minimum 190 degrees

Arrow

