


## Canopy assembly instructions

Please read the entire instructions before starting assembly

Note: each number refers to a picture number thru-out these instructions. (example: item 1. refers to picture 1.

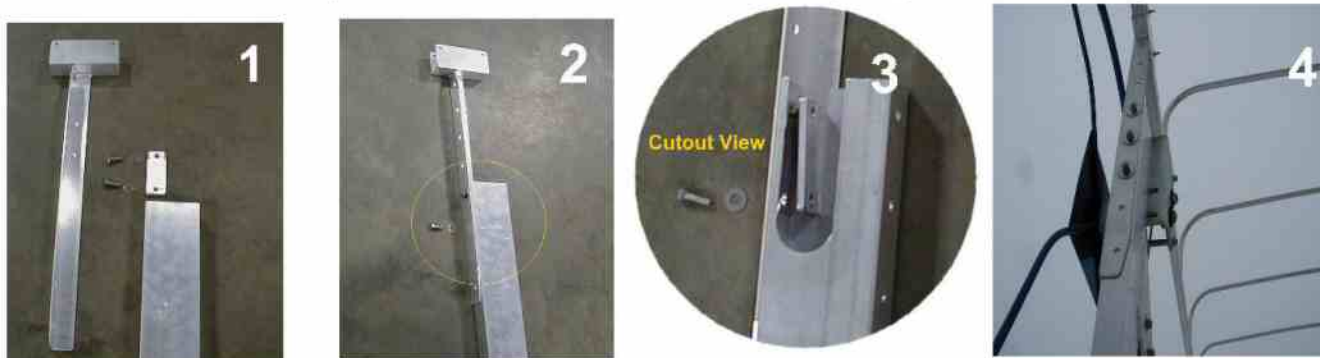

Open the package of canopy rails and canopy T's (items seen on this page are packaged together)

1. thru 4 Mount the Canopy T's to the Boat Lift uprights as seen pictures 1 thru 4 There are 2-left and 2-right Canopy T's They are mounted on the outside 4 corners of the Boatlift.



5. The 4 Canopy rails are identical, place two of the canopy rails so the ends with the double set-screws face each other.  
6. Insert the rail stub into one end of the canopy rails and tighten the two set-screws.  
7. Insert the rail stub into the second canopy rail and tighten the set-screws. (repeat steps 5 thru 7 with the other 2 canopy rails)



pic's 8,9 and 10 are for 22' and 24' Canopies only (22' canopy uses 1 pair on one end) (24' canopy uses 2 pair both ends of rails)  
8. open the package of canopy rail extensions.


9&10. Mount the canopy rail extensions to the canopy rails same as above (note the extensions have one set-screw each end)  
(Be sure to have the canopy pipe towards the canopy rail refer to pic. 9)

Repeat steps 8,9&10 on the opposite end of the canopy rails for the 24' canopy (it has canopy extensions on both ends)



11&12. Mount the assembled canopy rails to the canopy T's that are now mounted on the Boatlift.  
The standard canopy overhang is 1' further overhang on the front of Boatlift, although some Boats may differ.  
(note: the front of Boatlift is the shore end of the Boatlift)

13. Bolt using the 1/4" carriage bolts and nuts on all 4 corners of the Boatlift.

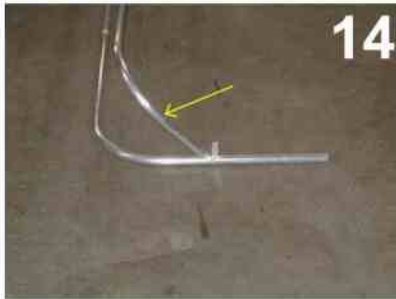

14. There are 2 bows that have tabs welded on them they are end bows and 2 bows that donot have an arch they are 45 degree bows. slide the 45 degree bows over the 45 degree tabs on the end bows
15. This bow has an arch in it as do all other bows to be installed, mount over the 90 degree peg on the end bow.
16. loosen the set-screws on the canopy rails.



17. Slide the canopy end bow into the canopy rails on both ends of canopy, donot tighten the set-screws at this time.
18. Install the canopy tarp and attach velcro on the end bows only!
19. Pull on the end bows to tighten the conopy tarp and tighten the set-screws. (shown tarp off for clarity)



20. fasten all velcro and installation is complete.