

Carpet I/O Cradles and Carpeted Side Guide Rails assembly instructions
Please read instructions before proceeding with assembly




Carpet I/O Cradle Assembly

Warning: Donot over tighten Bolts , this may cause the nuts to lock up. Donot tighten until making finnal adjustments

Note: Each number refers to a picture number thru-out these instructions. Example number 1. refers to picture 1.

1. Remove packaging and mount the cradle plates to the cradle bunks using 3/8" x 3"CS. and nuts.

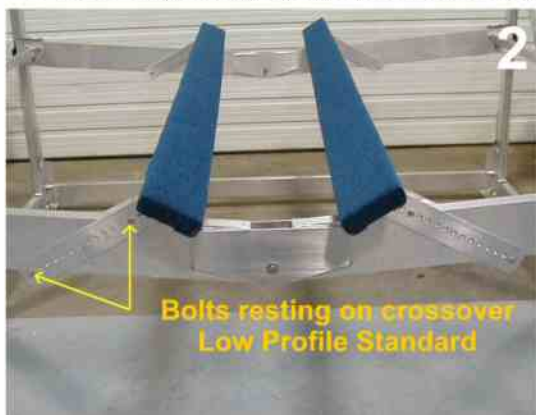

Depending on the hull design of the boat, the Cradles can be mounted two ways

2. Low Profile Standard: The bolts must rest on the top crossover (top and bottom)

3. High Profile: The bolts must rest on the top crossover (top and bottom)

The cradles can be angled in a V shape or moved from left to right as needed for different boat hull configurations.

Final Adjustment: Install the boat, (before raising boat) check and adjust cradles for correct hull clearance and tighten bolts

4. NOTE! The mounting pipe must be installed as shown above the top of the crossover using a 3/8 x 3" cap screw

This item must be installed between the cradle plates when using cradles in the high profile position



Carpeted Side Guide Rail Assembly

5. Remove packaging and remove the 1/4" nuts and washers from the carpet guides, mount the Angles to the Carpeted Guides there is left and right Angles, mount Angles with holes facing the inside of the top crossover.

6&7. Install backing plates using 3/8" X 3"CS. and nuts, adjust to width required and tighten bolts.