




# Faux Wood Moulding - GRAINart

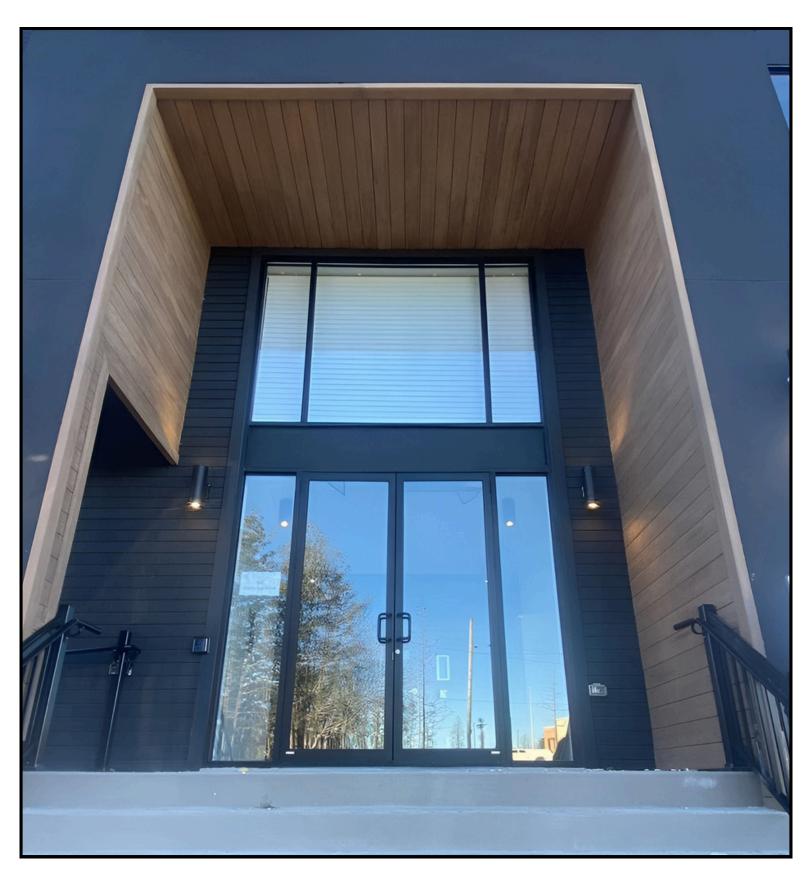

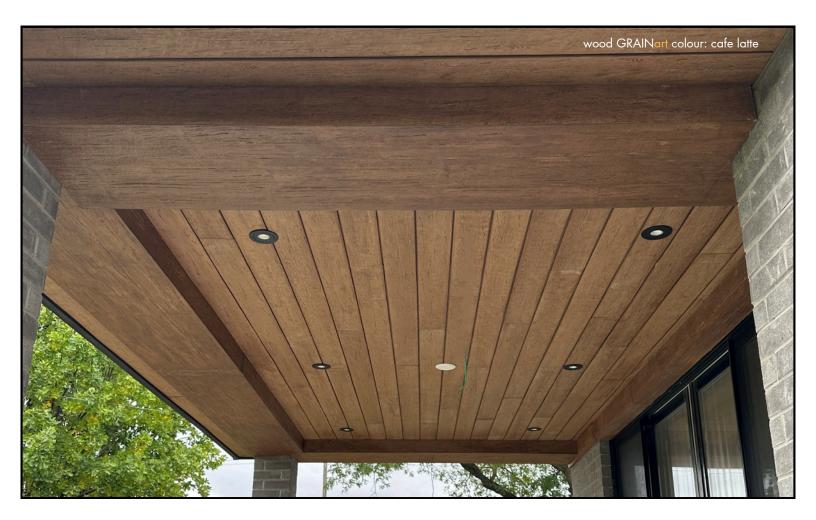


WD - GRAINart - SERIES



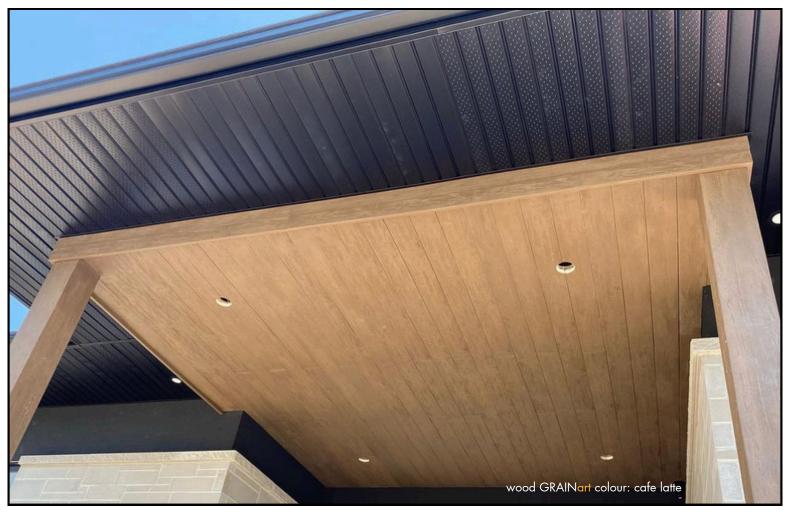


## EXTERIOR MOULDING: WD-GRAINart-6

\*The last number of the code "WD-GRAINart-6" determines the size of the board, i.e. WD-GRAINart-6 is for 6" board.

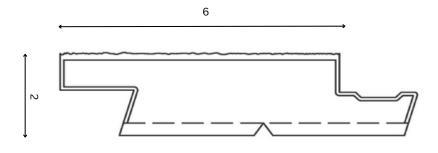



# DIMENSIONS All dimensions are in inches

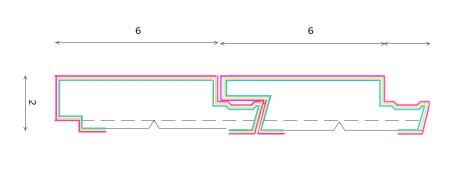

Reinforcing Mesh


Base Coat

Top Coat



#### **Panel Section**


**WD-GRAINart** Pre-finished Woodgrain Panels

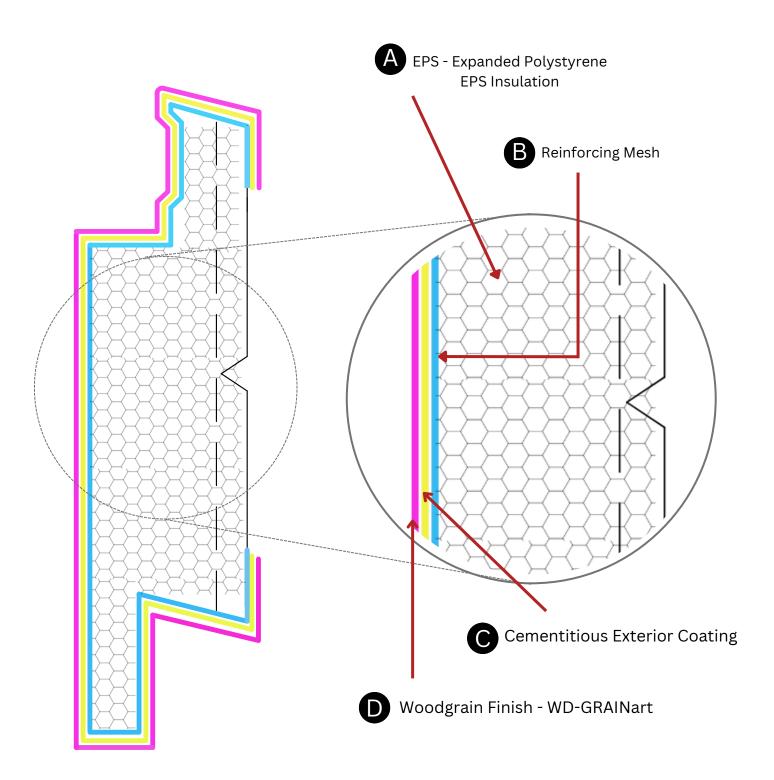




#### **Installation Procedure**

EIFS SYSTEM MASONRY BLOCK

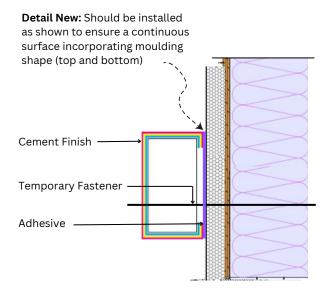

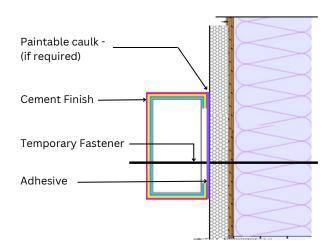

**Note:** Profile must be installed directly to the cured basecoat of the EIFS Assembly prior to installing


### Instructions

Tel: 905.553.6050

email: info@lacunoart.com

- 1. Approved substrate must be dry and free of dust or any other "bond breaking" materials.
- 2. Apply approved adhesive to back of profile using 3/8" vertical notched trowel.
- 3. While adhesive is wet, install Lacuno Art moulding pressing it firmly into place. Remove excess adhesive.
- 4. Some pieces may require mechanical attachment until adhesive sets up.



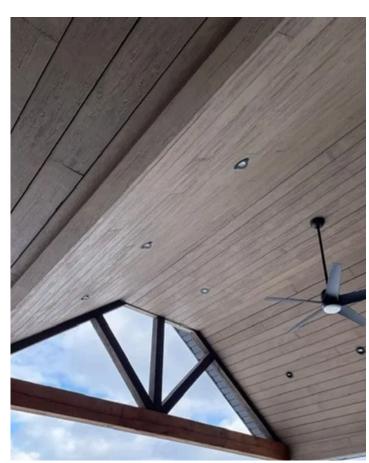















LACUNO ART 17-2501 Rutherford Rd Concord, ON L4k 2N6