Xiamen Charm Garden Industry and Trade Co., Ltd Glass Wind Guard Installation Instructions



HOT GLASS WILL CAUSE BURNS DO NOT TOUCH GLASS UNTIL COOLED NEVER ALLOW CHILDREN TO TOUCH GLASS

WARNING: Always perform assembly on a soft, non-abrasive surface. Two people are recommended for assembly and installation! HINT: For rectangular, square and round burners it is recommended to assemble guard upside down and flip over after it is fully assembled.






Square Glass Guards included:

4pcs Glass panels of equal length

Brackets with set screws: 8pcs Corner brackets; 4pcs top, 4pcs bottom and one screw driver

• Rectanglar Glass Guards included:

Glass panels: 2pcs Long, 2pcs short panels. Brackets with set screws: 8pcs Corner brackets; 4pcs top, 4pcs bottom and one screw driver

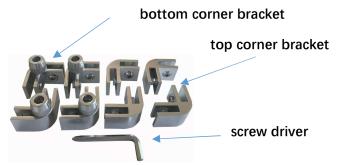



- 1) Loosen set-screws in TOP BRACKET and slide a short and long piece of glass into it. (for square glass kits, all panels will be equally sized.
- 2) Make sure the top edge of the glass is flush with the bracket.

Ensure small silicone pad is in place on tip of set screws, never secure with metal screw directly to the glass. Over-tightening may break glass! Tighten set-screws until snug.

- 3) Repeat steps 1 and 2 for remaining three corners
- 4) Loosen set-screws and place BOTTOM BRACKET onto glass. The steel standoff should position glass flush with bracket edge. Secure all screws, making sure to not over-tighten.

Secure remaining three bottom brackets using the same procedure.

5) Carefully, using two people, flip the assembly over. Gently set the glass guard onto fire pit.

Xiamen Charm Garden Industry and Trade Co., Ltd Glass Wind Guard Installation Instructions




WARNING: Always perform assembly on a soft, non-abrasive surface. Two people are recommended for assembly and installation! HINT: For rectangular, square and round burners it is recommended to assemble guard upside down and flip over after it is fully assembled.



Round Glass Guards included:

3pcs round panels of equal length, Rounded brackets with 3pcs upper connector and 3pcs lower connector with feet and one screw driver

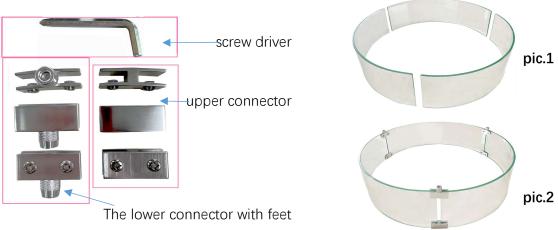

- 1) Put three pcs glass panels on the clean table or ground and make a circle like pic.1
- 2) Loosen set-screws in both top and bottom connectors and slide two curved glass panels into it.

Conversely, use the "the lower connector with feet" to the top side of glass pannel, and use the "upper connector" to the bottom side of glass pannel.

Don't tighten set screw before all six connectors have glasses slide inside in the right position, adjust the glasses and connectors and ensure all snug like **pic.2**

Ensure small silicone pad is in place on tip of set screws. Never secure screws with only the metal screw directly against the glass. Overtightening may break glass!

- **3)** Once all three glass panels and brackets are in place, finish securely tightening all 6 of the set screws holding the glass together.
- **4)** Carefully, turn over the assembled glass guard, ensure "the lower connector with feet" at the bottom like **pic.3**, and place it on fire pit centered around burner.