



PRODUCT INSTRUCTIONS


PRODUCT:	C7 Titanium Exhaust Tip
PART NUMBERS COVERED:	HP1041.BLU, HP1041.GLD
LAST UPDATE:	4/28/2021

1. Use clean gloves when handling to prevent fingerprints on the anodize.
2. Remove Corsa exhaust tip
3. Due to the straight edge design of the tip, vertical misalignment of mufflers becomes more apparent. Use this time to check the alignment of the mufflers and adjust as necessary. Use a level across muffler outlets to ensure they are even.
4. Bend exhaust shroud attachment tabs up



5. Slip on titanium exhaust tip until the muffler outlet pipe is about $\frac{1}{4}$ " from the rear end of the round titanium pipe.

6. If the horizontal spacing of the muffler outlets is incorrect, loosen the Corsa muffler cross brace nuts shown in the picture above, slip on the tip and re-tighten.
7. Check alignment of the tip from the top-down view.
8. Tighten clamping bolts
9. Check tip security by pulling rearward.
10. Use safety wire pliers and .032" safety wire to secure bolts and nuts

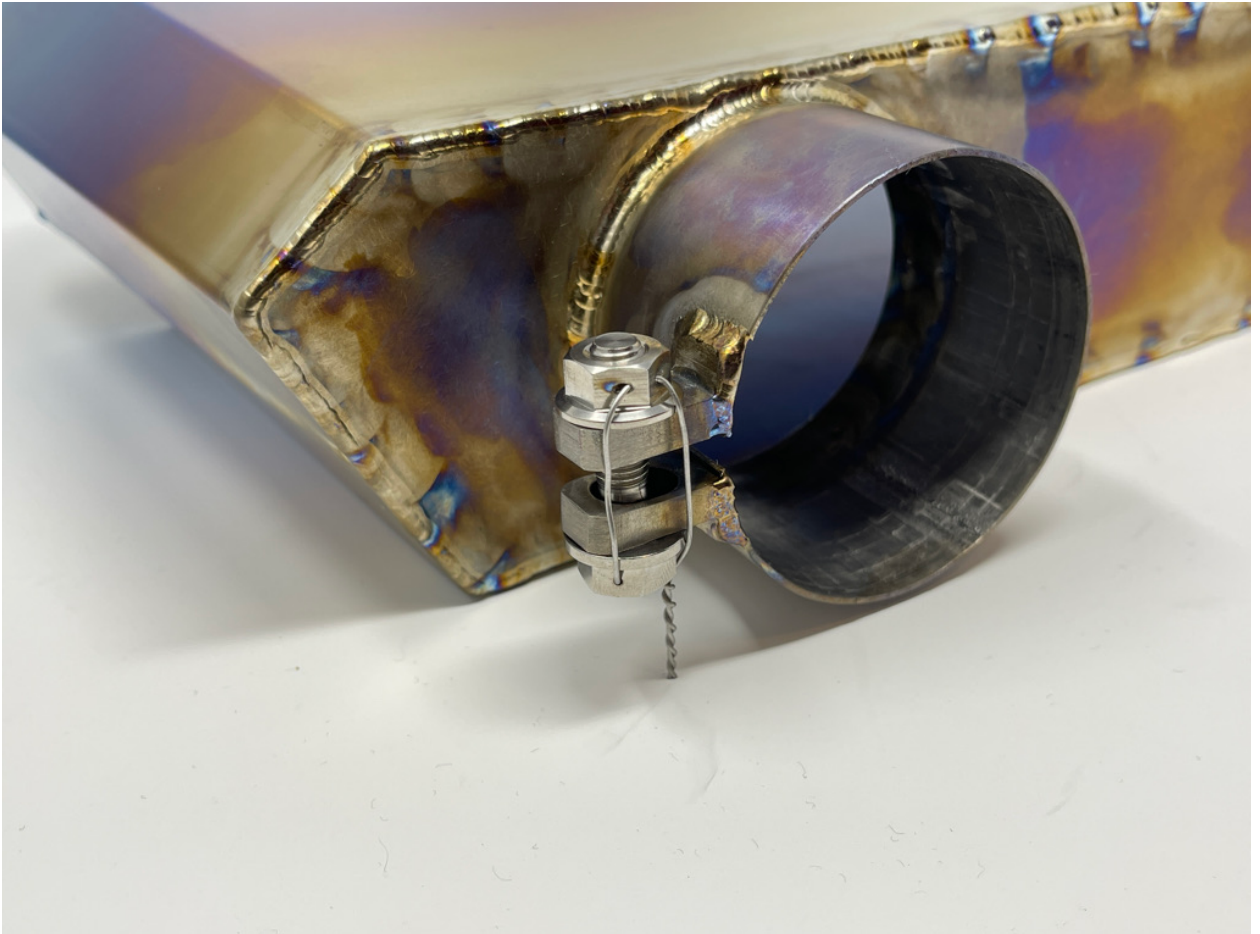

11. For added tip security you can safety wire through one of the mounting tabs to the Corsa muffler cross brace (optional)
12. Check clamp tightness after the first heat cycle

CLEANING INSTRUCTIONS

1. Only clean when exhaust is cool
2. Use Windex or another ammonia-based glass cleaner on anodizing
3. Wipe with on Windex with a microfiber cloth
4. Wipe off excess with dry microfiber
5. Air dry