


Solder eyes to wires as shown. Cover connections with included heatshrink tubing.




Splice wires here to avoid jamming trigger.

Solder solenoid wires to the included solenoid wiring harness. Cover connections with included heatshrink tubing.

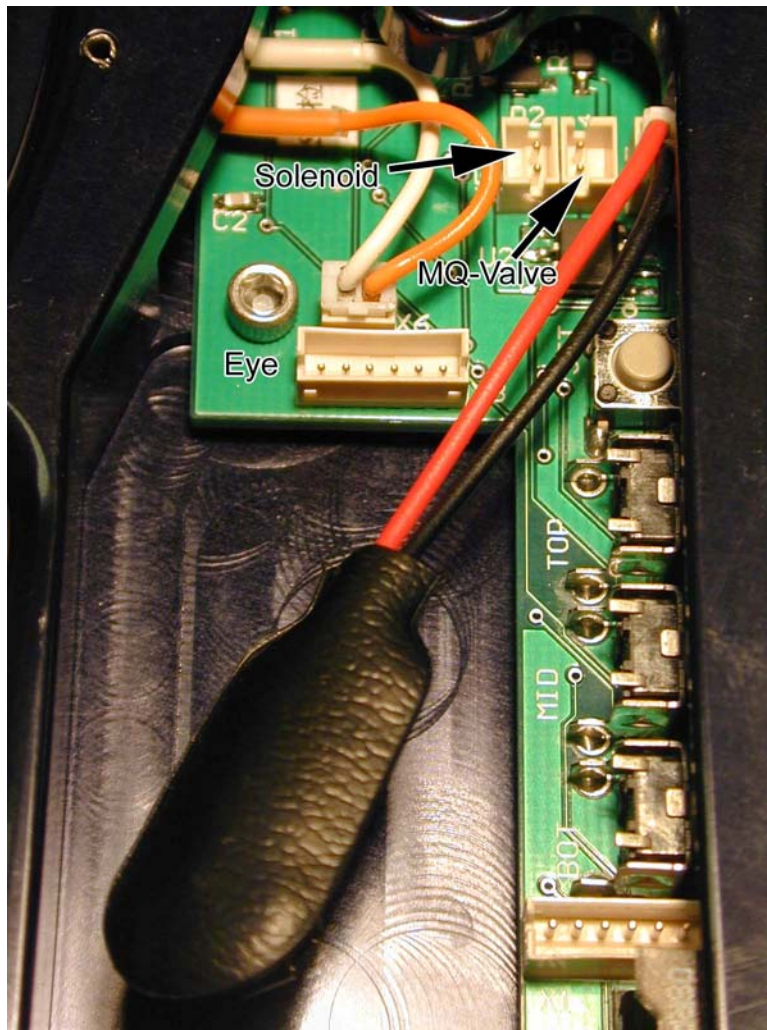

Plug in wiring harness as shown.

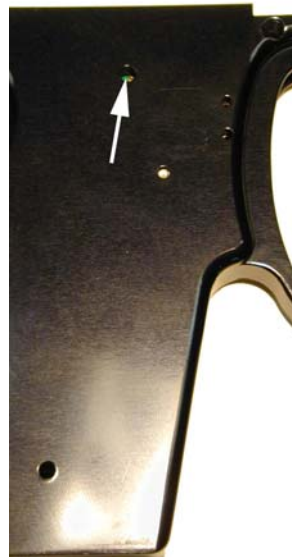

Do not use a long screw here. It can hit the board. If the included short screw does not engage the threads, use the longer screw.