


**HG**

<b>HG-38</b>	2
<b>HG-I-38</b>	7
<b>HG-I-90-B-38</b>	14
<b>HG-I-90-HP-38</b>	21
<b>HG-I-90-HP-B-38</b>	25
<b>HG-I-90-38</b>	40
<b>HG-I-90-38</b>	2
<b>HG-I-HP-38</b>	2

[illegible]

# ARIZONA SHOWER DOOR

HG-38

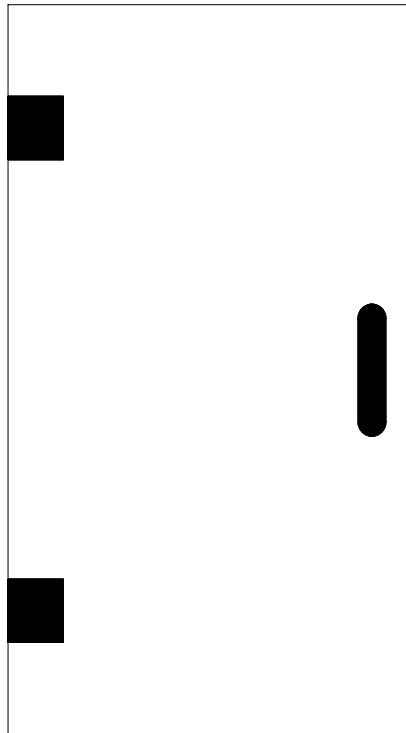


Please read instructions completely before proceeding to get an overview of the installation.

1) **Mounting hinges:** The glass and gaskets should be free of grime, grease, oils or anything else that would prevent the hinge and gasket from making good contact with glass. Use glass cleaner to remove these things. Remove the cover plates and screws from the hinges. See the template sheet in the hinge box for the proper gasket to be used with your selected glass thickness. Apply the proper thickness gaskets to both sides of the door around the hinge cutouts. Apply light pressure so they will stay in place. Now put the main body of the hinge in the glass cutout. Align the hinge in the cutout being sure that is centered up and down, and that there is 1/16"-3/32" gap between the back plate and glass edge. After everything is aligned, secure the inside cover plates with the supplied machine screws. **Note: Always tighten machine screws by hand!** Use a #3 Phillips head screwdriver for this. When tightening the screws alternate from one screw to the other so the pressure is evenly applied to the inside cover plate. Repeat the above process on the additional hinge(s).

2) After you mount the hinges on the door, mark each end of the curb with a mark that will represent the outside surface of the door glass. The glass is usually set in the center of the curb.

3) **Setting the door:** The door can now be set in the opening to mark the hinge placement. ASD heavy doors are configured to have a P990WS polycarbonate sweep installed on the bottom. The gap needed for this sweep is 7/16". Therefore, you will need 2)7/16" shims or setting blocks (wood and hard plastic/rubber are ok. No metal) to set the door on to ensure proper clearance for the sweep. Set the door on your blocks/shims and position it with your marks made on the curb. Use a level to set your door plumb with hinges against the wall. Now mark the outside screw holes of the hinge backplates using a pencil or ink marker. You will need an assistant to mark the inside holes or, if a 1 man install you will need an extra backplate of the hinge you are using to use as a template to mark the 2 inside holes after you have removed the door. (See drawing below).

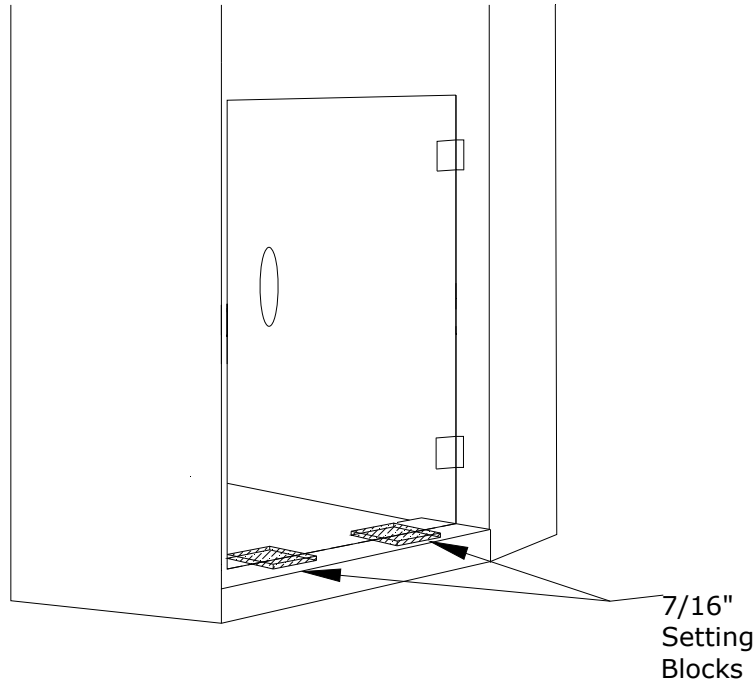

4) Drill holes in wall using a 3/16" masonry drill bit. After drilling all holes, follow with a 1/4" masonry bit. Insert green 1/4" wall anchors. Cut anchors flush to tile surface if they do not fully insert. (Note: there should **always** be wood backing in the wall to secure screws to).


5) Set the door back into the opening onto the blocks/shims and line up door to marks on curb. Make sure hinges are against wall. The holes you drilled should match up with back plate holes. Use a drill with a 6" #2 Phillips screw bit to secure door to wall with screws provided with the hinges. (This is important as using a shorter screw bit will result in the chuck of the drill scratching the hinge). Remove setting blocks to check swing of door and make adjustments as necessary.

6) **Installing handle:** Take the two stud head mounting screws and sleeve one clear washer on each screw. Next, insert the clear grommets into the holes in the door. From the outside of the door, push the thread of the screws through the grommets in the holes in the glass. On the inside of the door, sleeve a clear washer onto the screws.

2) Take the pull that has the threaded hole in the end and begin to thread the top screw into it and then the bottom screw. Tighten the stud head screws down with a screwdriver (not a drill). This pull will be on the inside of the door.

3) Place the remaining pull, with the large holes and set screw, onto the stud heads of the screws. Tighten the set screws with Allen wrench provided 7) Refer to Seal Installation page for seal instructions. (See drawing below)

## Back To Back Pull

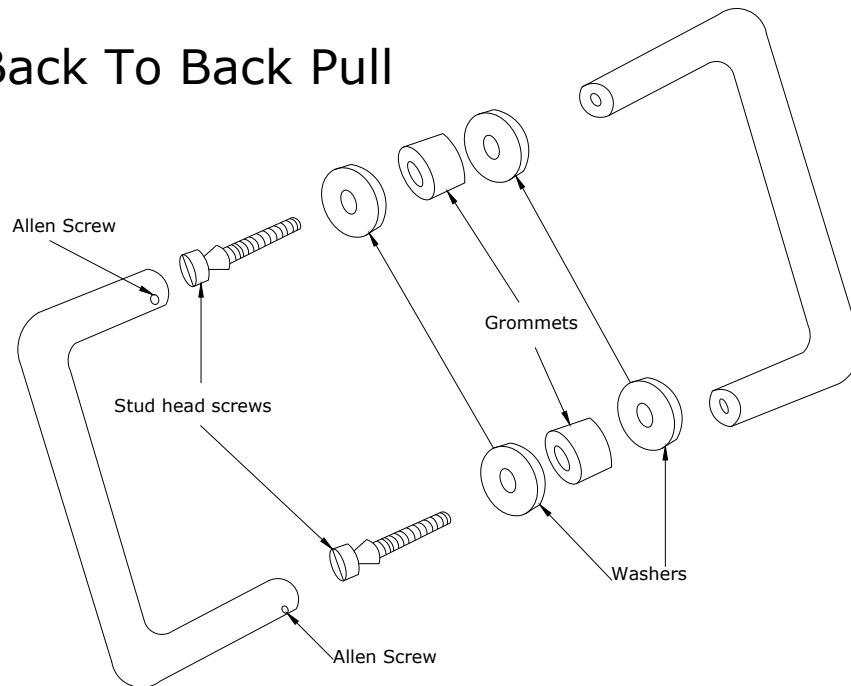


**\*\*When Applicable\*\***  
**(in some applications there may not be room for seals and or sweeps)**

### **Directions for SDTDF Double Fin, SDTJ-SDTB Bulb Seal, SDDTNL "L" Seal**

When installing seals the glass edges should be clean and free from any dirt or hand oil etc... as these will prohibit adhesion. Glass cleaner will do.

Vertical seals will be applied to the edge of the glass using a VHB (very high bond) tape.

Apply VHB tape to edge of glass by adhering it top to bottom, gradually unrolling the tape as you slowly move from top to bottom. Apply the full length of glass. Cut flush to the bottom of door glass.

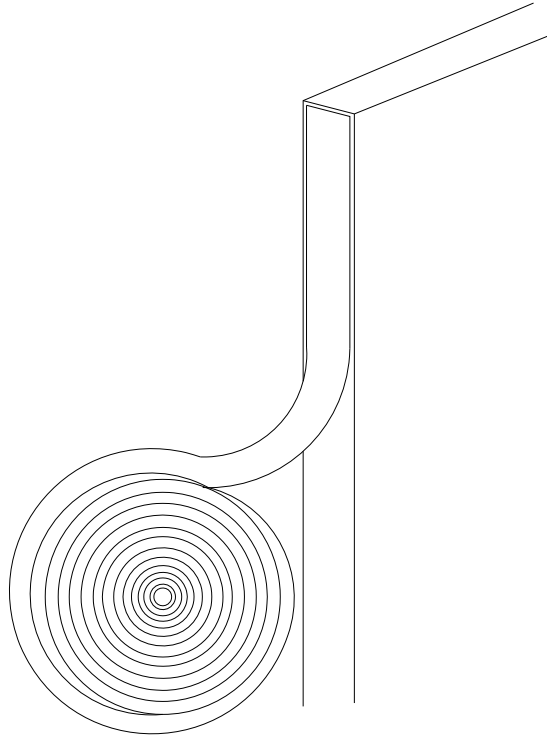

Then remove protective layer from other side and attach seal to the tape surface. Press on by hand. Cut flush to the bottom of the door using pliers-type cutter, scissors, or razor knife. The VHB tape will gain strength and achieve full bond within 72 hours.

Adjust door accordingly to achieve optimum seal.

#### **Directions for P990WS Sweep**


Cut seal to appropriate size using miter saw or hacksaw.

Place over bottom edge of door. Then, using a plastic covered mallet, gently pound on bottom sweep until it is fully on.

Silicone ends and horizontal seams from glass to plastic.

# ARIZONA SHOWER DOOR

HG-I-38

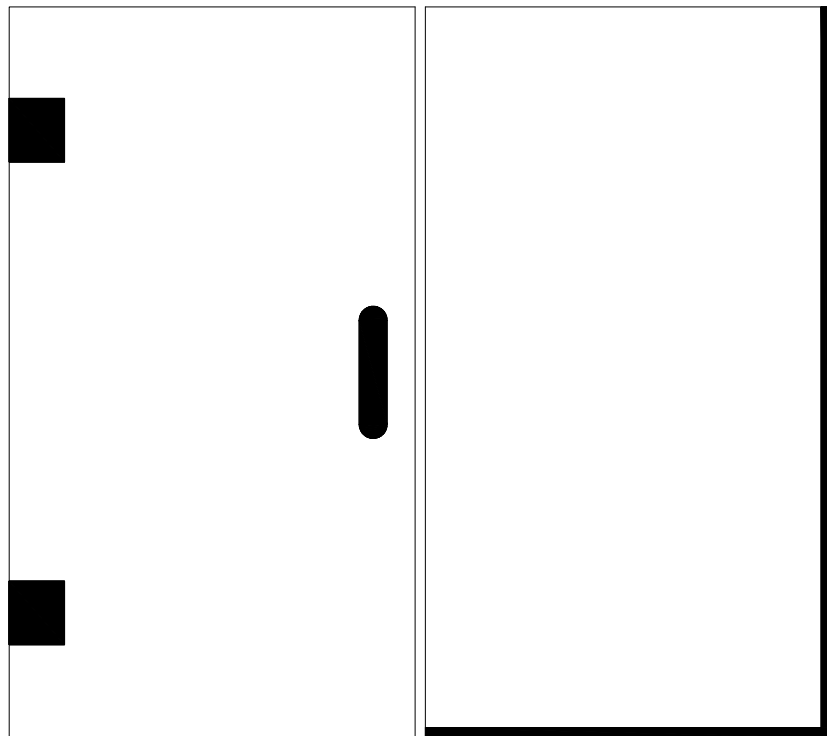


Please read instructions completely before proceeding to get an overview of the installation.

**Brief Outline of Installation Procedures**

- A) Prior measure of opening with centerline dimensions. For necessary accuracy a 2', 4', and 6' level should be used on appropriate surfaces as heavy frameless units are designed to be installed level and plumb.
- B) Preparing u-channel for installation i.e. cutting, drilling. (Fig.A)

## Plumb and Centerline Example

Fig.A

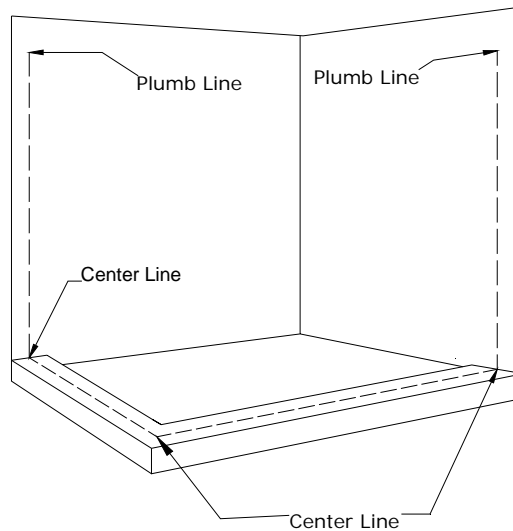

- C) Installing channel.
- D) Setting panels.
- E) Setting door.
- F) Mount door pull.
- G) Clean glass.
- H) Install seals and adjust door if needed.
- I) Apply silicone.


**Cutting U-channel**

Use the following formulas to get cut sizes.  
(Fig.B)



## Door Inline Channel Application

Fig.B

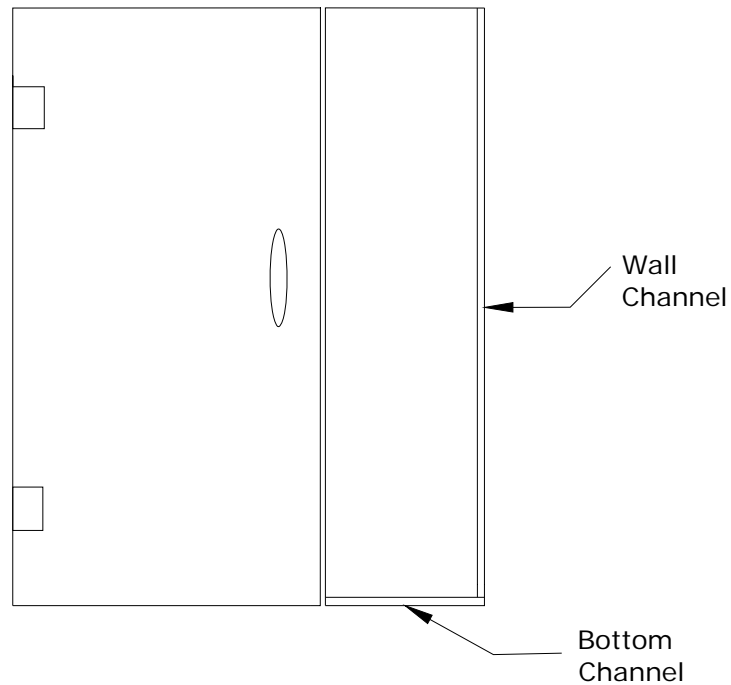


Wall channel size: panel height –  $7/16"$  (will sit on top of bottom channel)  
Bottom channel size: bottom panel width +  $5/16"$

### **Installing Base Channel**

1) Drill 2)  $3/16"$  weep holes on the inside leg of bottom channel as close to the bottom of the channel as possible, 2" to 6" from each end. (Fig.C)

### Weep Hole Location

Fig.C

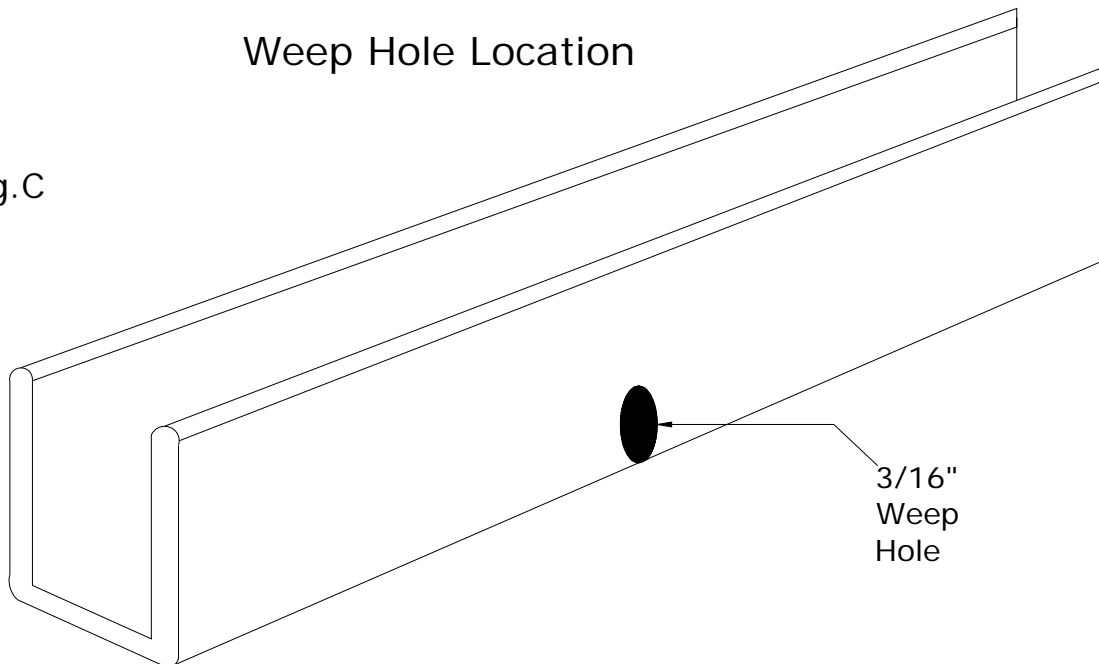


2) Drill at least 2)  $3/16"$  holes in the bottom of base channel to secure to surface. If panel is large drill holes approximately every 16" apart.

3) Using a  $3/16"$  masonry drill bit, drill the holes into mounting surface. Apply small amount of silicone into holes. Insert  $3/16"$  expandable plug anchors then, secure the

u-channel by using #8x1" flat head screws. Base channel will go full length across bottom of glass. Side channel will sit on top of base channel.

### **Installing Wall Channel**

- 1) Drill 3-4) 3/16" holes approximately 16" apart in bottom of wall channel.
- 2) Set wall channel on top of base channel then use a level to set plumb. Then mark the holes on the wall. (Fig.D)

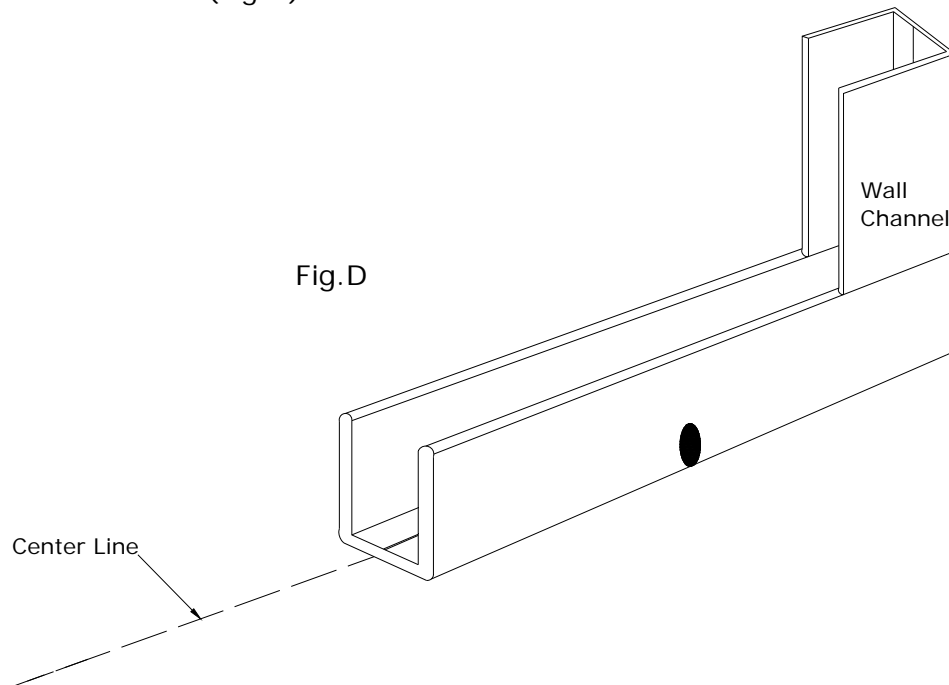

- 3) Set channel aside then drill holes with a 3/16" masonry drill bit. Insert 3/16" expandable plug anchors then, secure the u-channel by using #8x1" flathead screws.
- 4) Apply a blob of silicone in the inside corner of u-channel for sealing.

### **Setting Glass**

After u-channel is set, place 2) 1/4" setting blocks in channel. Place glass in channel and use a level to check alignment. Glass panel should be plumb and level and should be flush with open end of the u-channel.


### **Setting Door**

1) Mounting hinges: The glass and gaskets should be free of grime, grease, oils or anything else that would prevent the hinge and gasket from making good contact with glass. Use glass cleaner to remove these things. Remove the cover plates and screws from the hinges. See the template sheet in the hinge box for the proper gasket to be used with your selected glass thickness. Apply the proper thickness gaskets to both sides of the door around the hinge cutouts. Apply light pressure so they will stay in place. Now put the main body of the hinge in the glass cutout. Align the hinge in the cutout being sure that is centered up and down, and that there is 1/16"-3/32" gap between the back plate and glass edge. After everything is aligned, secure the inside cover plate with the supplied machine screws. **Note: Always tighten machine screws by hand!** Use a #3 Phillips head screwdriver for this.

When tightening the screws alternate from one screw to the other so the pressure is evenly applied to the inside cover plate. Repeat the above process on the additional hinge(s).

2) You can now set your door in the opening to mark hinge placement. ASD heavy doors are configured to have a P990WS polycarbonate sweep installed on the bottom. The gap needed for this sweep is 7/16". Therefore, you will need 2) 7/16" shims or setting blocks (wood and hard plastic/rubber are ok. No metal) to set the door on to ensure proper clearance for the sweep. Set the door on your blocks/shims and position it on the curb the same distance in from outside edge of curb as the inline panel. (Fig.E)

## Setting Blocks For Door Example

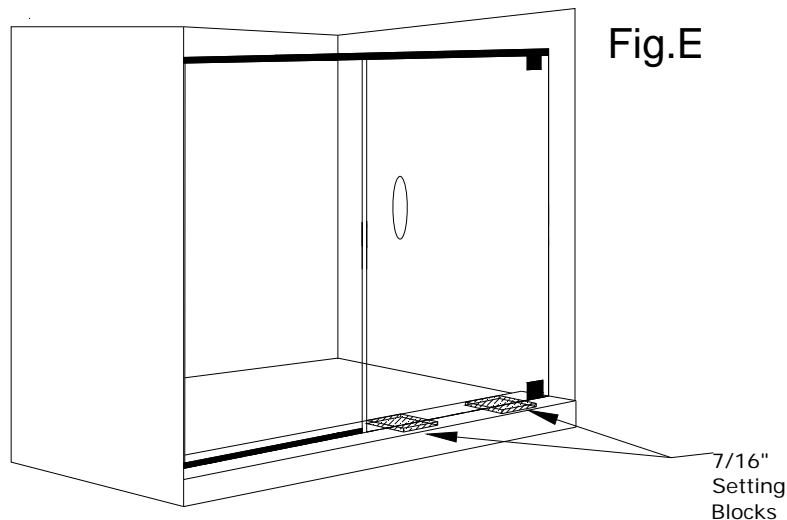

3) Align the door with the inline panel. This should be plumb. The tops of both panels should match. Then, mark the outside screw holes of the hinge back plates. You will need an assistant to mark the inside holes or, if one man is installing, you will need an extra back plate of the hinge you are using to use as a template to mark the 2 inside holes after you have removed the door.


4) Drill holes in wall using a 3/16" masonry drill bit. After drilling all holes, follow with a 1/4" masonry bit. Insert green 1/4" wall anchors. Cut anchors flush to tile surface if they do not fully insert. (Note: there should **always** be wood backing in the wall to secure screws to).

5) Set door back onto setting blocks in the opening and line up door to inline panel. The holes you drilled should match up with back plate holes. With hinges against the wall, use a drill with a 6" #2 Phillips screw bit to secure door to wall. Remove setting blocks to check swing of door and make adjustments as necessary.

### **Door Pull**

1) Take the two stud head mounting screws and sleeve one clear washer on each screw. Next, insert the clear grommets into the holes in the door. From the outside of the door, push the thread of the screws through the grommets in the holes in the glass. On the inside of the door, sleeve a clear washer onto the screws.

- 2) Take the pull that has the threaded hole in the end and begin to thread the top screw into it and then the bottom screw. Tighten the stud head screws down with a screwdriver (not a drill). This pull will be on the inside of the door.
- 3) Place the remaining pull, with the large holes and set screw, onto the stud heads of the screws. Tighten the set screws with Allen wrench provided.

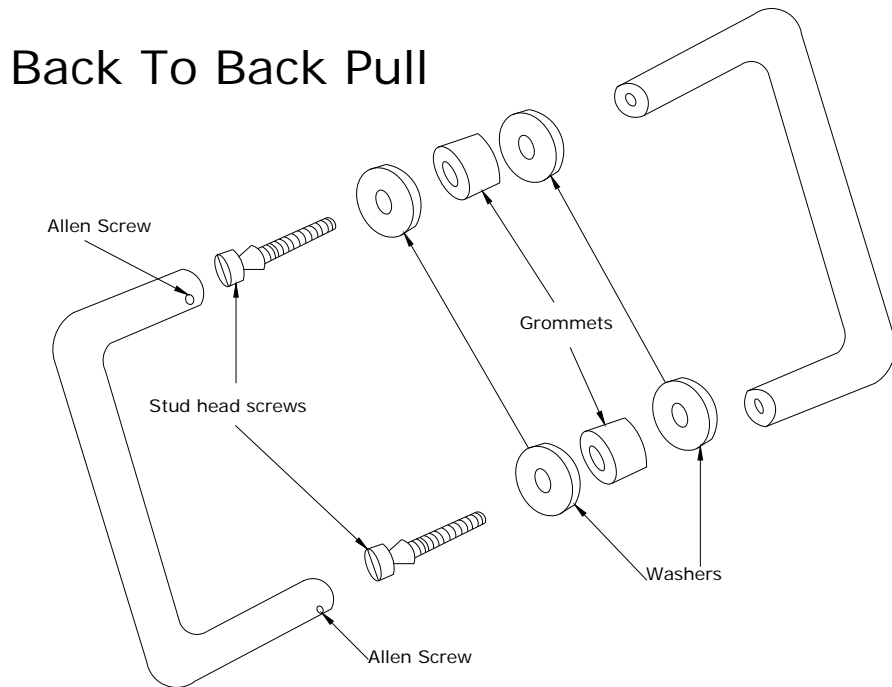

**\*\*When Applicable\*\***  
**(in some applications there may not be room for seals and or sweeps)**


---

#### **Directions for SDTDF Double Fin, SDTJ-SDTB Bulb Seal, SDDTNL "L" Seal**

When installing seals the glass edges should be clean and free from any dirt or hand oil etc... as these will prohibit adhesion. Glass cleaner will do.

Vertical seals will be applied to the edge of the glass using a VHB (very high bond) tape.

Apply VHB tape to edge of glass by adhering it top to bottom, gradually unrolling the tape as you slowly move from top to bottom. Apply the full length of glass. Cut flush to the bottom of door glass.

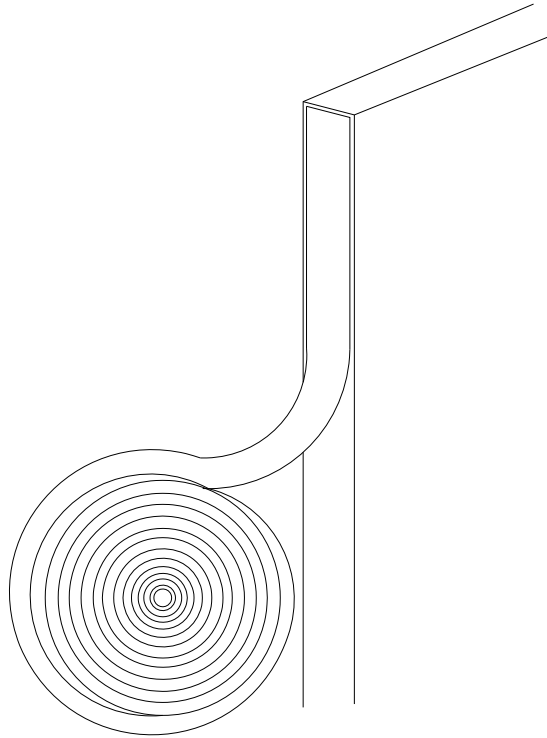

Then remove protective layer from other side and attach seal to the tape surface. Press on by hand. Cut flush to the bottom of the door using pliers-type cutter, scissors, or razor knife. The VHB tape will gain strength and achieve full bond within 72 hours.

Adjust door accordingly to achieve optimum seal.

### **Directions for P990WS**

Cut seal to appropriate size using miter saw or hacksaw.

Place over bottom edge of door. Then, using a plastic covered mallet, gently pound on bottom sweep until it is fully on.


Silicone ends and horizontal seams from glass to plastic.

### **Silicone Application**

Once you confirm alignment of glass and everything is set, you need to run a cap bead of clear 100% silicone around perimeter of u-channel edge where it meets the glass, both inside and out. Also run a small bead where u-channel meets installation surface, both inside and out.

# ARIZONA | SHOWER DOOR

HG-I-90-B-38

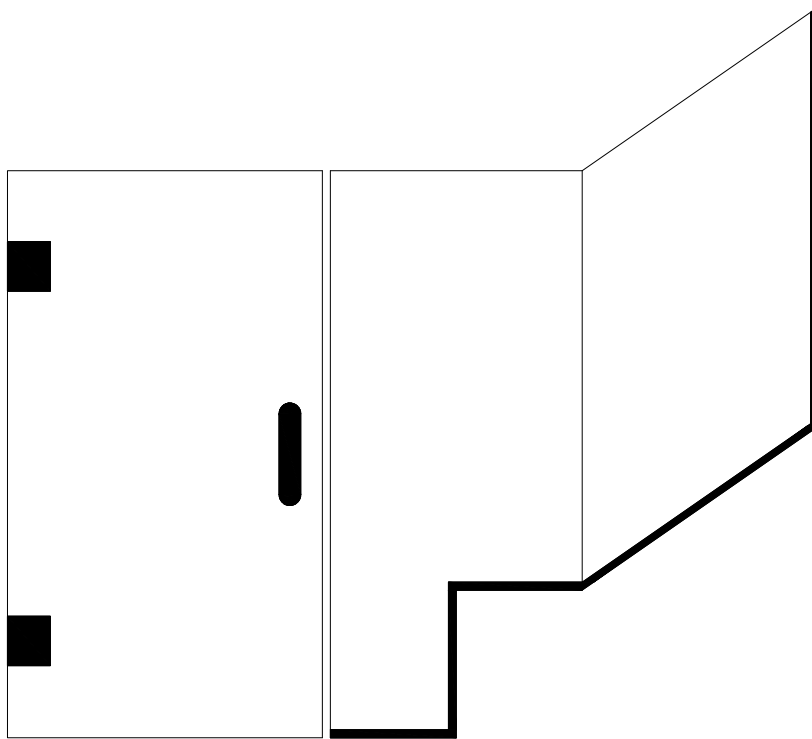


Please read instructions completely before proceeding to get an overview of the installation.

**Brief Outline of Installation Procedures**

- A) Prior measure of opening with centerline dimensions. For necessary accuracy a 2', 4', and 6' level should be used on appropriate surfaces as heavy frameless units are designed to be installed level and plumb.(Fig.A)

## Plumb and Centerline Example

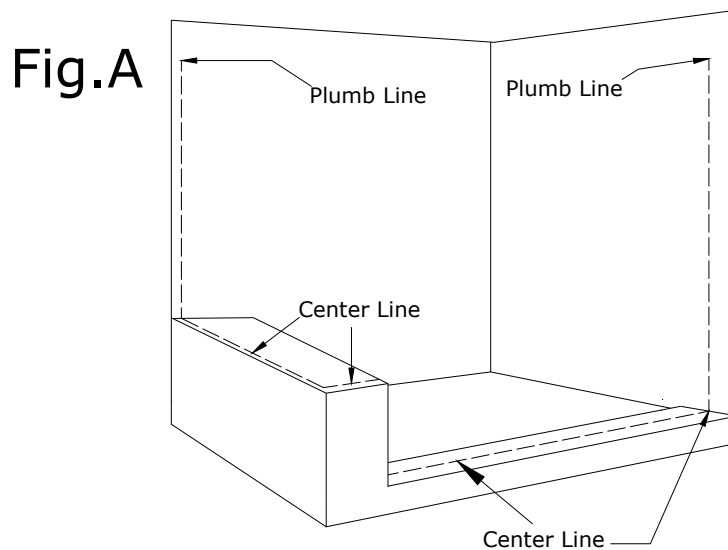


- B) Preparing u-channel for installation i.e. cutting, drilling.  
C) Installing channel.  
D) Setting panels.  
E) Setting door.  
F) Mount door pull.  
G) Clean glass.  
H) Install seals and adjust door if needed.  
I) Apply silicone.

**Cutting U-channel**

Using the centerline dimensions used to figure glass sizes you can figure u-channel cut sizes.

## 90° Channel Applications

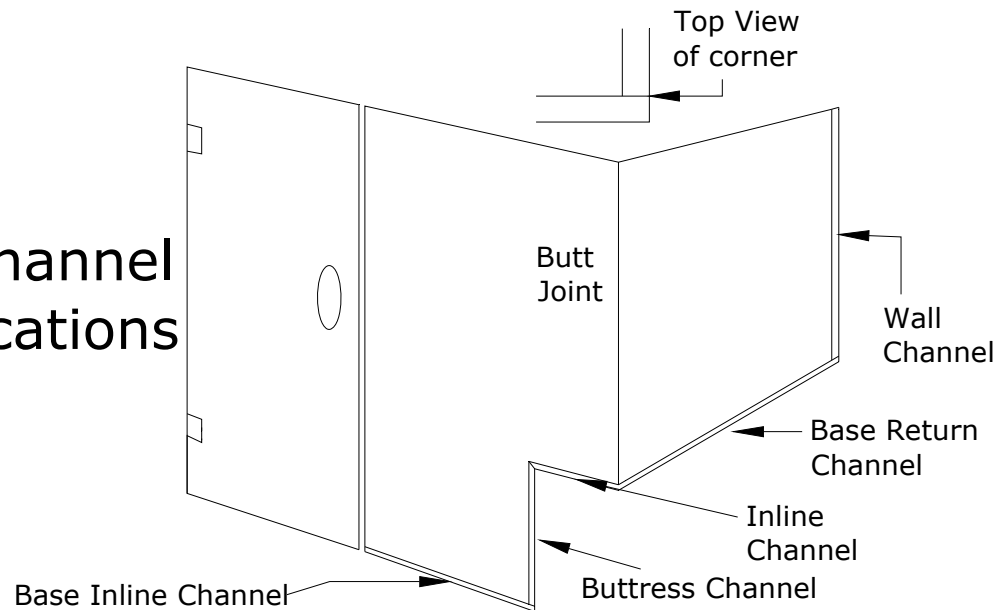

Use the following formulas to get cut sizes.

(Fig.B)

Base Inline Channel: Base of inline glass panel +  $\frac{5}{16}$ " (sq end to sq end)


Buttress channel: Actual buttress height -  $\frac{3}{4}$ " (sq end to short end of miter)

Inline channel: centerline dimension +  $\frac{1}{4}$ " (outside end of miter to short end of miter)

Return channel: centerline +  $\frac{1}{4}$ " (sq end to outside end of miter)

Wall channel: actual height of glass -  $\frac{7}{16}$ " (sq end to sq end)



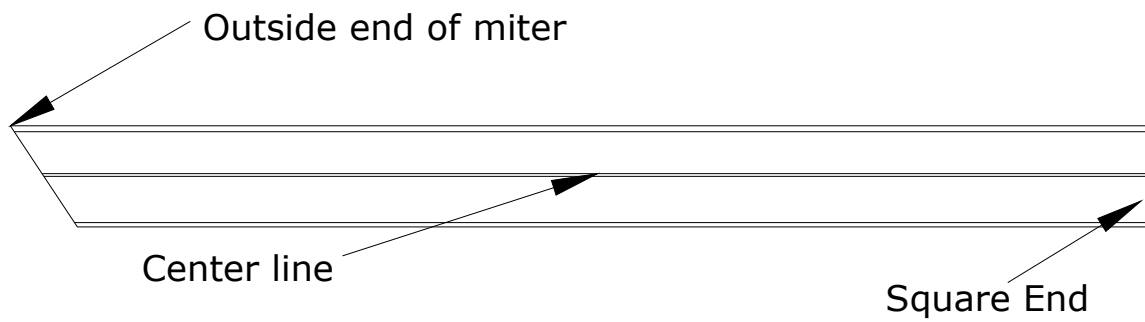


Top view of U Channel

It will be helpful to preserve the marks from the time of the measure to the day of the install so the installer has reference marks.


#### **Installation of Channel**

1) Drill all **horizontal** channels for weep holes (Fig.C), as close to the bottom as possible, on the inside wall of the channel with a 3/16" drill bit approximately 6 inches in from each end. Two holes are sufficient. If channel is under 12" only one hole is necessary.

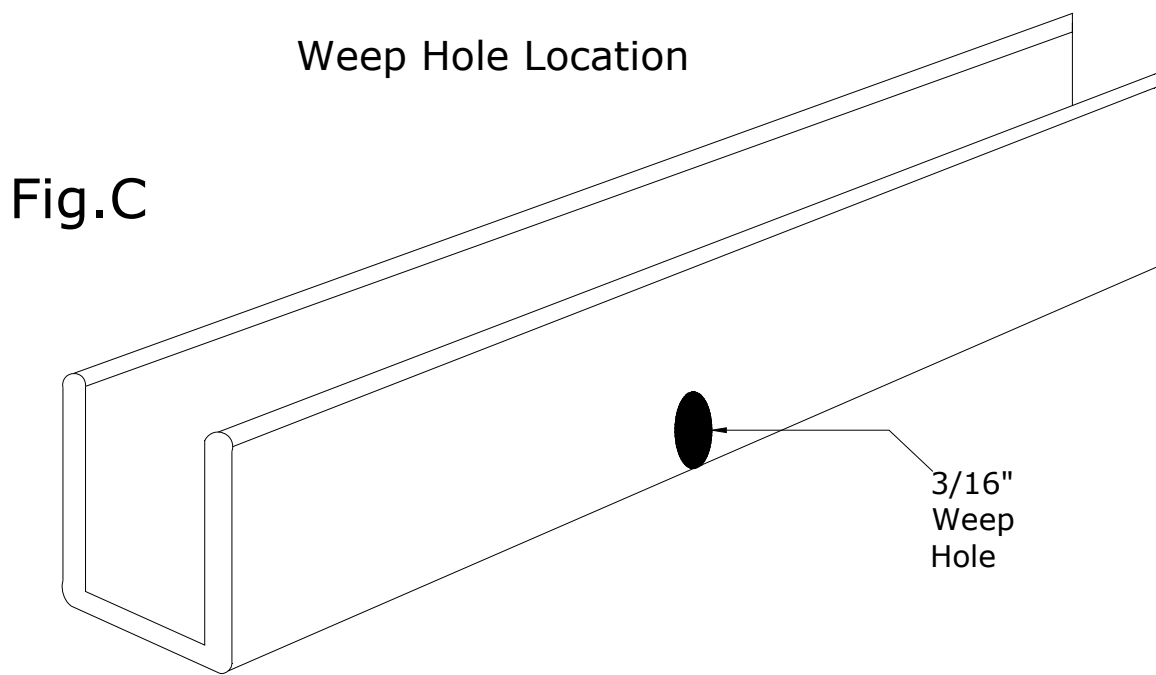

2) Drill bottoms of all channels with 3/16" holes approximately 12" apart for mounting to surface.

3) Align all channels based on the centerline marks that were made at the time of measure. Wall channel will set on top of base channel (Fig.D).

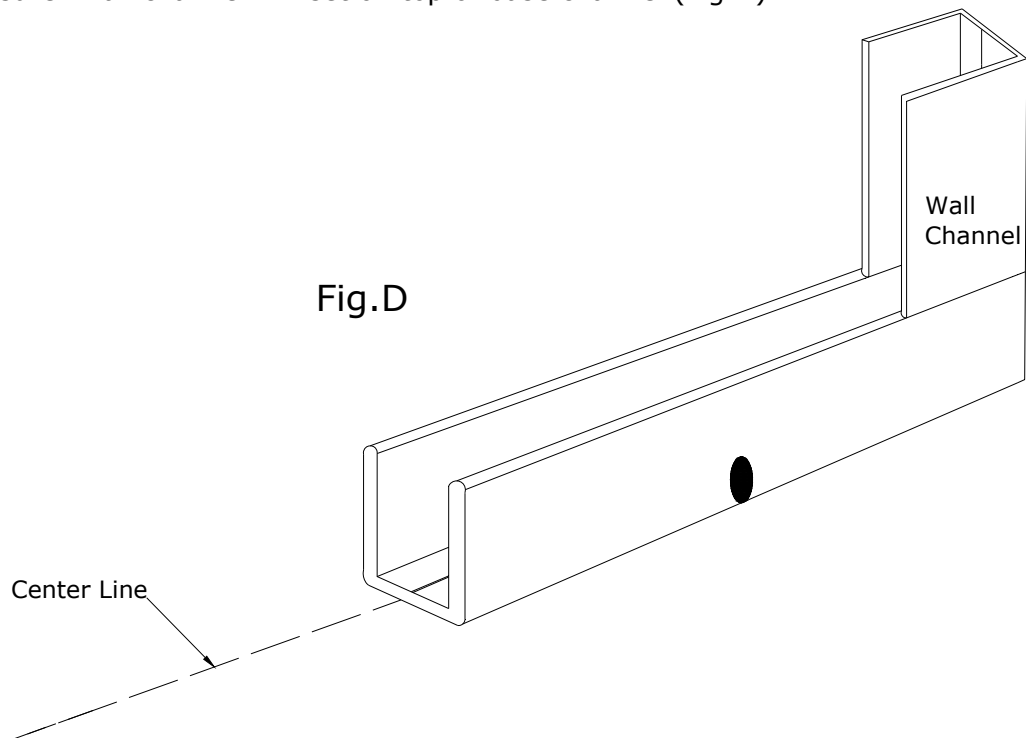

Mark the holes to be drilled (have an assistant hold the vertical channels plumb with a level while you mark the holes, or use blue tape to hold them plumb while you mark the holes).


4) After holes are marked, drill holes with 3/16" masonry drill bit. Apply silicone in holes on the horizontal surface. Insert 3/16" plug anchors in all holes.

5) Secure channel with #8x1 flathead screws and a drill. Remember that vertical channels will sit on horizontal channels where they meet. Apply blob of silicone over screw heads in horizontal channels and in all corners and seams.

### **Setting Glass Panels**

1) Place 1/4" setting blocks in channels, one on each end where glass will sit.

2) Return Panel: Using a glaziers suction cup, set the 90\* return panel over the return channel and into the wall channel then down into return channel and down onto setting blocks being very careful not to set glass on the metal (Fig.E).

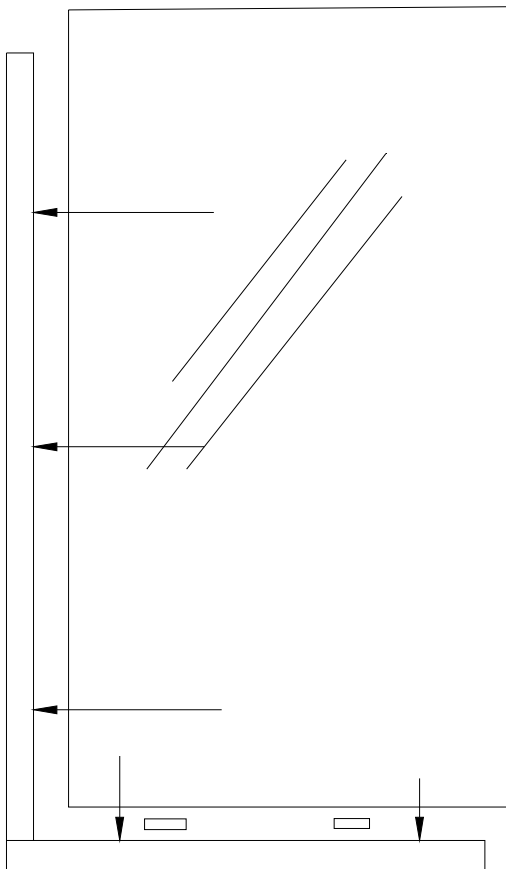

**Fig.E**

Set panel in wall channel first,  
then down into bottom channel

Use a level to check plumb and level of panel. If outages were accurately accounted for in the measure, **the panel should be plumb and level**. Clean glass surfaces and exposed edges. Move panel all the way into wall channel to give you room to set

inline panel. You will need to move the return panel back over to meet the backside of the inline panel (to create the butt joint) after you install the inline panel. Use blue tape to wrap and hold the corner tight for in about three places to silicone later.


3) **Inline Panel:** Using a glaziers suction cup, set inline panel over channel and slowly drop down into the channel. Slide panel over into channel until edge of glass is flush with the open end of the u-channel down on the curb. The glass on top of the buttress should be over against the return channel and overlapping the return panel creating a 90° butt joint. Move the return panel back over to meet the backside of the inline panel (to create the butt joint) after you install the inline panel. Use blue tape to wrap and hold the corner tight for in about three places to silicone later.  
**The butt joint corner should be plumb.**

### **Setting Door**

1) **Mounting hinges:** The glass and gaskets should be free of grime, grease, oils or anything else that would prevent the hinge and gasket from making good contact with glass. Use glass cleaner to remove these things. Remove the cover plates and screws from the hinges. See the template sheet in the hinge box for the proper gasket to be used with your selected glass thickness. Apply the proper thickness gaskets to both sides of the door around the hinge cutouts. Apply light pressure so they will stay in place. Now put the main body of the hinge in the glass cutout. Align the hinge in the cutout being sure that is centered up and down, and that there is 1/16"-3/32" gap between the back plate and glass edge. After everything is aligned, secure the inside cover plate with the supplied machine screws. **Note: Always tighten machine screws by hand!** Use a #3 Phillips head screwdriver for this. When tightening the screws alternate from one screw to the other so the pressure is evenly applied to the inside cover plate. Repeat the above process on the additional hinge(s).

2) You can now set your door in the opening to mark hinge placement. ASD heavy doors are configured to have a P990WS polycarbonate sweep installed on the bottom. The gap needed for this sweep is 7/16". Therefore, you will need 2) 7/16" shims or setting blocks (wood and hard plastic/rubber are ok. No metal) to set the door on to ensure proper clearance for the sweep. Set the door on your blocks/shims and position it on the curb the same distance in from outside edge of curb as the inline panel. (Fig.F)

# Setting Blocks For Door Example

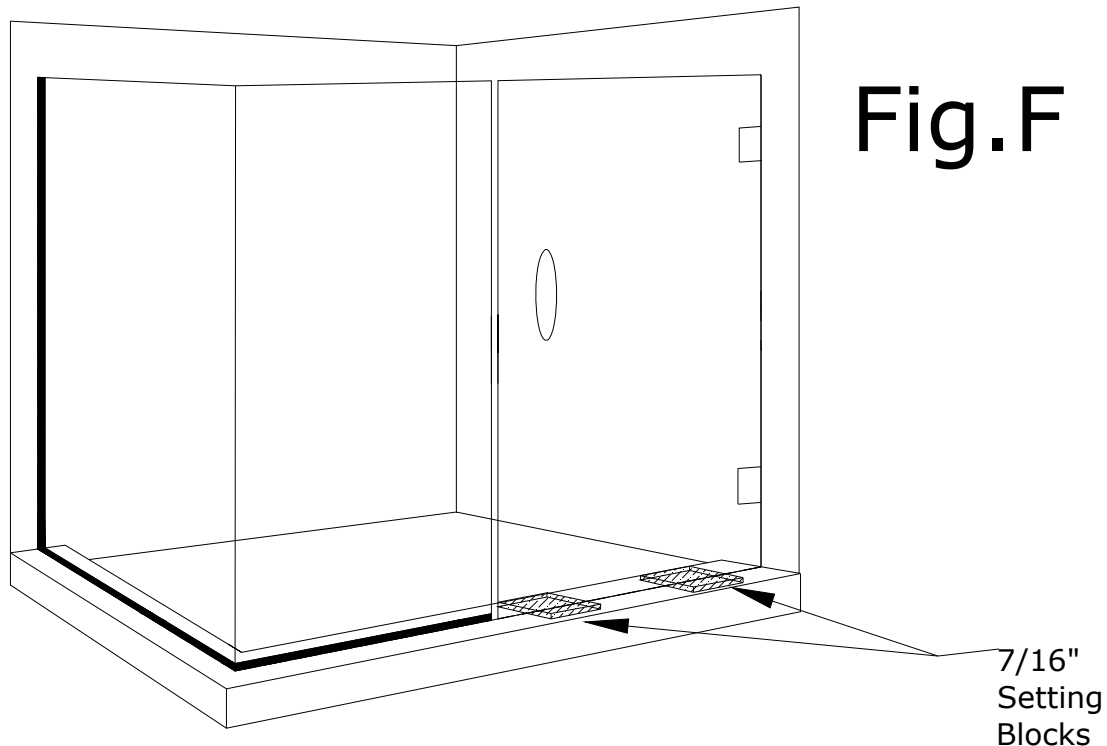

3) Align the door with the inline panel. This should be plumb. Then, mark the outside screw holes of the hinge back plates. You will need an assistant to mark the inside holes or, if one man is installing, you will need an extra back plate of the hinge you are using to use as a template to mark the 2 inside holes after you have removed the door.


4) Drill holes in wall using a 3/16" masonry drill bit. After drilling all holes, follow with a 1/4" masonry bit. Insert green 1/4" wall anchors. Cut anchors flush to tile surface if they do not fully insert. (Note: there should **always** be wood backing in the wall to secure screws to).

5) Set door back onto setting blocks in the opening and line up door to inline panel. The holes you drilled should match up with back plate holes. With hinges against the wall, use a drill with a 6" #2 Phillips screw bit to secure door to wall. After door is secured, remove setting blocks to check swing of door and make adjustments as necessary.

## **Door Pull**

- 1) Take the two stud head mounting screws and sleeve one clear washer on each screw. Next, insert the clear grommets into the holes in the door. From the outside of the door, push the thread of the screws through the grommets in the holes in the glass. On the inside of the door, sleeve a clear washer onto the screws.
- 2) Take the pull that has the threaded hole in the end and begin to thread the top screw into it and then the bottom screw. Tighten the stud head screws down with a screwdriver (not a drill). This pull will be on the inside of the door.
- 3) Place the remaining pull, with the large holes and set screw, onto the stud heads of the screws. Tighten the set screws with Allen wrench provided.

## **Back To Back Pull**

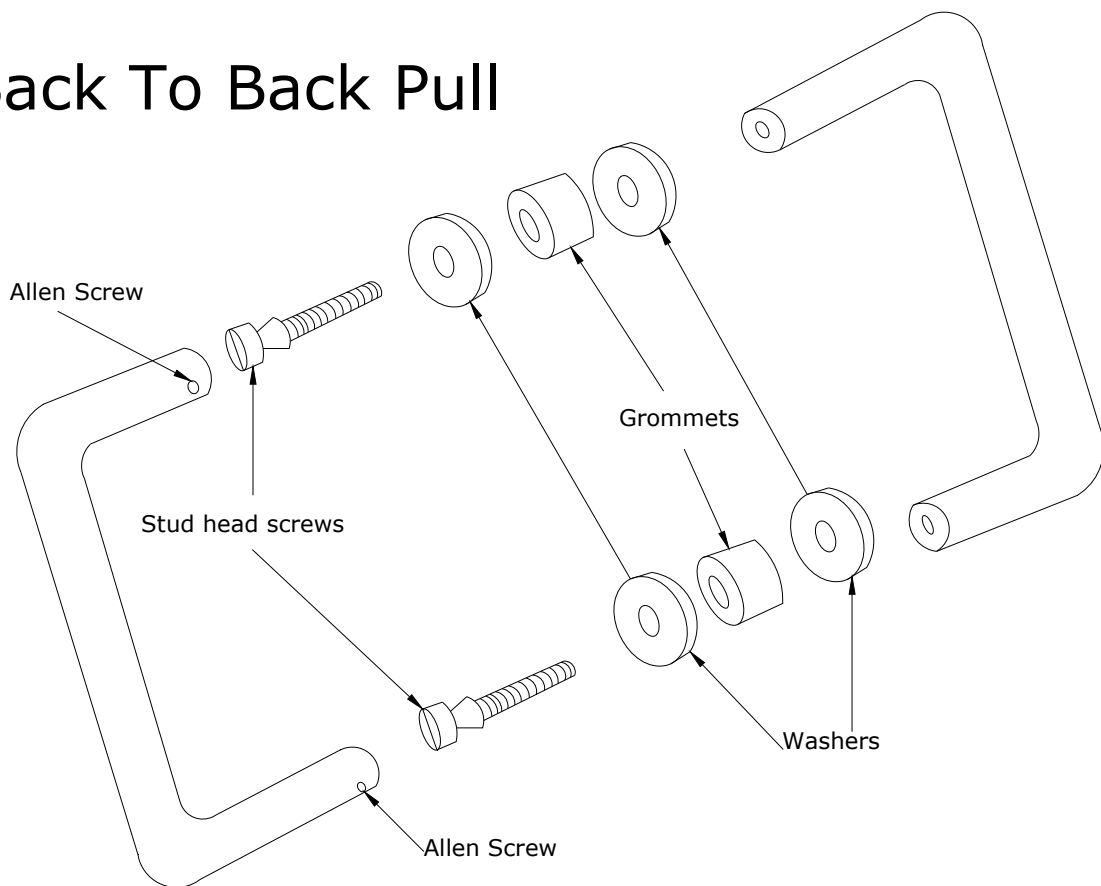

**\*\*When Applicable\*\***


(in some applications there may not be room for seals and or sweeps)

### **Directions for SDTDF Double Fin, SDTJ-SDTB Bulb Seal, SDDTNL "L" Seal**

When installing seals the glass edges should be clean and free from any dirt or hand oil etc... as these will prohibit adhesion. Glass cleaner will do.

Vertical seals will be applied to the edge of the glass using a VHB (very high bond) tape.

Apply VHB tape to edge of glass by adhering it top to bottom, gradually unrolling the tape as you slowly move from top to bottom. Apply the full length of glass. Cut flush to the bottom of door glass.

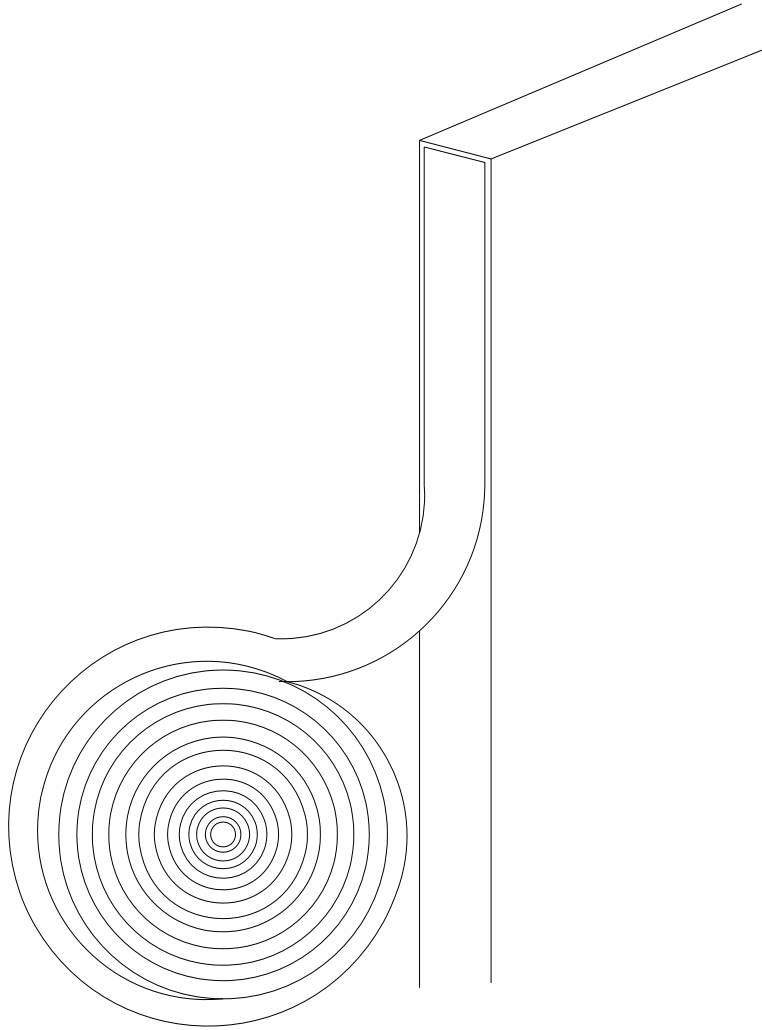

Then remove protective layer from other side and attach seal to the tape surface. Press on by hand. Cut flush to the bottom of the door using pliers-type cutter, scissors, or razor knife. The VHB tape will gain strength and achieve full bond within 72 hours.

Adjust door accordingly to achieve optimum seal.

#### **Directions for P990WS**

- 1) Measure and cut seal to appropriate size using miter saw or hacksaw.
- 2) Place over bottom edge of door. Then, using a plastic covered mallet, gently tap on bottom sweep until it is fully on. Make adjustments as needed.
- 3) Silicone ends and horizontal seams from glass to plastic.


### **Silicone Application**

Once you confirm alignment of glass and everything is set, you need to apply a cap bead of clear 100% silicone around perimeter of u-channel edge where it meets the glass, both inside and out. Apply a small bead where u-channel meets installation surface, both inside and out. Finally apply a small bead in the inside corner of the butt joint.



# ARIZONA | SHOWER DOOR

HG-I-90-HP-38

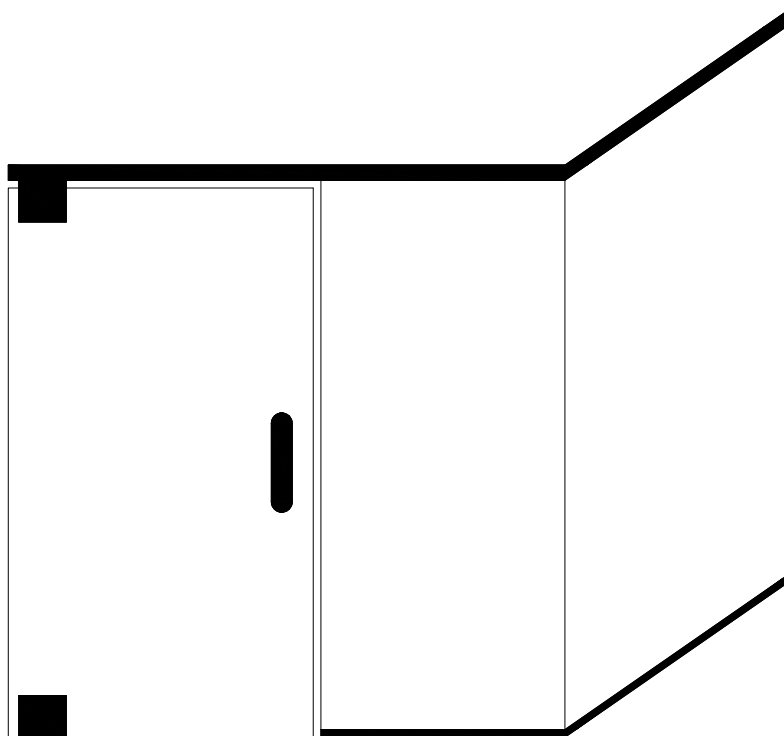


Please read instructions completely before proceeding to get an overview of the installation.

**Brief Outline of Installation Procedures**

- A) Prior measure of opening with centerline dimensions. For necessary accuracy a 2', 4', and 6' level should be used on appropriate surfaces as heavy frameless units are designed to be installed level and plumb.(Fig.A)


## Plumb and Centerline Example

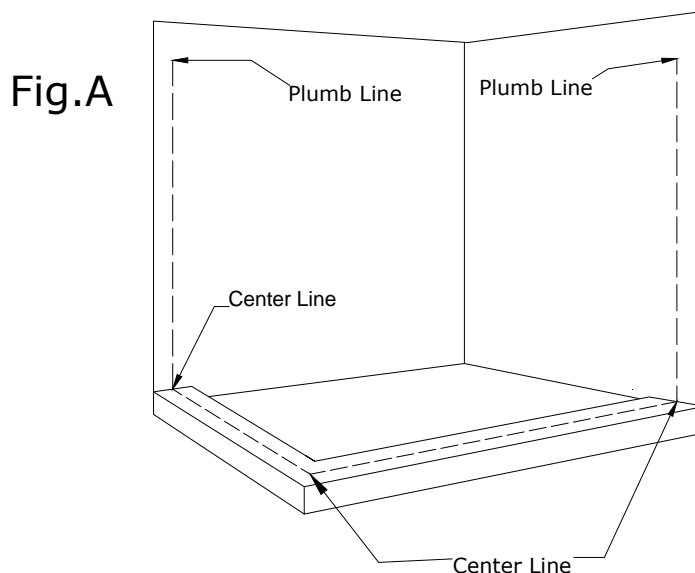


- B) Mark centerline plumb line for BWB2 Brass Wall Mount header clamp location  
C) Preparing u-channel for installation i.e. cutting, drilling  
D) Installing channel  
E) Setting panels  
F) Cutting, Assembling, and Installing Header  
G) Mounting Hinges  
H) Setting door  
I) Mount door pull  
J) Clean glass  
K) Install seals and adjust door if needed  
L) Apply silicone

**BWB2 plumb line**

On the return panel side wall where u-channel will be installed, take a level and make a pencil line up the wall corresponding to the centerline of the glass. Then place a mark on the center line, 1/4" down from the top of where the header will finish (the overall height of the unit) (Fig.B).

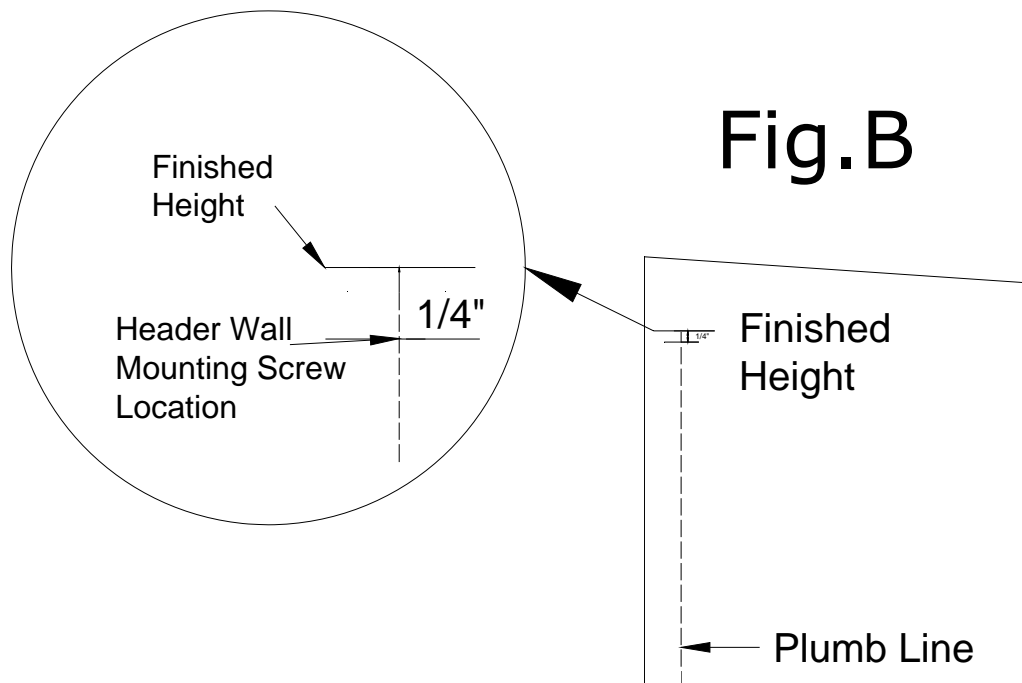

Follow the same procedure on the door side also. This will be the location of the wall mounting screws for the header (Fig.C).

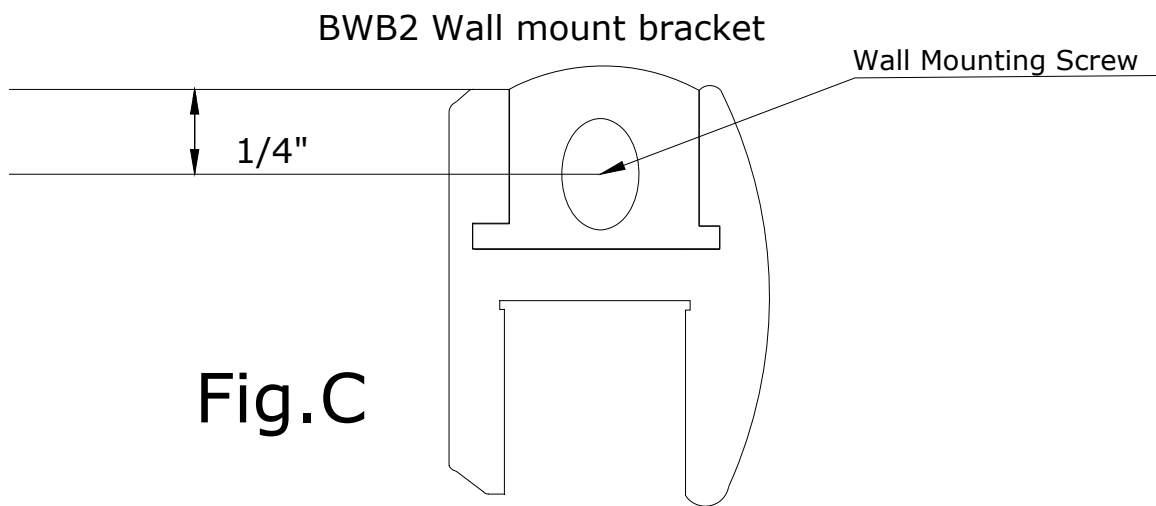


You may drill these now or wait until glass is set to test fit header and hole locations. Drilling instructions are in the cutting, assembling, and installing header section.

## Cutting U-channel

Using the center line dimensions used to figure glass sizes you can figure u-channel cut sizes.

Use the following formulas to get cut sizes.

(Fig.D)

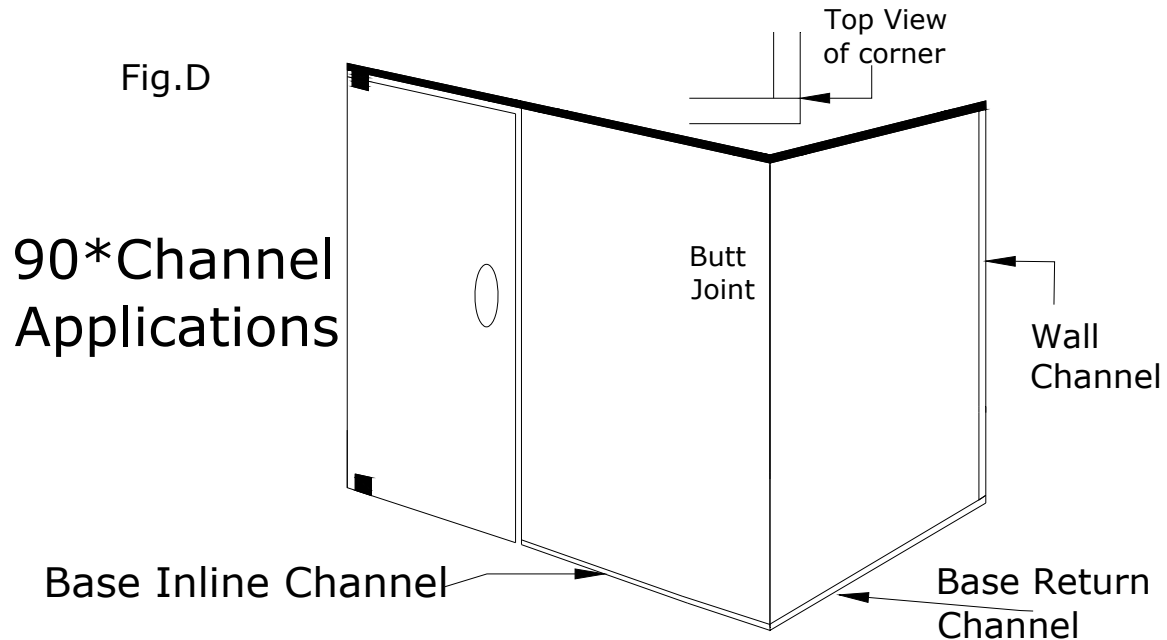


Base inline channel: Base of inline glass panel +  $\frac{1}{16}$ " (outside end of miter to sq end)

Base return channel: centerline dimension +  $\frac{1}{4}$ " (sq end to outside end of miter)

Wall channel: actual height of glass -  $\frac{3}{16}$ " (sq end to sq end)

\*Oil Rubbed Bronze u-channel does not fit inside the header. The formula for ORB is:  
Overall height of Unit - 2"

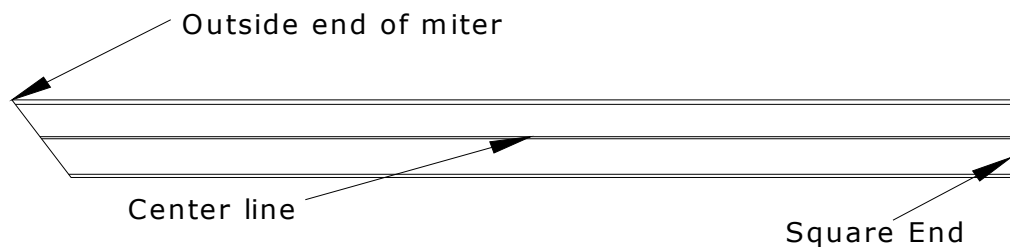


Top view of U Channel

It will be helpful to preserve the marks from the time of the measure to the day of the install so the installer has reference marks.


### **Installation of Channel**

1) Drill **base return channel** for weep holes (Fig.E), as close to the bottom as possible, on the inside wall of the channel with a 3/16" drill bit approximately 6 inches in from each end. Two holes are sufficient. If channel is under 12" only one hole is necessary.

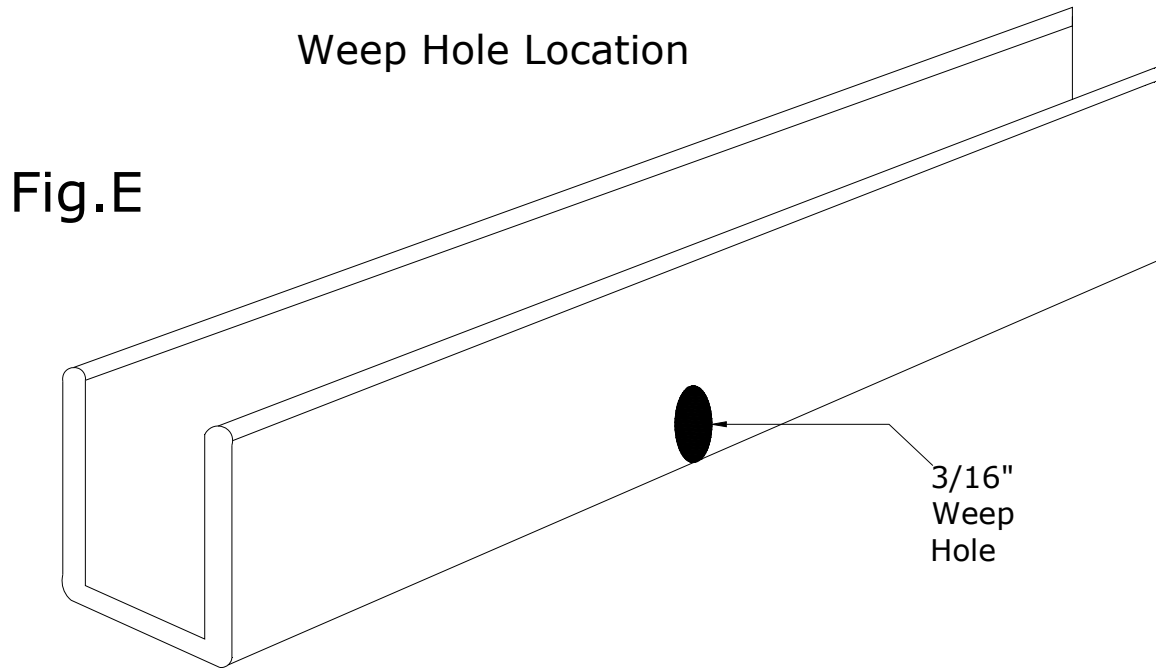

2) Drill bottoms of all channels with 3/16" holes approximately 12" apart for mounting to surface.

3) Align all channels based on the centerline marks that were made at the time of measure. Wall channel will set on top of base channel (Fig.F).

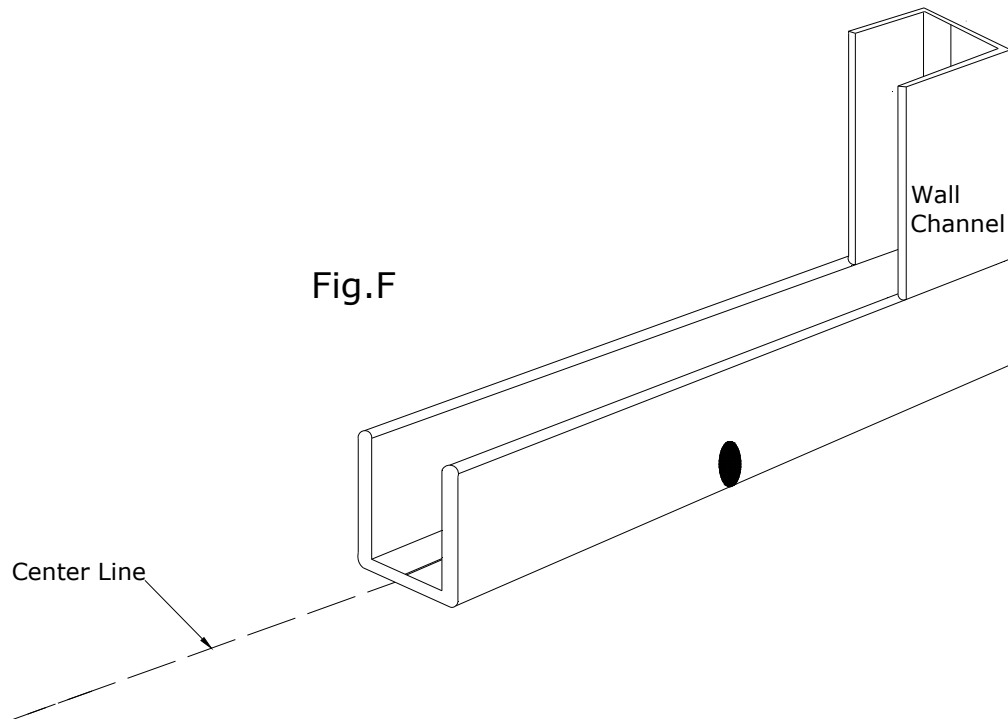

Mark the holes to be drilled (have an assistant hold the vertical channels plumb with a level while you mark the holes, or use blue tape to hold them plumb while you mark the holes).

4) After holes are marked, drill holes with 3/16" masonry drill bit. Apply silicone in holes on horizontal surface. Insert 3/16" plug anchors in all holes.

5) Secure channel with #8x1 flathead screws and drill. Remember that vertical channels will sit on horizontal channels where they meet. Apply blob of silicone over screw heads in horizontal channels and in all corners and seams.

### **Setting Glass Panels**

1) Place 1/4" setting blocks in channels, one on each end where glass will sit.

2) Return Panel: Using a glaziers suction cup, set 90\* return panel over base return channel and into wall channel then down into base return channel and down onto setting blocks being very careful not to set glass on the metal (Fig.G).

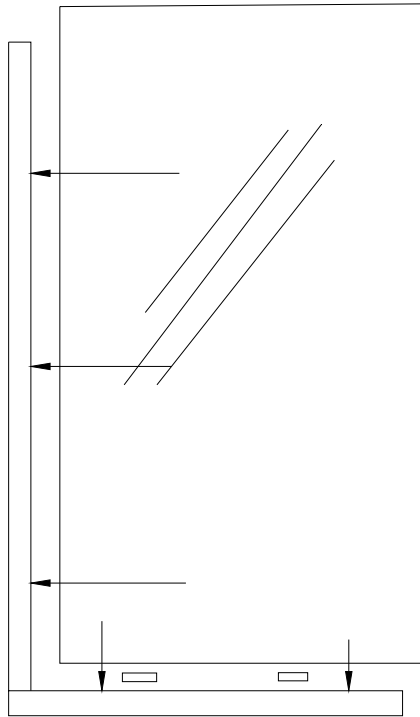


Fig.G

Set panel in wall channel first,  
then down into bottom channel

Use a level to check plumb and level of panel. If outages were accurately accounted for in the measure, **the panel should be plumb and level**. Clean glass surfaces and exposed edges. Move panel all the way into wall channel to give you room to set inline panel. You will need to move the return panel back over to meet the backside of the inline panel (to create the butt joint) after you install the inline panel. Use blue tape to wrap and hold the corner tight for in about three places to silicone later.

3) Inline Panel: Using a glaziers suction cup, set the inline panel over the base channel and slowly drop into the channel. Slide panel over against the inside of the return channel overlapping the return panel. The other end should be flush with the open end of the u-channel. Move the return panel back over to meet the backside of the inline panel (to create the butt joint) after you install the inline panel. Use blue tape to wrap and hold the corner tight for in about three places to silicone later.  
**The butt joint corner should be plumb.**

### Cutting Assembling and Installing Header

(Fig.H)

A 90° header requires 45° miters cut at the 90° angle, and 90° square cuts where they meet the wall (assuming the curb is 90° to the wall).

The top side of the header (shallow side) has a v line running the length of the extrusion. This line matches the center line of the glass. All cutting measurements

should be taken from point to point along this line.


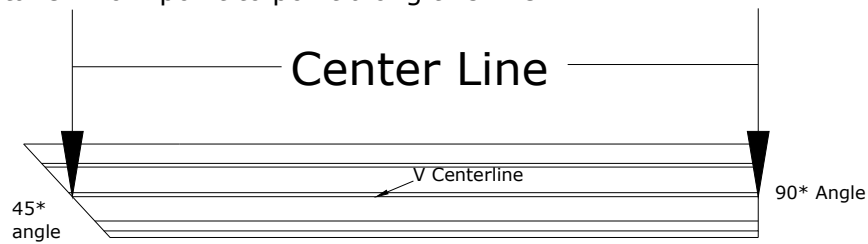


Fig.H  
Top View of Header  
and Glass

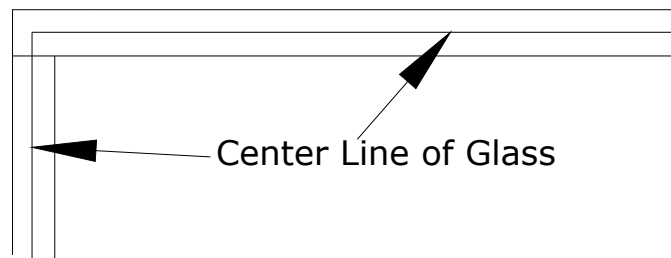

1) Return Header: Measure from the wall, along the center of the top of the return panel, to the center of the inline panel. This is the centerline dimension and cut size of the return header.


2) Door Side Header: Now, measure from the wall on the door side, along the center of the top of the inline panel, to the center of the return panel. This is the centerline dimension and cut size of the door side header. Remember, that a 45\* miter will need to be cut on the appropriate ends of both headers.

3) Assembling Header(Fig.I) When the header is assembled it should be done on a surface that will not damage or scratch it. Assemble header using the BHC90 Brass Header Corners. Insert it into the slot, in the end, of the mitered side of the door side header. Slide the return header onto the other end of the BHC90. Hold the corner together then firmly tighten the Allen set screws in the bracket until they are secured.

Now you can place the 2) BWB2 Brass Wall Brackets into the ends of the header and position them flush to the end of the header. The hole in the end of the bracket will face the wall that you are attaching your header to. With the brackets positioned



correctly, firmly tighten the Allen set screws in the bracket until they are secured.

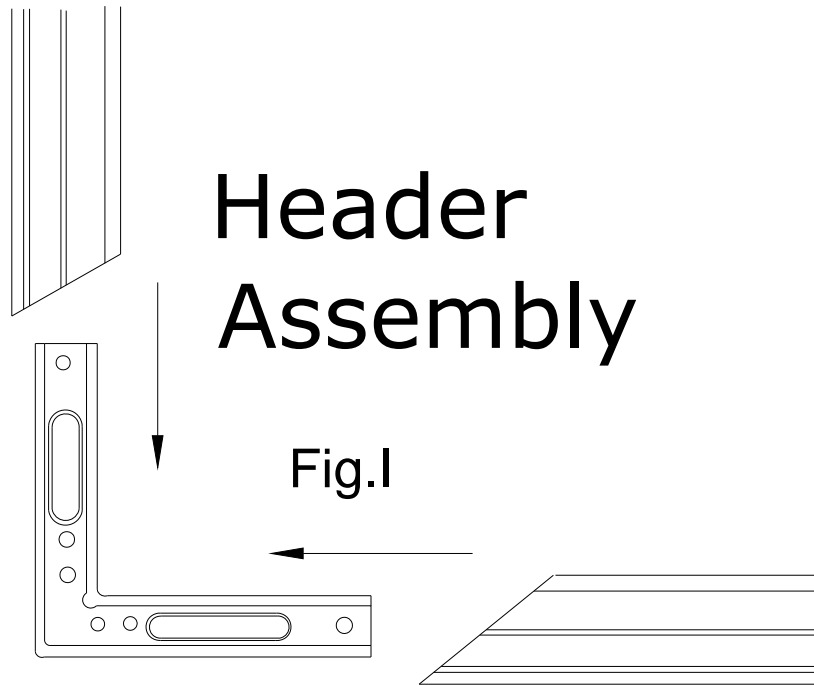

4) **Installing Header:** Now that the header has been cut and assembled, it can be installed. To test fit the header, use two 1" strips of the header vinyl and place on the top of the panels (Fig.J). Place the header down on top of the glass to check the fit. Make any necessary adjustments. Header should be level and allow clearance for the door glass including the 7/16" setting blocks. The holes in the BWB2 should match the marks you made earlier for the wall mounting screws. Remove the header. Remove the panels. (You have the option of drilling the holes when they were marked earlier in the process, when the BWB2 plumb lines were made and the glass had not been set yet). Drill with a 3/16" masonry bit. Follow with a 1/4" masonry bit and insert a 1/4" wall anchor flush to installation surface. Then put a full length strip of clear vinyl on top of the glass and install the header. Do not push header down too far or the vinyl will fold up into the header and then you will have to start over. The header will slide down approximately 3/8" over the top of the glass. Secure with the 2" screws provided.


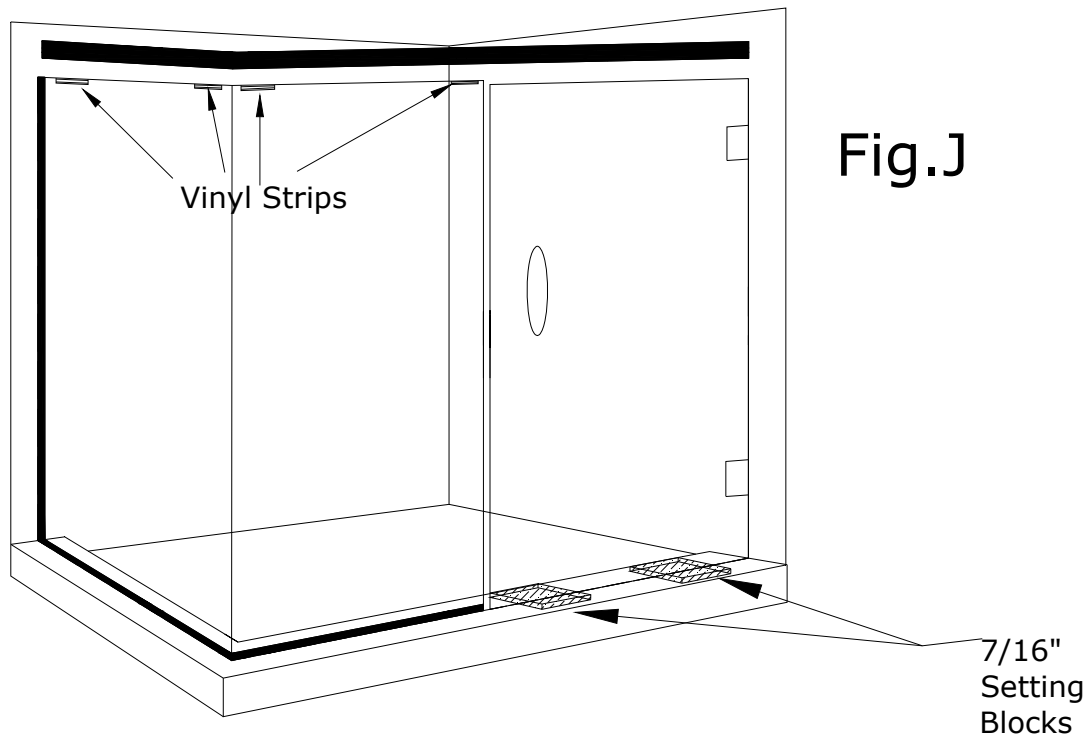


Fig.J

### **Mounting Hinges**


(Fig.J)

**Mounting Top Hinge:** Determine which side you want to hinge from. If the hinge is on the panel side then measure over 2" (presuming it is plumb) then make a pencil mark on the outside of the header. If the hinge is on the wall side then measure over 2" (+ or - wall outage) from the wall then make a mark on the outside of the header with a pencil. This is the location of where you will drill a 1/4" hole vertically through the center of the header cross web. Remove the base plate from one of the hinges using a #2 Phillips screwdriver, then, insert the square base of the pin into the Header Adapter Block. With hinge inserted, slip the Adapter Block up into the header. While holding the hinge in place secure it from above with the shorter of the two pan head screws that came with the Header Adapter Block. This will take a #3 Phillips head screwdriver. (Disregard the long notch in the Adapter Block as it is for a clip not used in this application.) Measure the open channel space above the door, cut and install the Snap In Filler Insert.

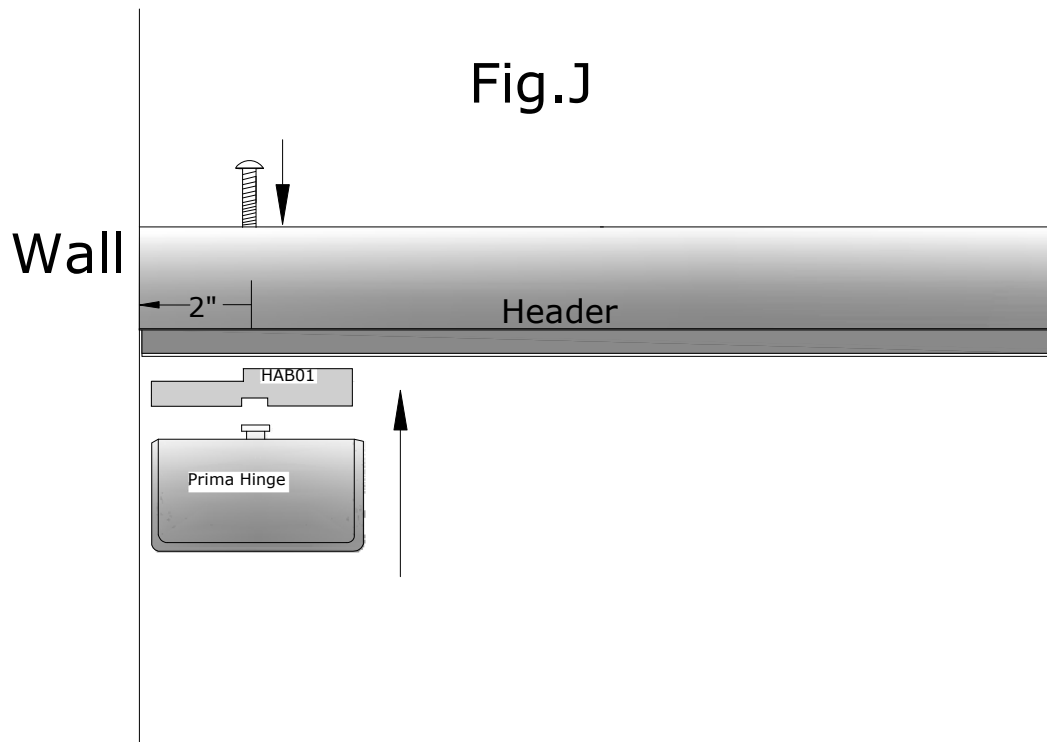

(Fig.K)

Mounting Bottom Hinge: Measure 2" over from the inline panel or the wall, depending on your application, on the centerline. This will be the center of the pin. Holding the back plate of the hinge, turn the hinge 90° so you can mark the 2 hinge holes on the curb (or use the back plate that was removed from the top hinge, as your template). Mark the holes. Drill holes in curb using a 3/16" masonry drill bit. After drilling the two holes, follow with a 1/4" masonry bit. Insert 1/4" wall anchors. Cut anchors flush to tile surface if they do not fully insert. Secure hinge with the screws provided.

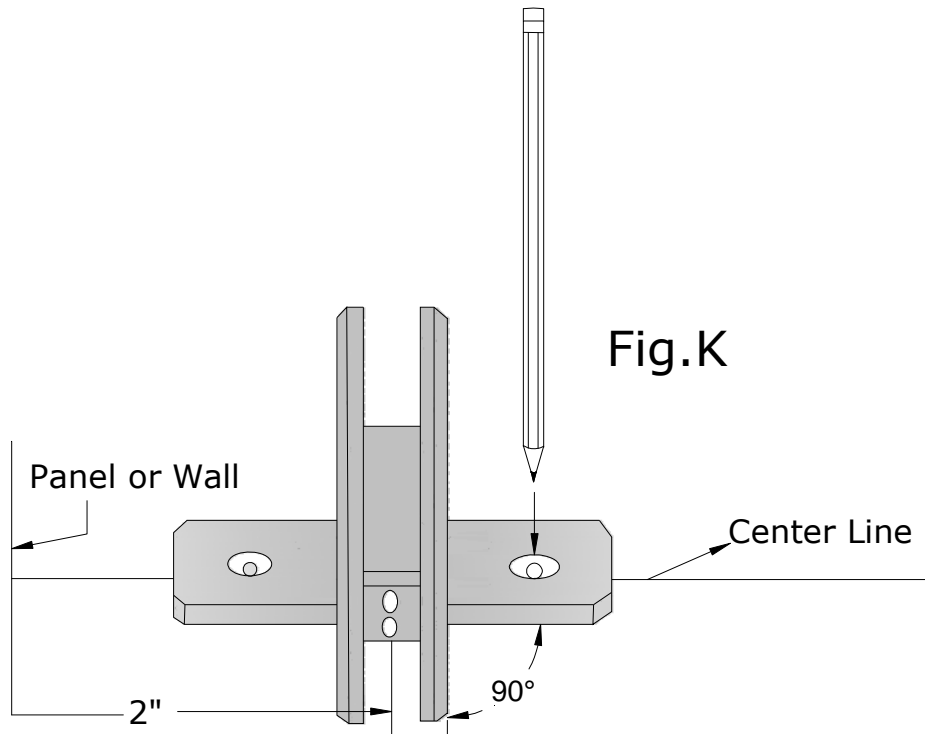

### **Setting Door**

This will take two people

**Installing Door:** The glass and gaskets should be free of grime, grease, oils or anything else that would prevent the hinge and gasket from making good contact with glass. Use glass cleaner to remove these things. Remove the cover plates and screws from the hinges. Apply the gaskets to both sides of the door around the hinge cutouts. Apply light pressure so they will stay in place. Place 2) 7/16" setting blocks on the curb to give the proper clearance for the sweep. With the hinges in a closed position, lift the door into the shower top first then down onto the setting blocks. Slowly push the door fully up against the top and bottom hinge. Check the alignment around door. Gaps should be even and consistent. Align the door, then, have an assistant hold the door in place with a glaziers suction cup. After everything is aligned, secure the top inside cover plate with the supplied machine screws. **Note: Always tighten machine screws by hand!** Use a #3 Phillips head screwdriver for this. When tightening the screws alternate from one screw to the other so the pressure is evenly applied to the inside cover plate. Repeat the above process on the bottom hinge.


### **Door Pull**

1) Take the two stud head mounting screws and sleeve one clear washer on each screw. Next, insert the clear grommets into the holes in the door. From the outside of the door, push the thread of the screws through the grommets in the holes in the glass. On the inside of the door, sleeve a clear washer onto the screws.

2) Take the pull that has the threaded hole in the end and begin to thread the top screw into it and then the bottom screw. Tighten the stud head screws down with a screwdriver (not a drill). This pull will be on the inside of the door.

3) Place the remaining pull, with the large holes and set screw, onto the stud heads of the screws. Tighten the set screws with Allen wrench provided.

## Back To Back Pull

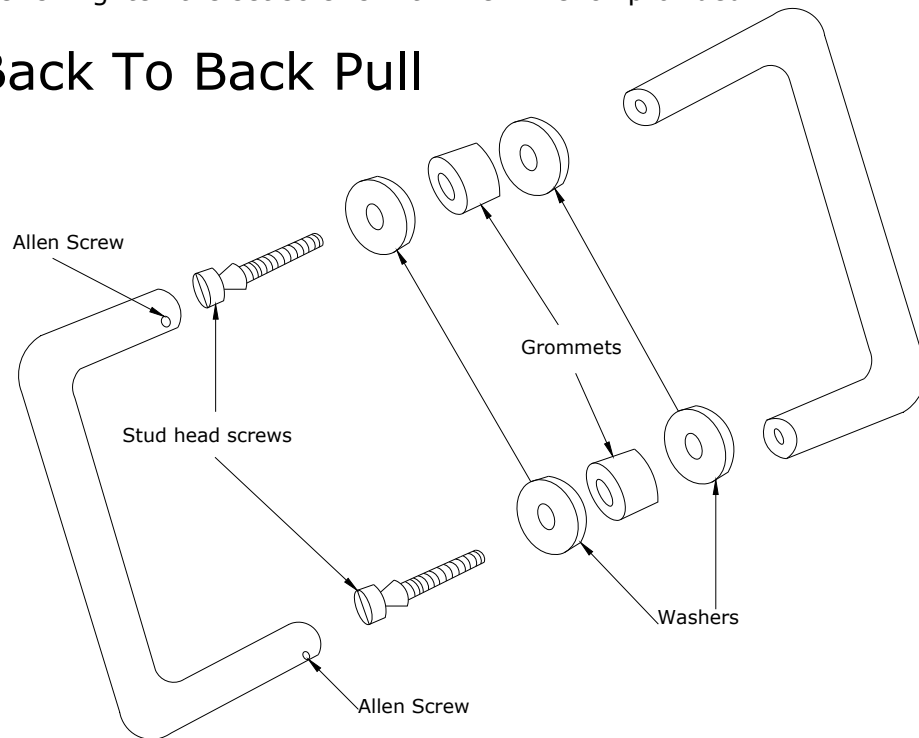

**\*\*When Applicable\*\***

(in some applications there may not be room for seals and or sweeps)


---

### Directions for SDTDF Double Fin, SDTJ-SDTB Bulb Seal, SDDTNL "L" Seal

When installing seals the glass edges should be clean and free from any dirt or hand oil etc... as these will prohibit adhesion. Glass cleaner will do.

Vertical seals will be applied to the edge of the glass using a VHB (very high bond) tape.

Apply VHB tape to edge of glass by adhering it top to bottom, gradually unrolling the tape as you slowly move from top to bottom. Apply the full length of glass. Cut flush to the bottom of door glass.

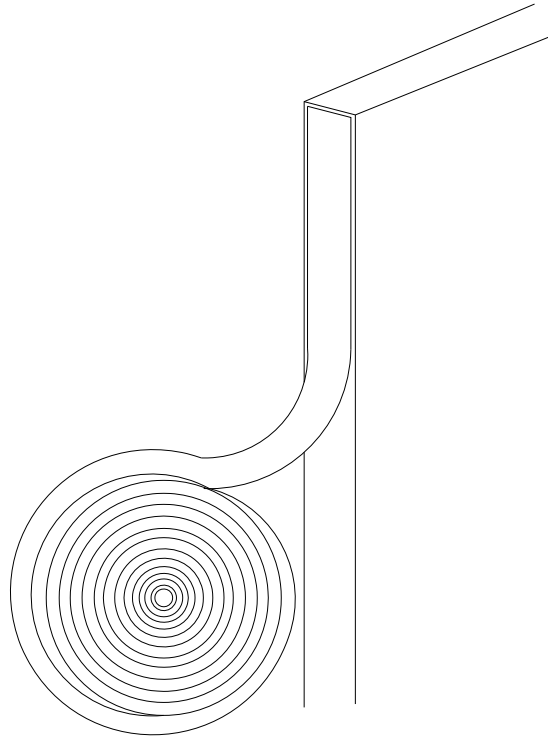

Then remove protective layer from other side and attach seal to the tape surface. Press on by hand. Cut flush to the bottom of the door using pliers-type cutter, scissors, or razor knife. The VHB tape will gain strength and achieve full bond within 72 hours.

Adjust door accordingly to achieve optimum seal.

#### **Directions for P990WS**

- 1) Measure and cut seal to appropriate size using miter saw or hacksaw.
- 2) Place over bottom edge of door. Then, using a plastic covered mallet, gently tap on bottom sweep until it is fully on. Make adjustments as needed.
- 3) Silicone ends and horizontal seams from glass to plastic.


#### **Silicone Application**

Once you confirm alignment of glass and everything is set, you need to apply a cap bead of clear 100% silicone around perimeter of u-channel edge where it meets the glass, both inside and out. Apply a small bead where u-channel meets installation surface, both inside and out. Finally apply a small bead from top to bottom in the inside corner of the butt joint.



# ARIZONA | SHOWER DOOR

HG-I-90-HP-B-38

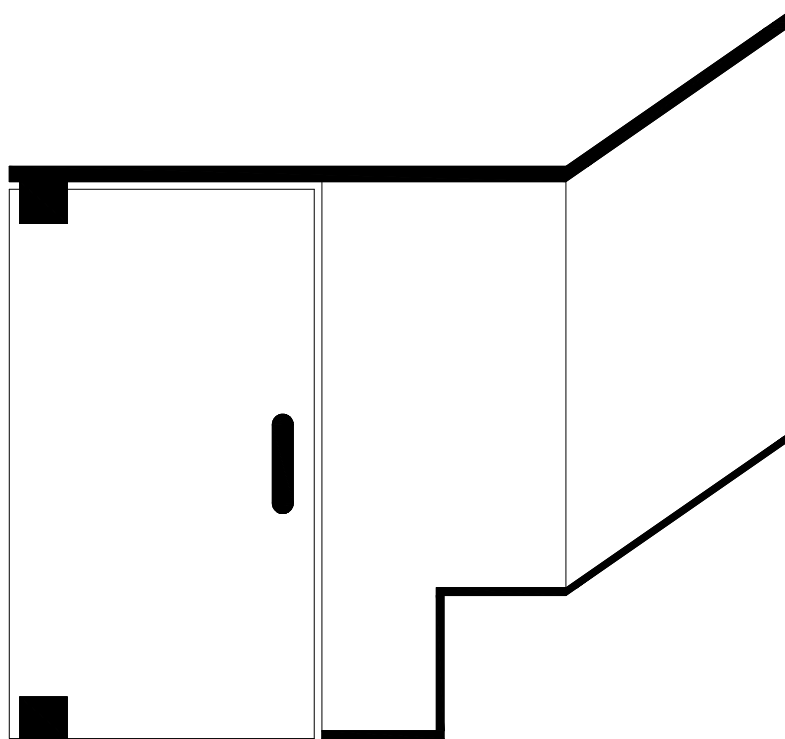




Please read instructions completely before proceeding to get an overview of the installation.

**Brief Outline of Installation Procedures**

- A) Prior measure of opening with centerline dimensions. For necessary accuracy a 2', 4', and 6' level should be used on appropriate surfaces as heavy frameless units are designed to be installed level and plumb. (Fig.A)

# Plumb and Centerline Example

Fig.A

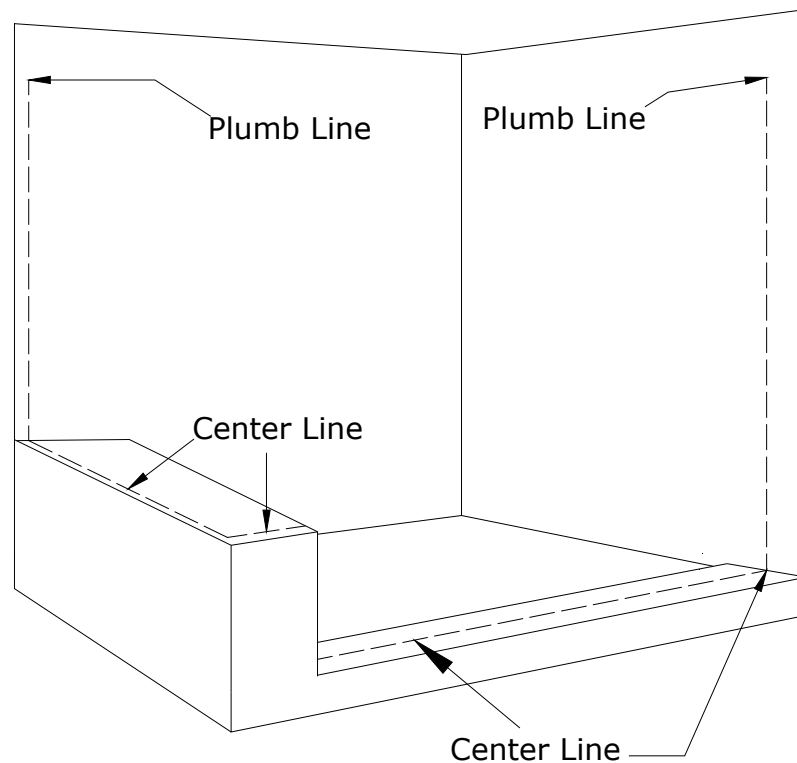


- B) Mark centerline plumb line for BWB2 Brass Wall Mount header clamp location
- C) Preparing u-channel for installation i.e. cutting, drilling
- D) Installing channel
- E) Setting panels
- F) Cutting, Assembling, and Installing Header
- G) Mounting Hinges
- H) Setting door
- I) Mount door pull
- J) Clean glass
- K) Install seals and adjust door if needed


L) Apply silicone

**BWB2 plumb line**

On the return panel side wall where u-channel will be installed, take a level and make a pencil line up the wall corresponding to the centerline of the glass. Then place a mark on the center line, 1/4" down from the top of where the header will finish (the overall height of the unit).(Fig.B)

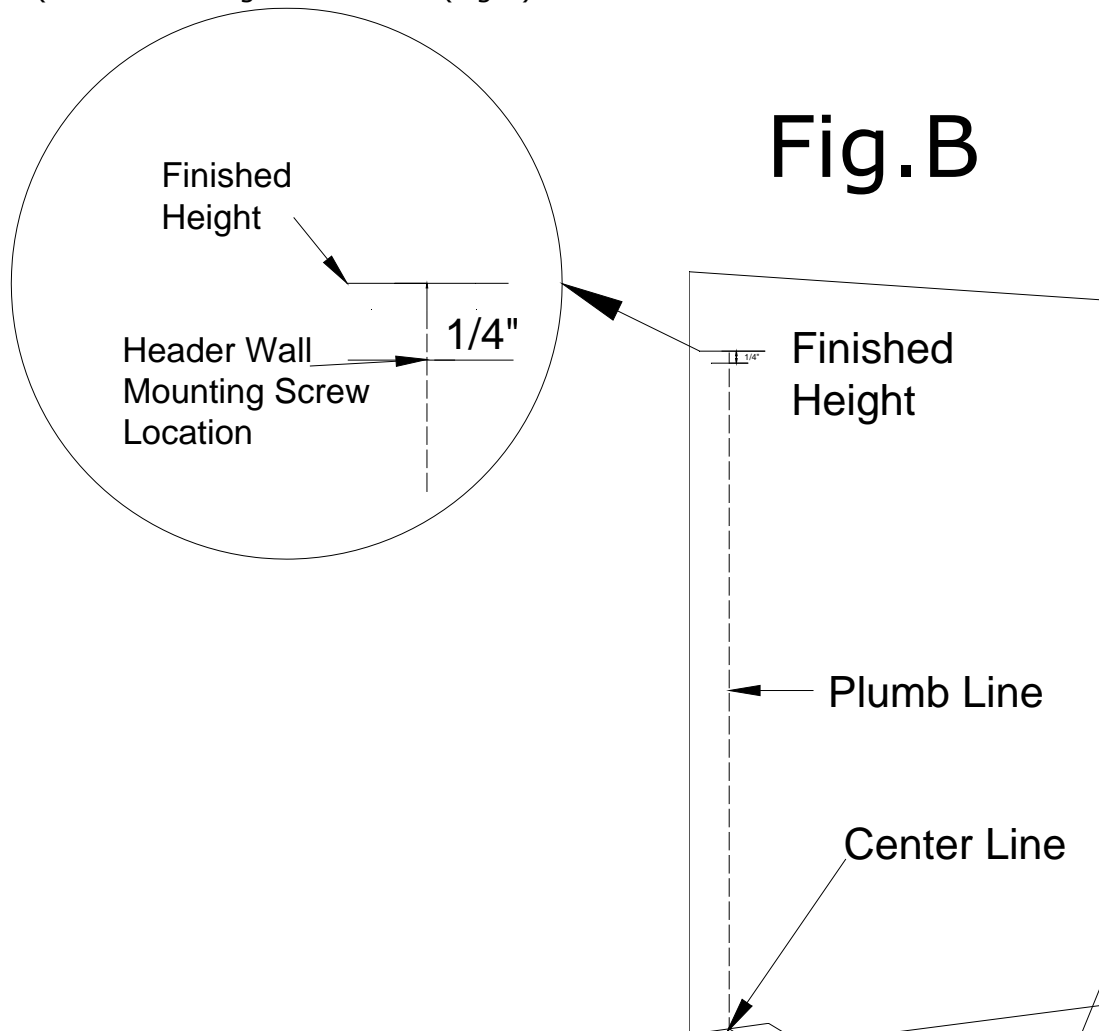

Follow the same procedure on the door side also. This will be the location of the wall mounting screws for the header.(Fig.C)

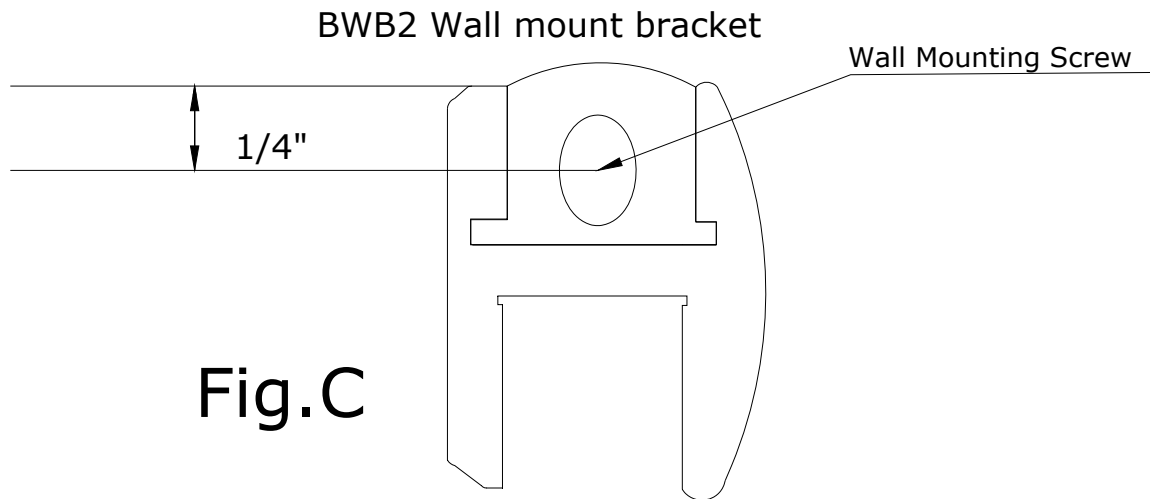


You may drill these now or wait until glass is set to test fit header and hole locations. Drilling instructions are in the cutting, assembling, and installing header section.

#### **Cutting U-channel**

Using the center line dimensions used to figure glass sizes you can figure u-channel cut sizes.

Use the following formulas to get cut sizes.

## 90\*Channel Applications

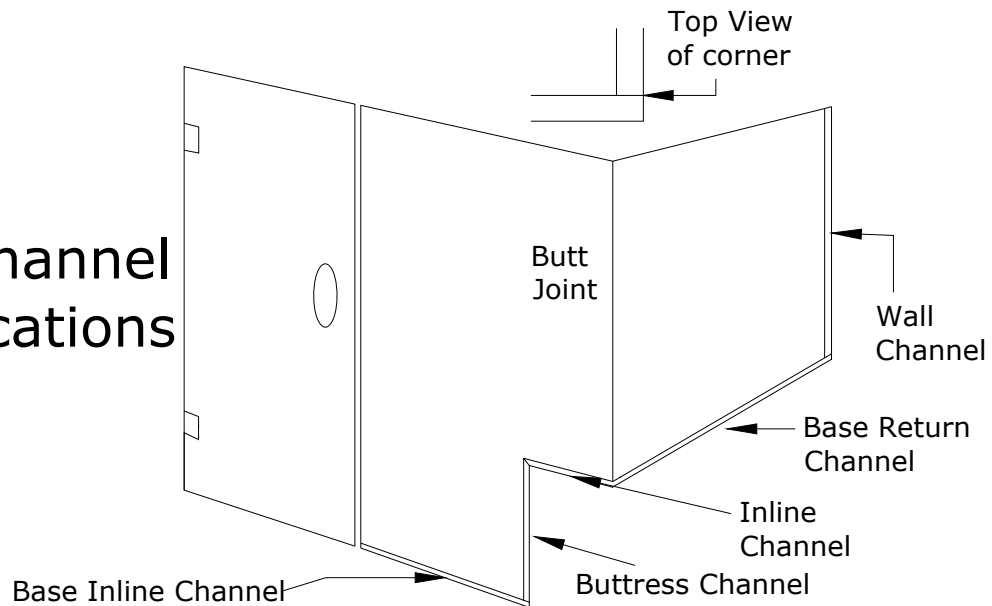

(Fig.D)

Base inline channel: Base of inline glass panel +  $\frac{5}{16}$ " (sq end to sq end)

Buttress channel: Actual buttress height -  $\frac{3}{4}$ " (sq end to short end of miter)

Inline channel: centerline dimension +  $\frac{1}{4}$ " (outside end of miter to short end of miter)

Return channel: centerline +  $\frac{1}{4}$ " (sq end to outside end of miter)

Wall channel: actual height of glass -  $\frac{3}{16}$ " (sq end to sq end)


\*Oil Rubbed Bronze u-channel does not fit inside the header. The formula for ORB is:  
Overall height of Unit - buttress height - 2"

It will be helpful to preserve the marks from the time of the measure to the day of the install so the installer has reference marks.

### Installation of Channel


1) Drill all **horizontal** channels for weep holes,(Fig.E) as close to the bottom as possible, on the **inside** wall of the channel with a  $\frac{3}{16}$ " drill bit approximately 6 inches in from each end. Two holes are sufficient. If channel is under 12" only one

hole is necessary.

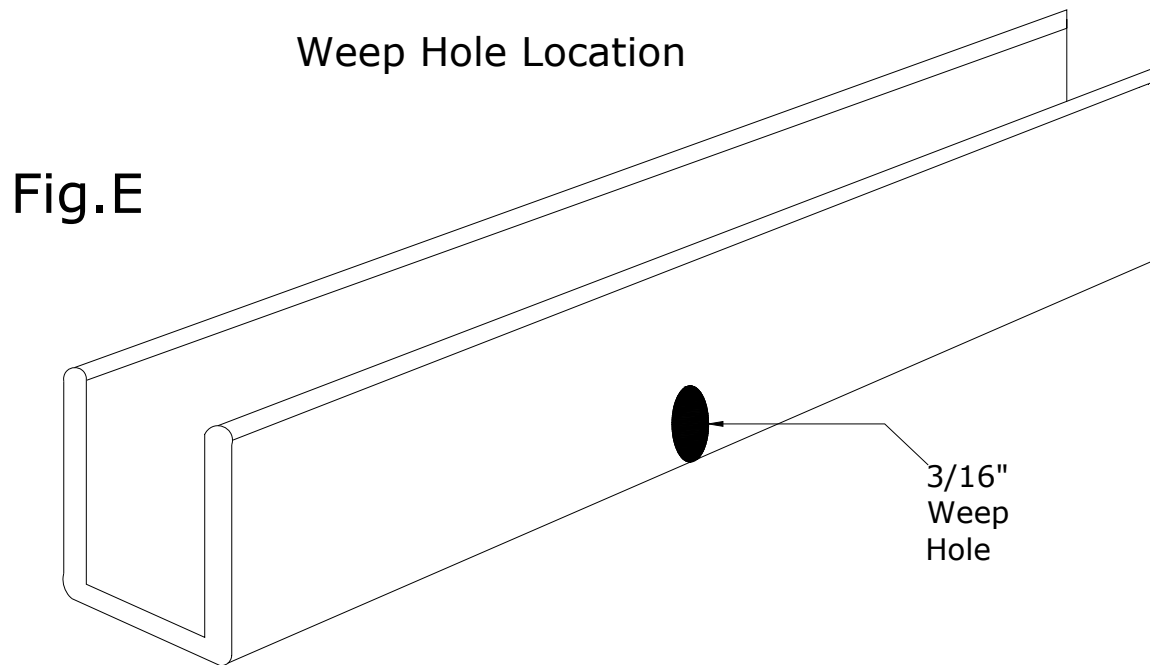

2) Drill bottoms of all channels with 3/16" holes approximately 12" apart for mounting to surface.

3) Align all channels based on the centerline marks that were made at the time of measure. Wall channel will set on top of base channel.(Fig.F) Mark the holes to be drilled (have an assistant hold the vertical channels plumb with a level while you mark the holes, or use blue tape to hold them plumb while you mark the holes).

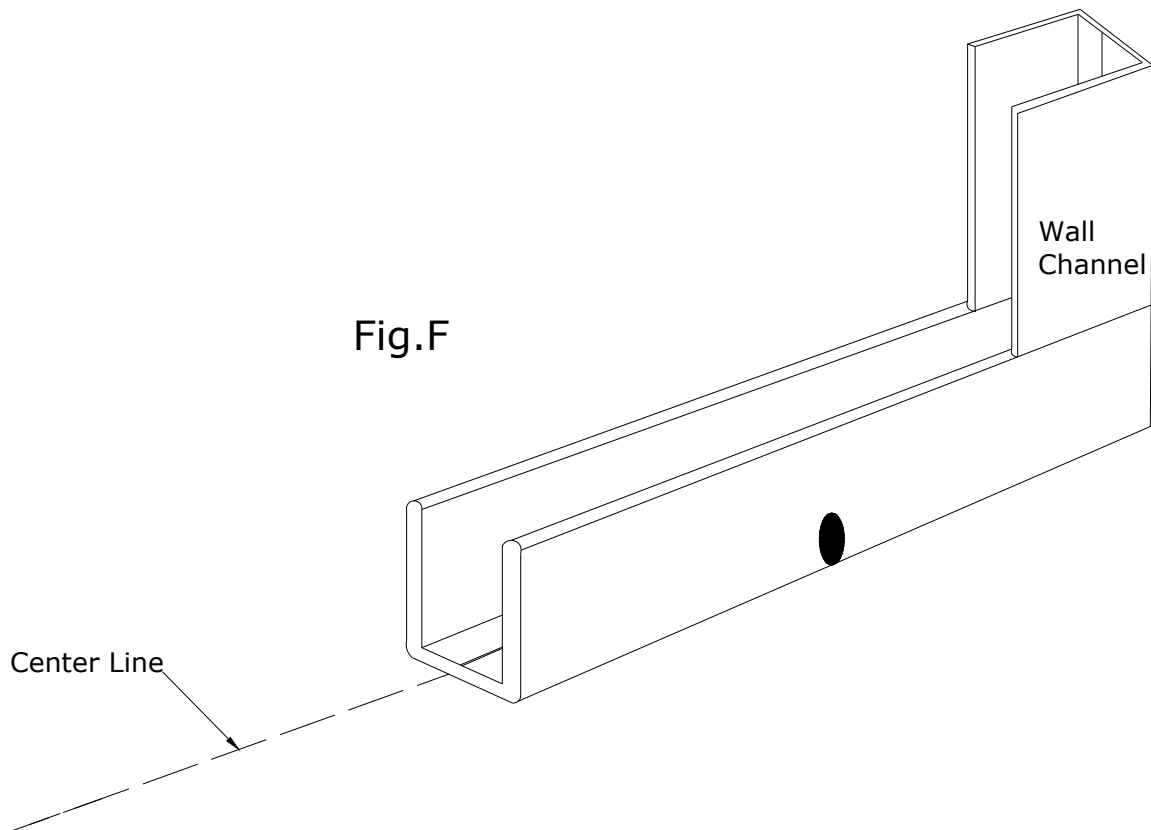

4) After holes are marked, drill holes with 3/16" masonry drill bit. Apply silicone in holes on horizontal surface. Insert 3/16" plug anchors in all holes.

5) Secure channel with #8x1 flathead screws and drill. Remember that vertical channels will sit on horizontal channels where they meet. Apply blob of silicone over screw heads in horizontal channels and in all corners and seams.

### **Setting Glass Panels**

1) Place 1/4" setting blocks in channels, one on each end where glass will sit.

2) Return Panel: Using a glaziers suction cup, set 90° return panel over base return channel and into wall channel then down into base return channel and down onto setting blocks being very careful not to set glass on the metal.(Fig.G)

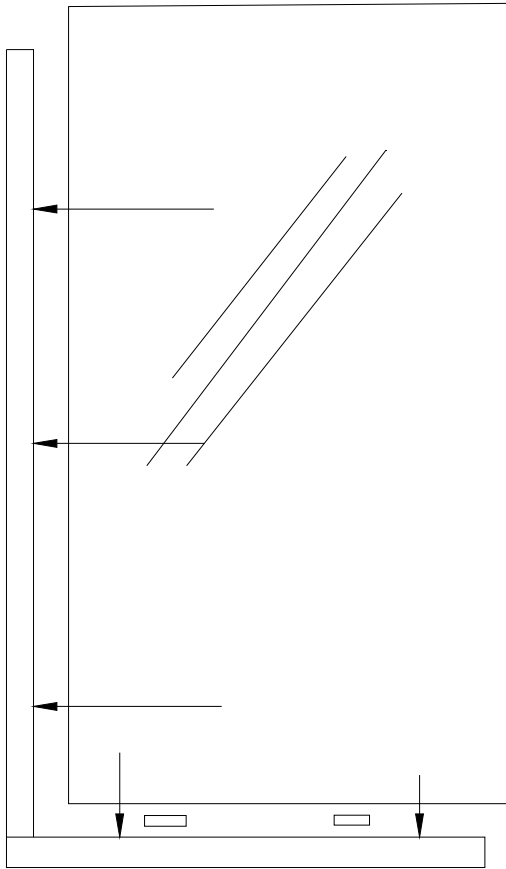


Fig.G

Set panel in wall channel first,  
then down into bottom channel

Use a level to check plumb and level of panel. If outages were accurately accounted for in the measure, **the panel should be plumb and level**. Clean glass surfaces and exposed edges. Move panel all the way into wall channel to give you room to set inline panel. You will need to move the return panel back over to meet the backside of the inline panel (to create the butt joint) after you install the inline panel. Use blue tape to wrap and hold the corner tight for in about three places to silicone later.

3) **Inline Panel:** Using a glaziers suction cup, set the inline panel over the base channel and slowly drop into the channel. Slide panel over against the inside of the return channel overlapping the return panel. The other end should be flush with the open end of the u-channel. Move the return panel back over to meet the backside of the inline panel (to create the butt joint) after you install the inline panel. Use blue tape to wrap and hold the corner tight for in about three places to silicone later.

**The butt joint corner should be plumb.**

#### **Cutting Assembling and Installing Header**

(Fig.H)

A 90° header requires 45° miters cut at the 90° angle, and 90° square cuts where they meet the wall (assuming the curb is 90° to the wall).

The top side of the header (shallow side) has a v line running the length of the extrusion. This line matches the center line of the glass. All cutting measurements

should be taken from point to point along this line.


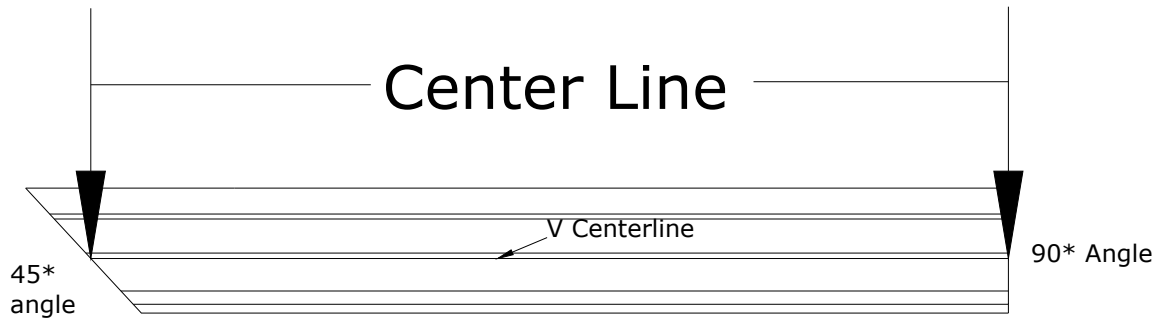


Fig.H  
Top View of Header  
and Glass

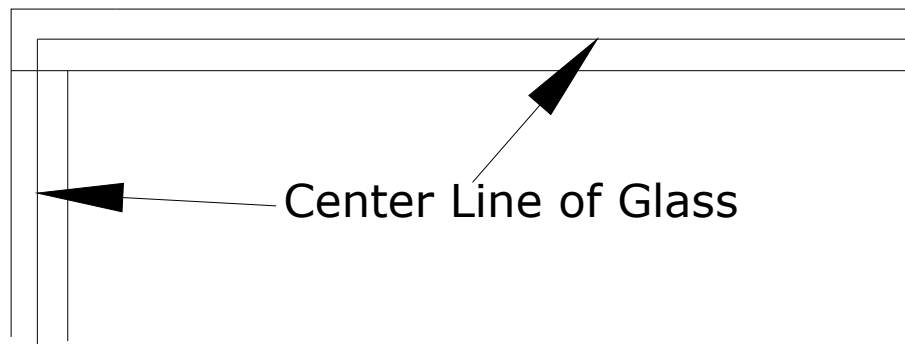

1) Return Header: Measure from the wall, along the center of the top of the return panel, to the center of the inline panel. This is the centerline dimension and cut size of the return header.


2) Door Side Header: Now, measure from the wall on the door side, along the center of the top of the inline panel, to the center of the return panel. This is the centerline dimension and cut size of the door side header. Remember, that a 45\* miter will need to be cut on the appropriate ends of both headers.

3) Assembling Header: When the header is assembled it should be done on a surface that will not damage or scratch it. Assemble header using the BHC90 Brass Header Corners. Insert it into the slot, in the end, of the mitered side of the door side header. Slide the return header onto the other end of the BHC90. Hold the corner together then firmly tighten the Allen set screws in the bracket until they are secured.


Now you can place the 2) BWB2 Brass Wall Brackets into the ends of the header and position them flush to the end of the header. The hole in the end of the bracket will face the wall that you are attaching your header to. With the brackets positioned



correctly, firmly tighten the Allen set screws in the bracket until they are secured.

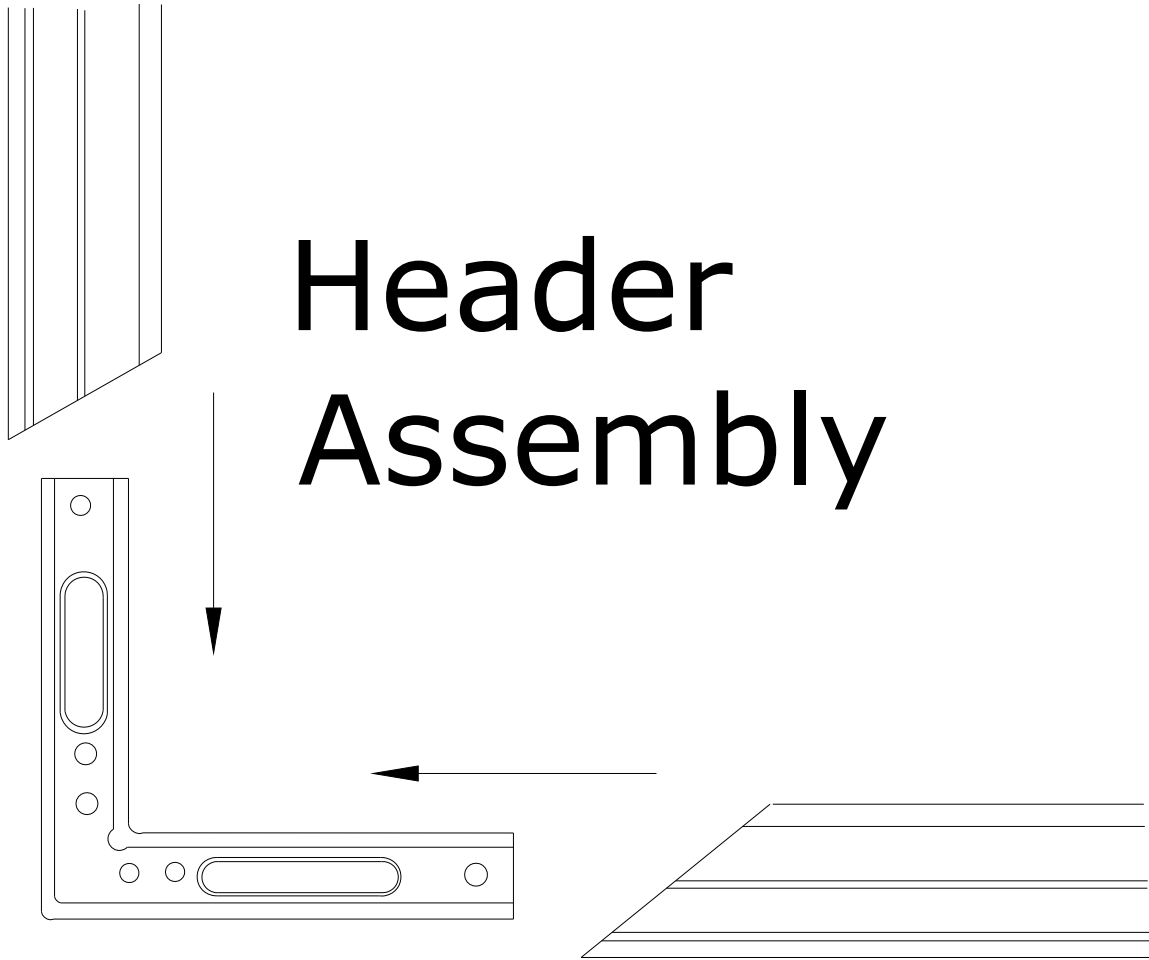


4) Installing Header: Now that the header has been cut and assembled, it can be installed. To test fit the header, use two 1" strips of the header vinyl and place on the top of the panels.(Fig.I) Place the header down on top of the glass to check the fit. Make any necessary adjustments. Header should be level and allow clearance for the door glass including the 7/16" setting blocks.

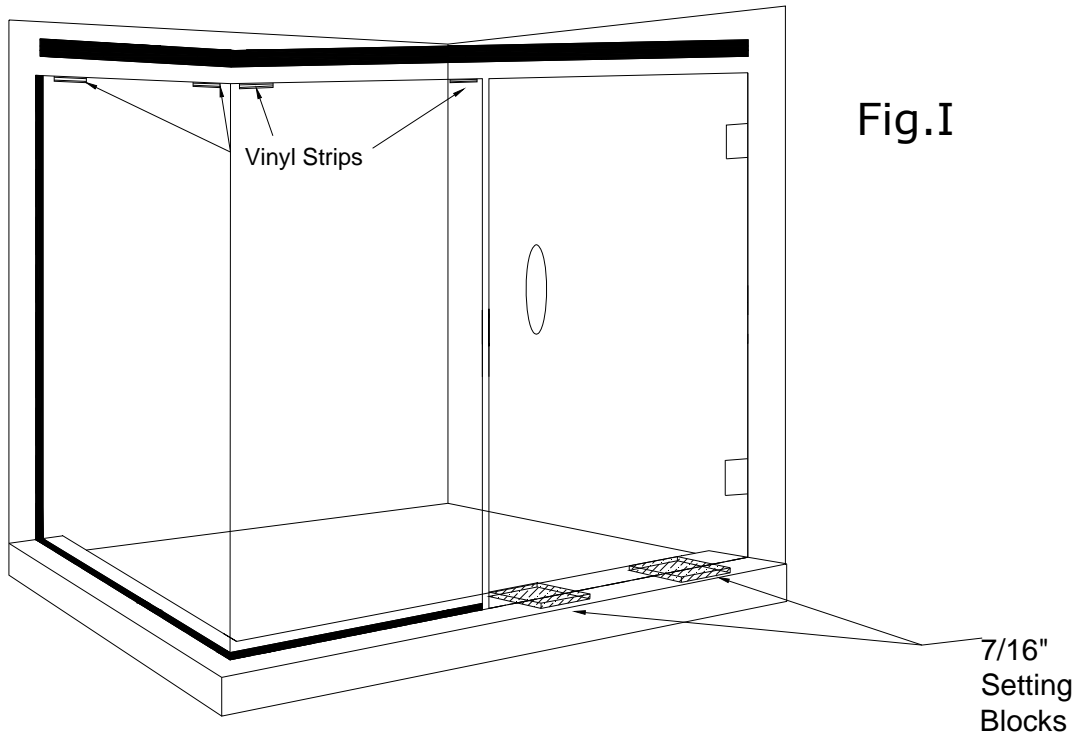


The holes in the BWB2 should match the marks you made earlier for the wall mounting screws. Remove the header. Remove the panels. (You have the option of drilling the holes when they were marked earlier in the process, when the BWB2 plumb lines were made and the glass had not been set yet). Drill with a 3/16" masonry bit. Follow with a 1/4" masonry bit and insert a 1/4" wall anchor flush to installation surface. Then put a full length strip of clear vinyl on top of the glass and install the header. Do not push header down too far or the vinyl will fold up into the header and then you will have to start over. The header will slide down approximately 3/8" over the top of the glass. Secure with the 2" screws provided.

### **Mounting Hinges** Standard Configuration

**Mounting Top Hinge:** (Fig.J) Determine which side you want to hinge from. If the hinge is on the panel side then measure over 2" (presuming it is plumb) then make a pencil mark on the outside of the header. If the hinge is on the wall side then measure over 2" (+ or - wall outage) from the wall then make a mark on the outside of the header with a pencil. This is the location of where you will drill a 1/4" hole vertically through the center of the header cross web. Remove the base plate from one of the hinges using a #2 Phillips screwdriver, then, insert the square base of the pin into the Header Adapter Block(HAB01). With hinge inserted, slip the Adapter Block up into the header. While holding the hinge in place secure it from above with the shorter of the two pan head screws that came with the Header Adapter Block. This will take a #3 Phillips head screwdriver. (Disregard the long notch in the Adapter Block as it is for a clip not used in this application.) Measure the open channel space above the door, cut and install the Snap In Filler Insert.

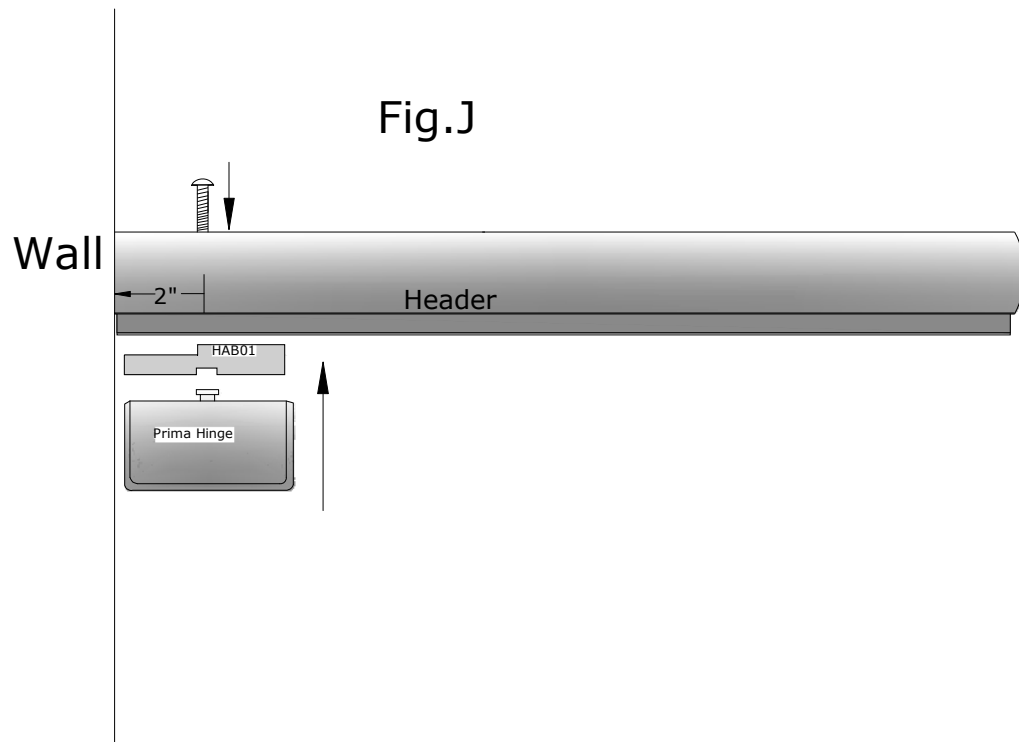

**Mounting Bottom Hinge:** (Fig.K) Measure 2" over from the inline panel or the wall, depending on your application, on the centerline. This will be the center of the pin. Holding the back plate of the hinge, turn the hinge 90° so you can mark the 2 hinge holes on the curb (or use the back plate that was removed from the top hinge, as your template). Mark the holes. Drill holes in curb using a 3/16" masonry drill bit. After drilling the two holes, follow with a 1/4" masonry bit. Insert 1/4" wall anchors. Cut anchors flush to tile surface if they do not fully insert. Secure hinge with the screws provided.

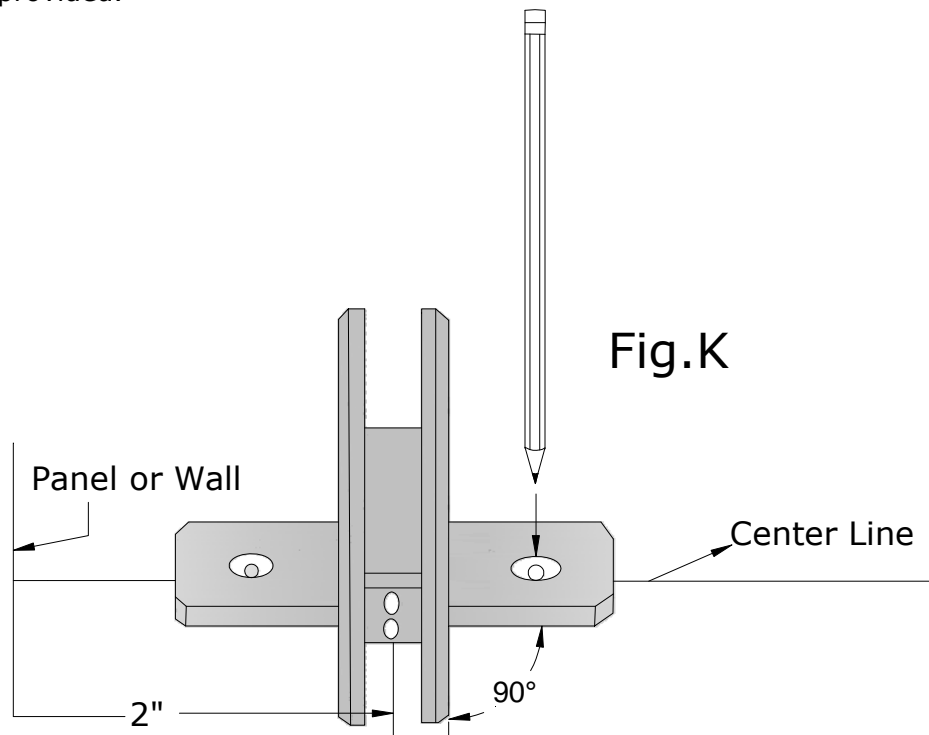

## **Setting Door**


This will take two people

**Installing Door:** The glass and gaskets should be free of grime, grease, oils or anything else that would prevent the hinge and gasket from making good contact with glass. Use glass cleaner to remove these things. Remove the cover plates and screws from the hinges. Apply the gaskets to both sides of the door around the hinge cutouts. Apply light pressure so they will stay in place. Place 2) 7/16" setting blocks on the curb to give the proper clearance for the sweep. With the hinges in a closed position, lift the door into the shower top first then down onto the setting blocks. Slowly push the door fully up against the top and bottom hinge. Check the alignment around door. Gaps should be even and consistent. Align the door, then, have an assistant hold the door in place with a glaziers suction cup. After everything is aligned, secure the top inside cover plate with the supplied machine screws. **Note: Always tighten machine screws by hand!** Use a #3 Phillips head screwdriver for this. When tightening the screws alternate from one screw to the other so the pressure is evenly applied to the inside cover plate. Repeat the above process on the bottom hinge.

## **Door Pull**

- 1) Take the two stud head mounting screws and sleeve one clear washer on each screw. Next, insert the clear grommets into the holes in the door. From the outside of the door, push the thread of the screws through the grommets in the holes in the glass. On the inside of the door, sleeve a clear washer onto the screws.
- 2) Take the pull that has the threaded hole in the end and begin to thread the top screw into it and then the bottom screw. Tighten the stud head screws down with a screwdriver (not a drill). This pull will be on the inside of the door.
- 3) Place the remaining pull, with the large holes and set screw, onto the stud heads of the screws. Tighten the set screws with Allen wrench provided.

## Back To Back Pull

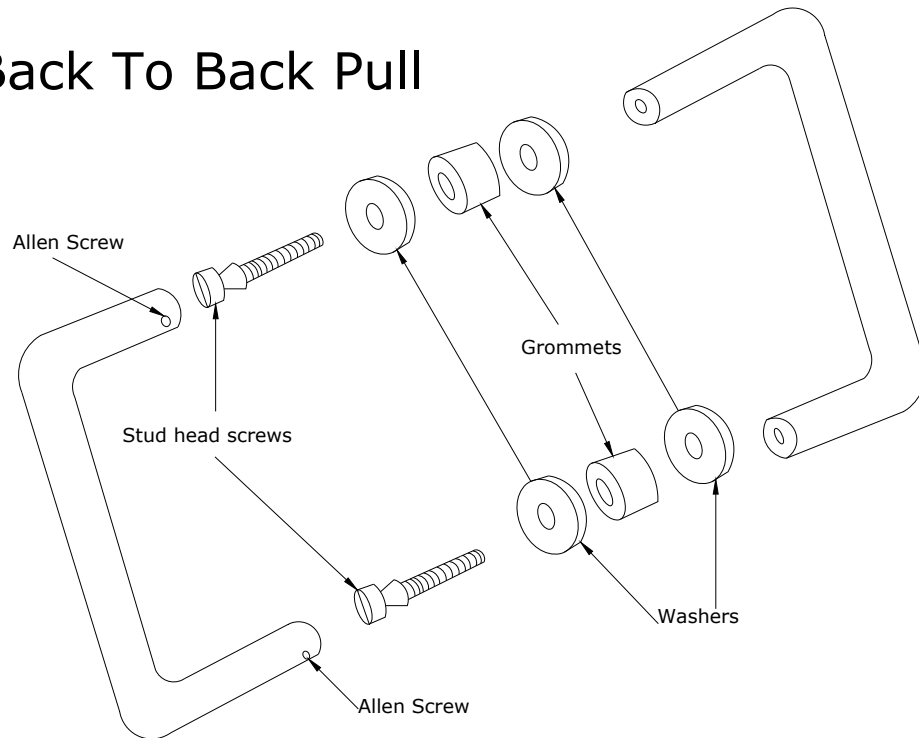

**\*\*When Applicable\*\***  
(in some applications there may not be room for seals and or sweeps)


---

### **Directions for SDTDF Double Fin, SDTJ-SDTB Bulb Seal, SDDTNL "L" Seal**

When installing seals the glass edges should be clean and free from any dirt or hand oil etc... as these will prohibit adhesion. Glass cleaner will do.

Vertical seals will be applied to the edge of the glass using a VHB (very high bond) tape.

Apply VHB tape to edge of glass by adhering it top to bottom, gradually unrolling the tape as you slowly move from top to bottom. Apply the full length of glass. Cut flush to the bottom of door glass.

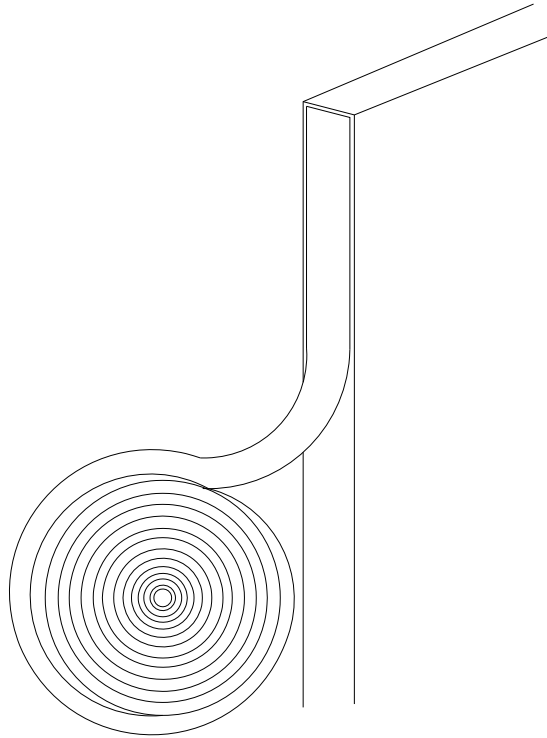

Then remove protective layer from other side and attach seal to the tape surface. Press on by hand. Cut flush to the bottom of the door using pliers-type cutter, scissors, or razor knife. The VHB tape will gain strength and achieve full bond within 72 hours.

Adjust door accordingly to achieve optimum seal.

#### **Directions for P990WS**

- 1) Measure and cut seal to appropriate size using miter saw or hacksaw.
- 2) Place over bottom edge of door. Then, using a plastic covered mallet, gently tap on bottom sweep until it is fully on. Make adjustments as needed.
- 3) Silicone ends and horizontal seams from glass to plastic.


#### **Silicone Application**

Once you confirm alignment of glass and everything is set, you need to apply a cap bead of clear 100% silicone around perimeter of u-channel edge where it meets the glass, both inside and out. Apply a small bead where u-channel meets installation surface, both inside and out. Finally apply a small bead from top to bottom in the inside corner of the butt joint.



# ARIZONA | SHOWER DOOR

HG-I-90-38

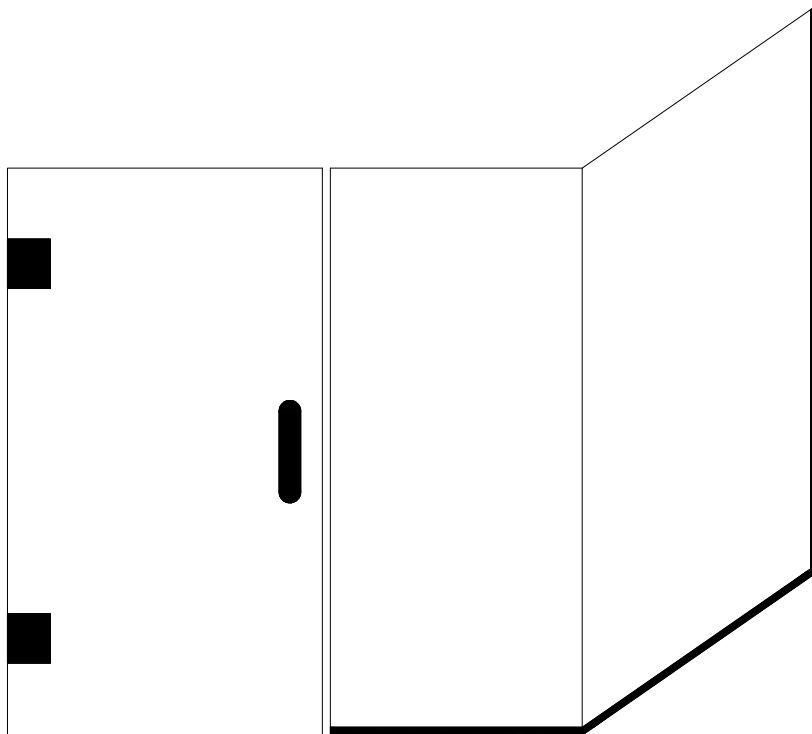




Please read instructions completely before proceeding to get an overview of the installation.

**Brief Outline of Installation Procedures**

- A) Prior measure of opening with centerline dimensions. For necessary accuracy a 2', 4', and 6' level should be used on appropriate surfaces as heavy frameless units are designed to be installed level and plumb.(Fig.A)

## Plumb and Centerline Example

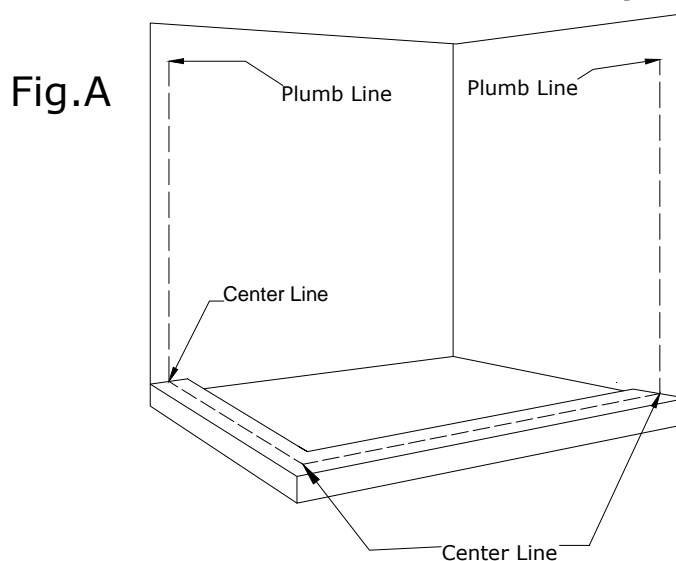


- B) Preparing u-channel for installation i.e. cutting, drilling.  
C) Installing channel.  
D) Setting panels.  
E) Setting door.  
F) Mount door pull.  
G) Clean glass.  
H) Install seals and adjust door if needed.  
I) Apply silicone.

**Cutting U-channel**

Using the centerline dimensions used to figure glass sizes you can figure u-channel cut sizes.

Use the following formulas to get cut sizes.


(Fig.B)

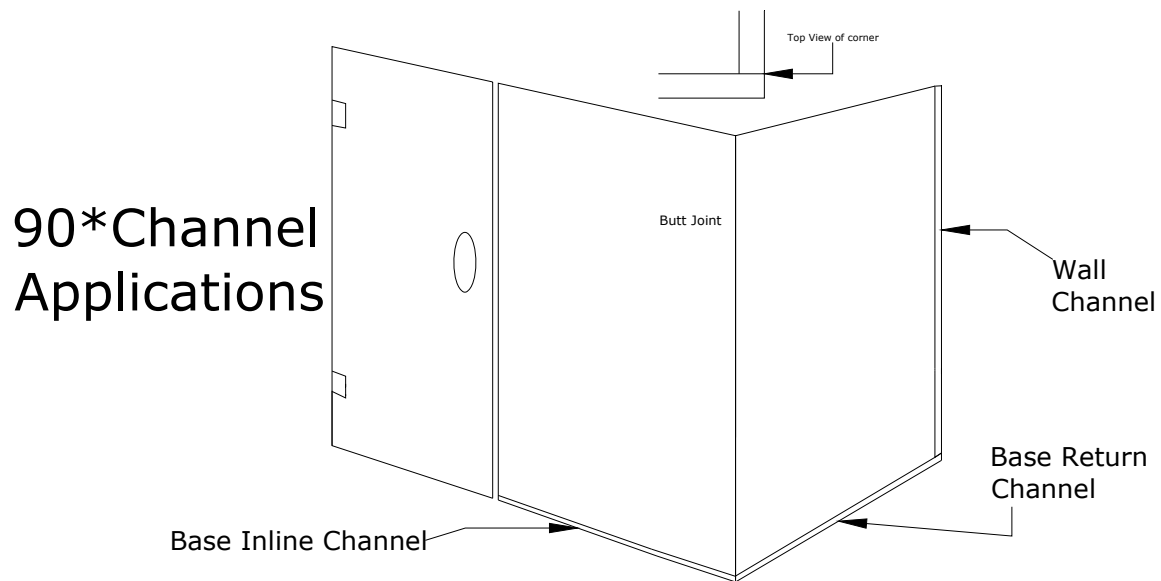

Base inline channel: Base of inline glass panel +  $\frac{1}{16}$ " (outside end of miter to sq end)

Base return channel: centerline dimension +  $\frac{1}{4}$ " (sq end to outside end of miter)


Wall channel: actual height of glass -  $\frac{7}{16}$ " (sq end to sq end)

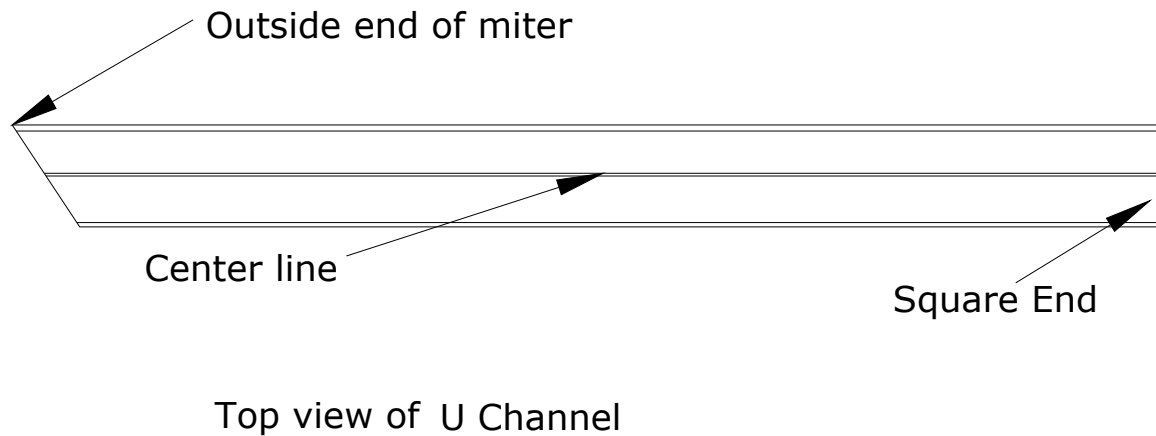

It will be helpful to preserve the marks from the time of the measure to the day of the install so the installer has his reference marks.


### Installation of Channel

1) Drill all **horizontal** channels for weep holes, as close to the bottom as possible, On the inside wall of the channel with a 3/16" drill bit approximately 6 inches in from each end. Two holes are sufficient. If channel is under 12" only one hole is necessary. (Fig.C)

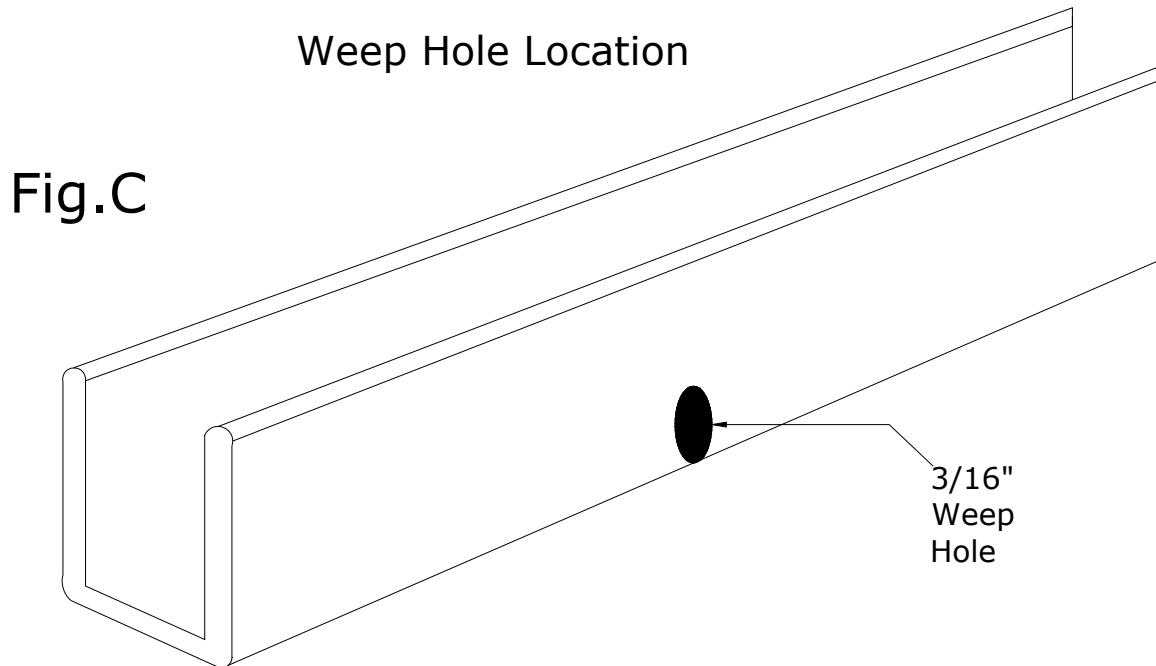

2) Drill bottoms of all channels with 3/16" holes approximately 12" apart for mounting to surface.

3) Align all channels based on the centerline marks that were made at the time of measure, then mark the holes to be drilled (have an assistant hold the vertical channels plumb with a level while you mark the holes, or use blue tape to hold them plumb while you mark the holes). Vertical channel will sit on horizontal channel where they meet. (Fig.D)

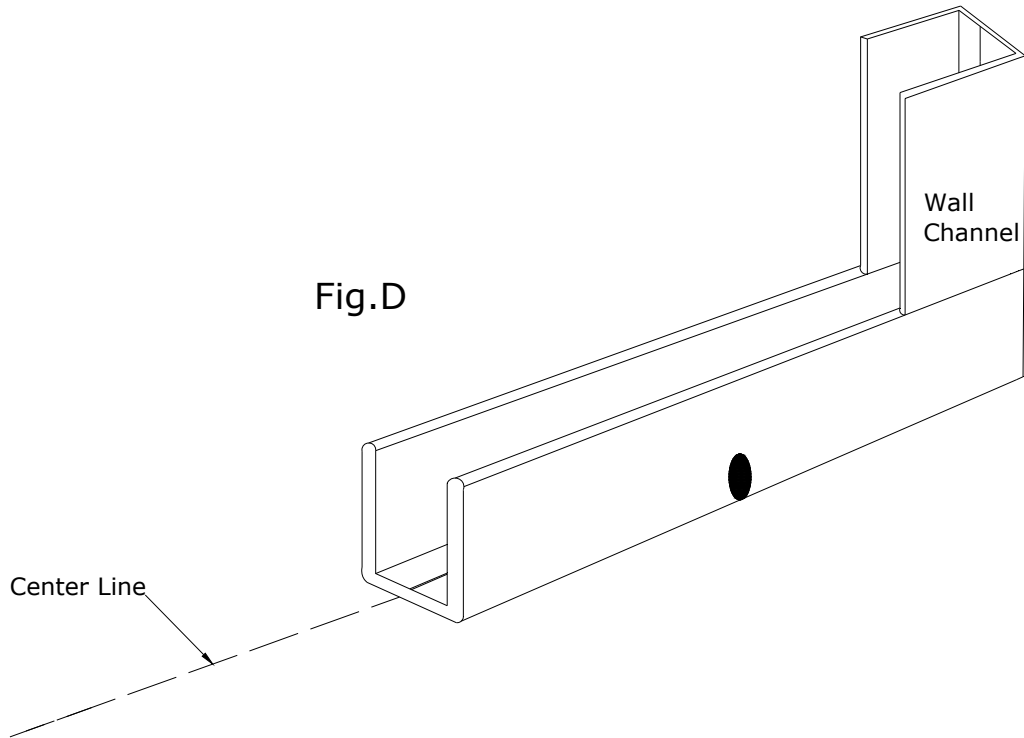

4) After holes are marked, drill holes with 3/16" masonry drill bit. Apply silicone in holes on horizontal surface. Insert 3/16" plug anchors in all holes.

5) Secure channel with #8x1 flathead screws and drill. Apply blob of silicone over screw heads in horizontal channels and in all corners and seams.

## Setting Glass Panels

(Fig.E)

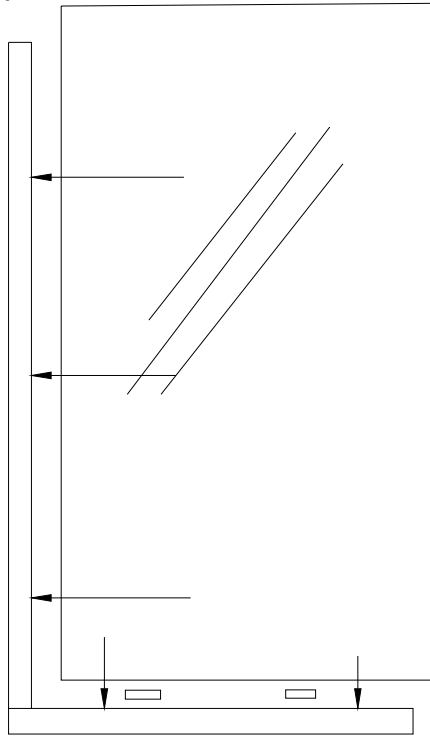


Fig.E

Set panel in wall channel first,  
then down into bottom channel

- 1) Place 1/4" setting blocks in channels, one on each end where glass will sit.
- 2) Return Panel: Using a glaziers suction cup, set 90° return panel over base return channel and into wall channel then down into base return channel and down onto setting blocks being very careful not to set glass on the metal. Use a level to check plumb and level of panel. If outages were accurately accounted for in the measure, **the panel should be plumb and level**. Clean glass surfaces and exposed edges. Move panel all the way into wall channel to give you room to set inline panel. You will need to move the return panel back over to meet the backside of the inline panel (to create the butt joint) after you install the inline panel. Use blue tape to wrap and hold the corner tight for in about three places to silicone later.
- 3) Inline Panel: Using a glaziers suction cup, set the inline panel over the base channel and slowly drop into the channel. Slide panel over against the inside of the return channel overlapping the return panel. The other end should be flush with the open end of the u-channel. Move the return panel back over to meet the backside of the inline panel (to create the butt joint) after you install the inline panel. Use blue tape to wrap and hold the corner tight for in about three places to silicone later.


## Setting Door

- 1) Mounting hinges: The glass and gaskets should be free of grime, grease, oils or anything else that would prevent the hinge and gasket from making good contact with glass. Use glass cleaner to remove these things. Remove the cover plates and screws from the hinges. See the template sheet in the hinge box for the proper gasket to be used with your selected glass thickness. Apply the proper thickness gaskets to both sides of the door around the hinge cutouts. Apply light pressure so they will stay in place. Now put the main body of the hinge in the glass cutout. Align

the hinge in the cutout being sure that is centered up and down, and that there is 1/16"-3/32" gap between the back plate and glass edge. After everything is aligned, secure the inside cover plate with the supplied machine screws. **Note: Always tighten machine screws by hand!** Use a #3 Phillips head screwdriver for this. When tightening the screws alternate from one screw to the other so the pressure is evenly applied to the inside cover plate. Repeat the above process on the additional hinge(s).

2) You can now set your door in the opening to mark hinge placement. ASD heavy doors are configured to have a P990WS polycarbonate sweep installed on the bottom. The gap needed for this sweep is 7/16". Therefore, you will need 2) 7/16" shims or setting blocks (wood and hard plastic/rubber are ok. No metal) to set the door on to ensure proper clearance for the sweep. Set the door on your blocks/shims and position it on the curb the same distance in from outside edge of curb as the inline panel. (Fig.F)

## Setting Blocks For Door Example

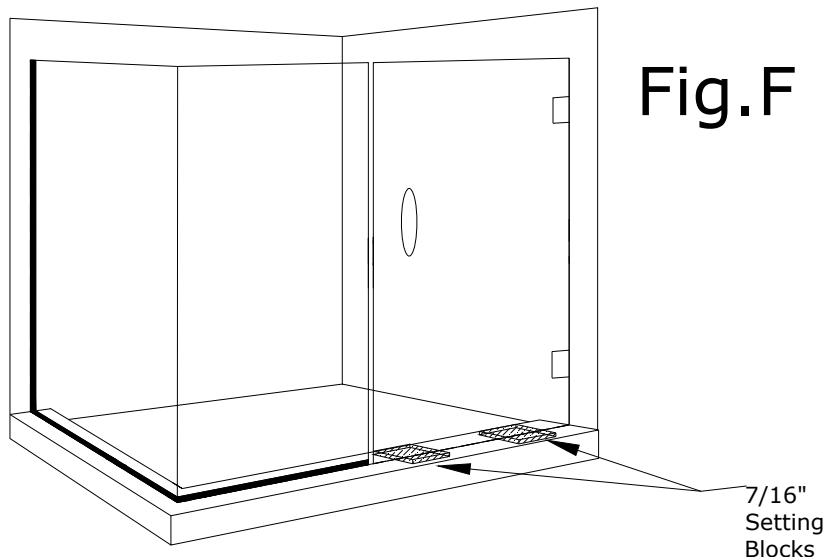

3) Align the door with the inline panel. This should be plumb. Also, the height of all three panels should match. Then, mark the outside screw holes of the hinge back plates. You will need an assistant to mark the inside holes or, if one man is installing, you will need an extra back plate of the hinge you are using to use as a template to mark the 2 inside holes after you have removed the door.

4) Drill holes in wall using a 3/16" masonry drill bit. After drilling all holes, follow with a 1/4" masonry bit. Insert green 1/4" wall anchors. Cut anchors flush to tile surface if they do not fully insert. (Note: there should **always** be wood backing in the wall to secure screws to).


5) Set door back onto setting blocks in the opening and line up door to inline panel. The holes you drilled should match up with back plate holes. With hinges against the wall, use a drill with a 6" #2 Phillips screw bit to secure door to wall. After door is

secured, remove setting blocks to check swing of door and make adjustments as necessary.

### **Door Pull**

- 1) Take the two stud head mounting screws and sleeve one clear washer on each screw. Next, insert the clear grommets into the holes in the door. From the outside of the door, push the thread of the screws through the grommets in the holes in the glass. On the inside of the door, sleeve a clear washer onto the screws.
- 2) Take the pull that has the threaded hole in the end and begin to thread the top screw into it and then the bottom screw. Tighten the stud head screws down with a screwdriver (not a drill). This pull will be on the inside of the door.
- 3) Place the remaining pull, with the large holes and set screw, onto the stud heads of the screws. Tighten the set screws with Allen wrench provided.

## Back To Back Pull

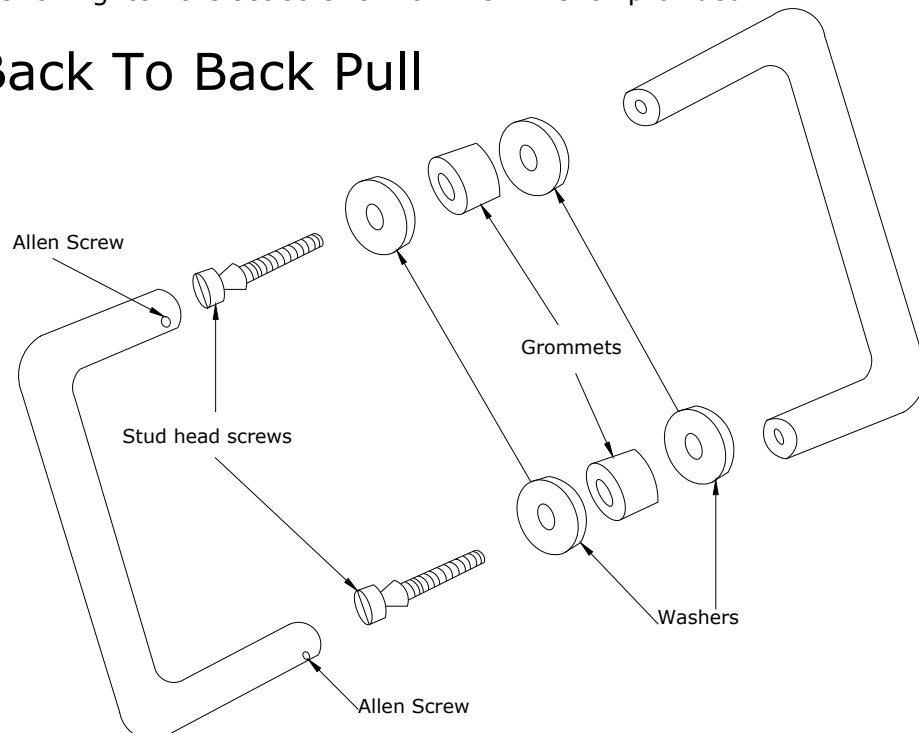

**\*\*When Applicable\*\***

(in some applications there may not be room for seals and or sweeps)


---

### **Directions for SDTDF Double Fin, SDTJ-SDTB Bulb Seal, SDDTNL "L" Seal**

When installing seals the glass edges should be clean and free from any dirt or hand oil etc... as these will prohibit adhesion. Glass cleaner will do.

Vertical seals will be applied to the edge of the glass using a VHB (very high bond) tape.

Apply VHB tape to edge of glass by adhering it top to bottom, gradually unrolling the tape as you slowly move from top to bottom. Apply the full length of glass. Cut flush to the bottom of door glass.

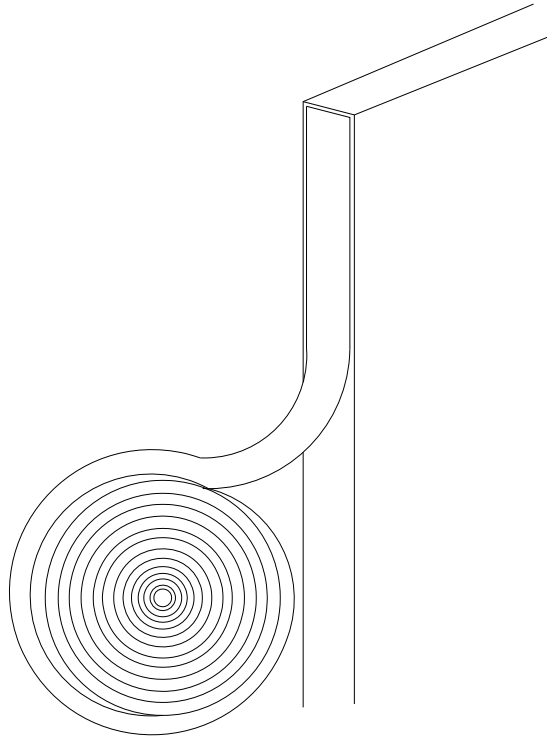

Then remove protective layer from other side and attach seal to the tape surface. Press on by hand. Cut flush to the bottom of the door using pliers-type cutter, scissors, or razor knife. The VHB tape will gain strength and achieve full bond within 72 hours.

Adjust door accordingly to achieve optimum seal.

#### **Directions for P990WS**

- 1) Measure and cut seal to appropriate size using miter saw or hacksaw.
- 2) Place over bottom edge of door. Then, using a plastic covered mallet, gently tap on bottom sweep until it is fully on. Make adjustments as needed.
- 3) Silicone ends and horizontal seams from glass to plastic.


#### **Silicone Application**

Once you confirm alignment of glass and everything is set, you need to apply a cap bead of clear 100% silicone around perimeter of u-channel edge where it meets the glass, both inside and out. Apply a small bead where u-channel meets installation surface, both inside and out. Finally apply a small bead in the inside corner of the butt joint.



# ARIZONA | SHOWER DOOR

HG-I-HP-38

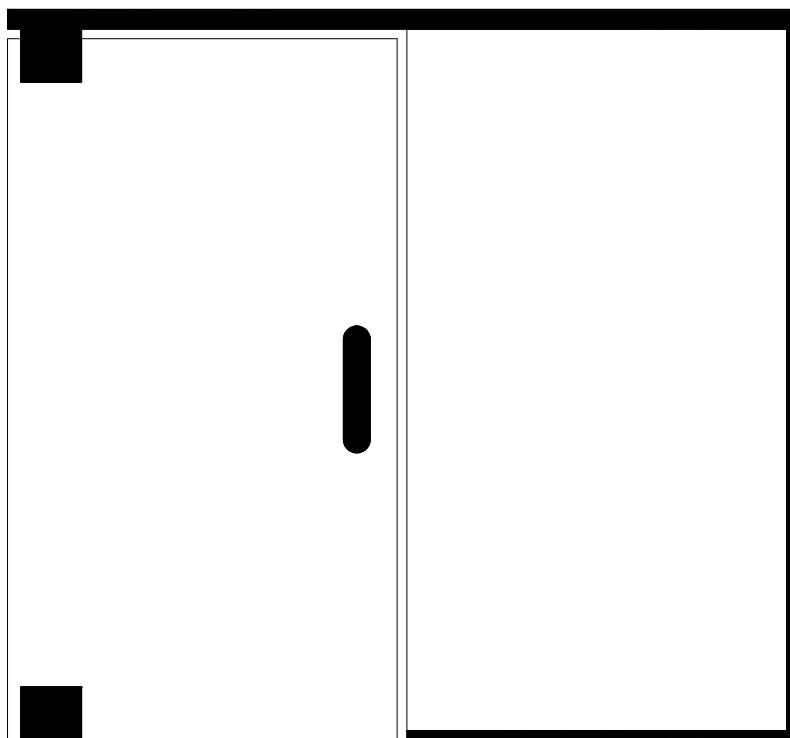


Please read instructions completely before proceeding to get an overview of the installation.

**Brief Outline of Installation Procedures**

- A) Prior measure of opening with centerline dimensions. For necessary accuracy a 2', 4', and 6' level should be used on appropriate surfaces as heavy frameless units are designed to be installed level and plumb.(Fig.A)

## Plumb and Centerline Example

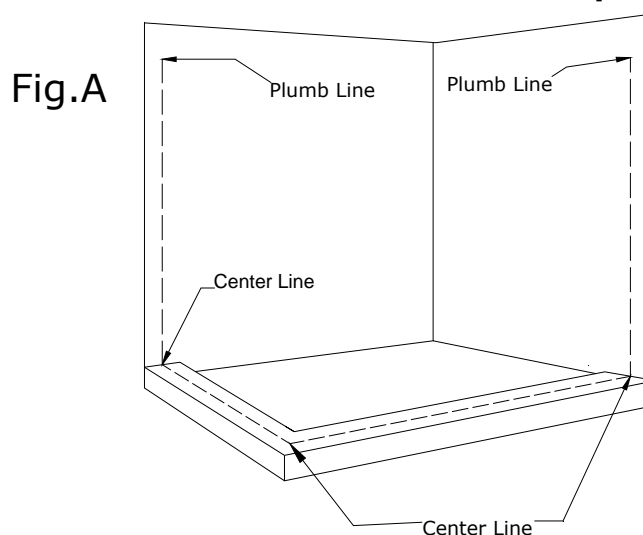


- B) Mark centerline plumb line for BWB2 Brass Wall Mount header clamp location  
C) Preparing u-channel for installation i.e. cutting, drilling  
D) Installing channel  
E) Setting panels  
F) Cutting, Assembling, and Installing Header  
G) Mounting Hinges  
H) Setting door  
I) Mount door pull  
J) Clean glass  
K) Install seals and adjust door if needed  
L) Apply silicone


**BWB2 plumb line**

On both walls, take a level and make a pencil line up the wall corresponding to the centerline of the glass. Then place a mark on the center line, 1/4" down from the top

of where the header will finish (the overall height of the unit)(Fig.B).

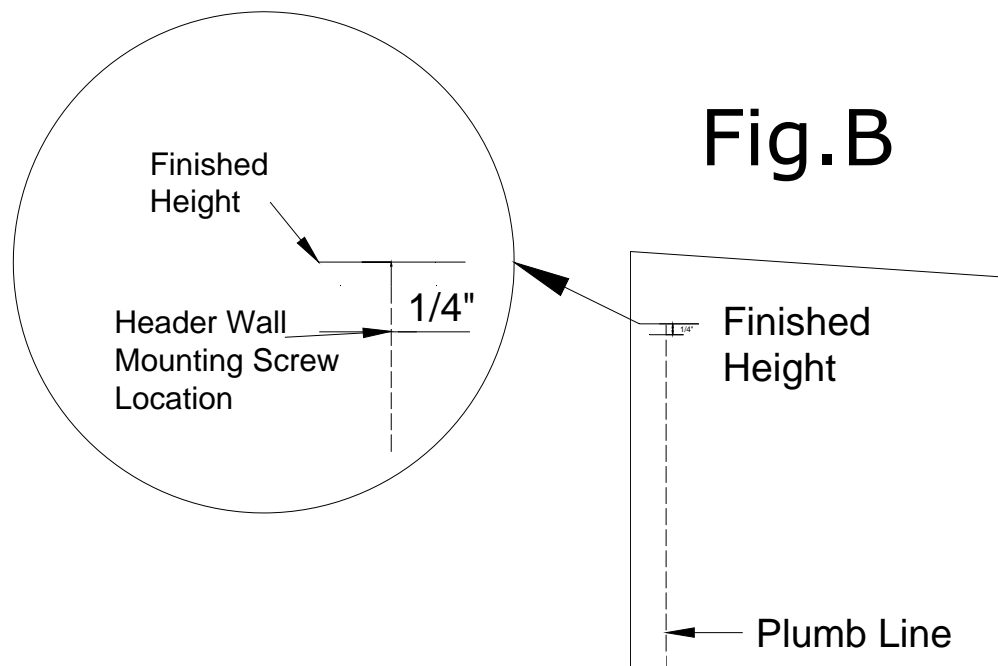

This will be the location of the wall mounting screw(Fig.C).

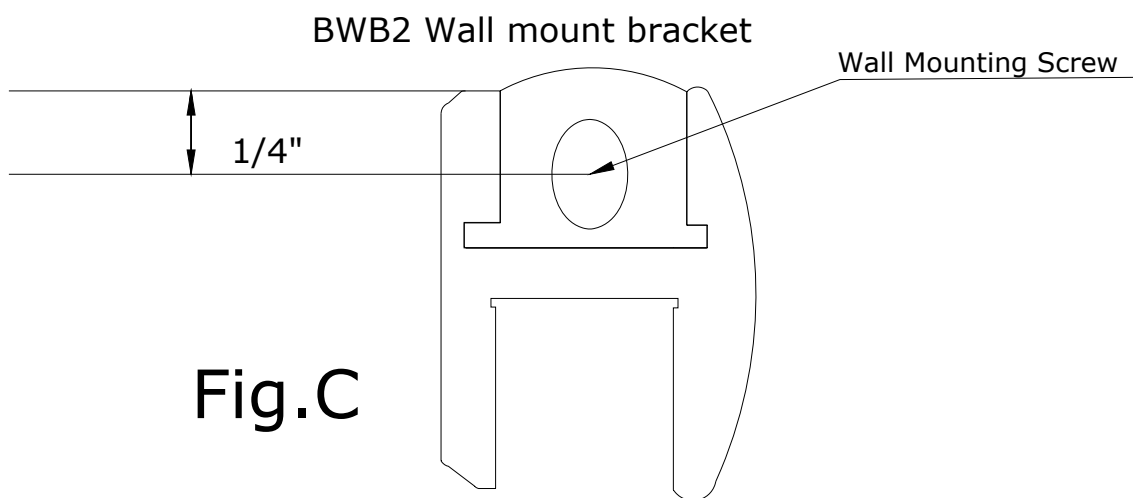

You may drill these now or wait until glass is set to test fit header and hole locations. Drilling instructions are in the cutting, assembling, and installing header section.


### **Cutting U-channel**

Using the center line dimensions used to figure glass sizes you can figure u-channel cut sizes.

Use the following formulas to get cut sizes.(Fig.D)

## Door Inline Channel Application

Fig.D

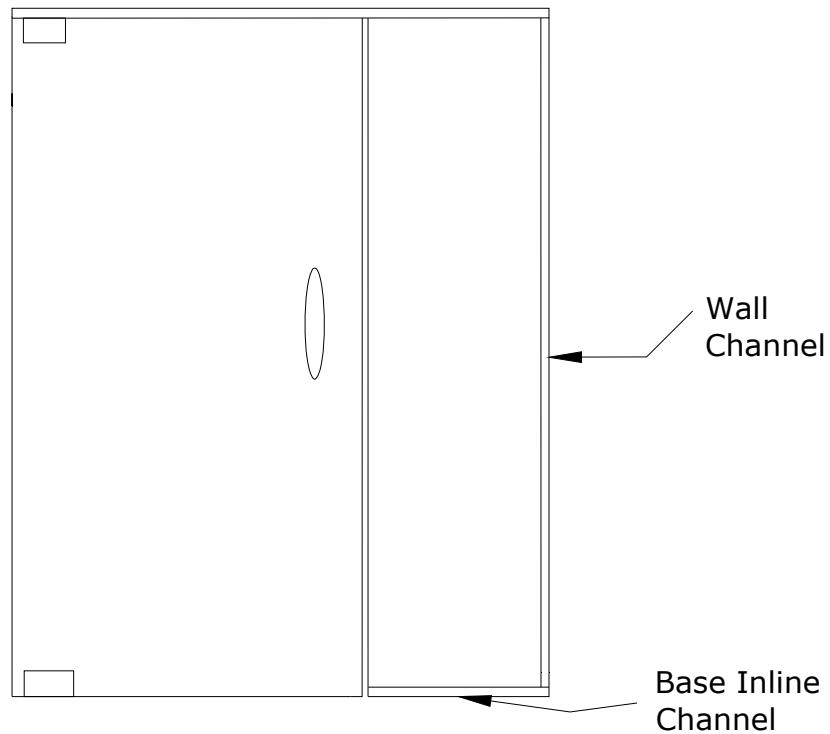

Base inline channel: bottom dimension of inline panel +  $\frac{5}{16}$ "

Wall channel: actual height of glass -  $\frac{3}{16}$ "

\*Oil Rubbed Bronze u-channel does not fit inside the header. The formula for ORB is:  
Overall height of Unit - 2"


It will be helpful to preserve the marks from the time of the measure to the day of the install so the installer has reference marks.

### Installation of Channel

1) Drill **base inline channel** for weep holes,(Fig.E) as close to the bottom as possible, on the inside wall of the channel with a  $\frac{3}{16}$ " drill bit approximately 6 inches in from each end. Two holes are sufficient. If channel is under 12" only one hole is necessary.

## Weep Hole Location


Fig.E

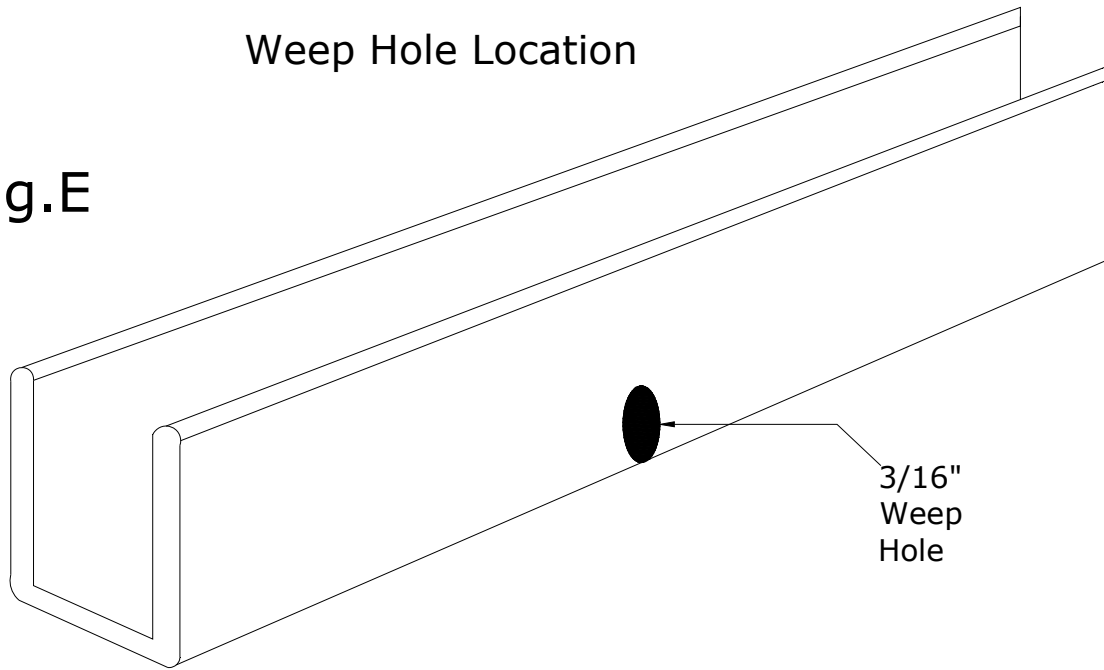

2) Drill bottoms of all channels with 3/16" holes approximately 12" apart for mounting to surface.

3) Align all channels based on the centerline marks that were made at the time of measure. Wall channel will set on top of base channel.(Fig.F) Mark the holes to be drilled. Mark the holes while you hold the vertical channel plumb with a level, or use blue tape to hold it plumb.

Fig.F

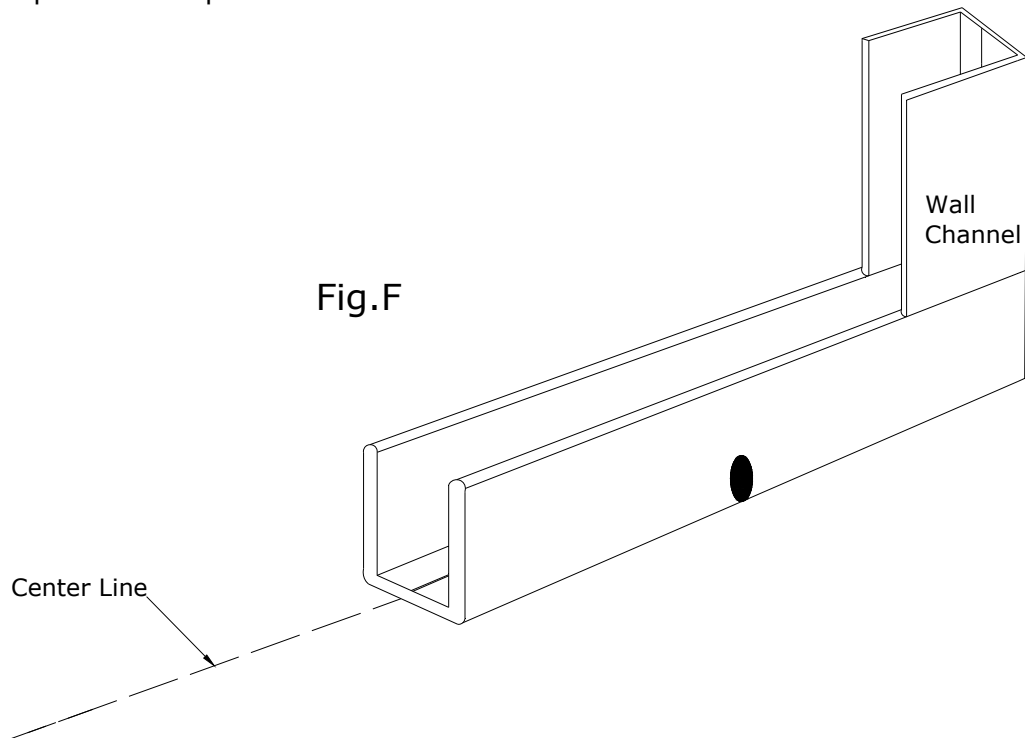


4) After holes are marked, drill holes with 3/16" masonry drill bit. Apply silicone in holes on horizontal surface. Insert 3/16" plug anchors in all holes.

5) Secure channel with #8x1 flathead screws and drill. Remember that vertical channels will sit on horizontal channels where they meet. Apply blob of silicone over screw heads in horizontal channels and in all corners and seams.

### **Setting Glass Panels**

1) Place 1/4" setting blocks in channels, one on each end where glass will sit.

2) **Inline Panel:** Using a glaziers suction cup, set inline panel over base channel and lower down into the channel and down onto setting blocks being very careful not to set glass on the metal.(Fig.G) Use a level to check plumb and level of panel. If outages were accurately accounted for in the measure, **the panel should be plumb and level**. Move panel into wall channel with exposed polished edge on glass flush with open end of channel.

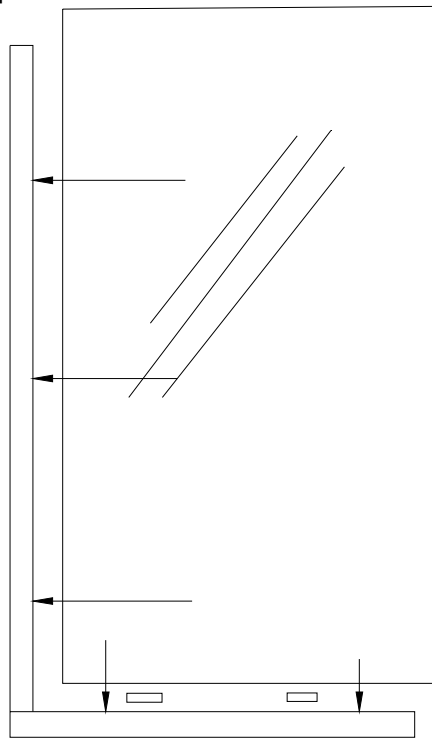

**Fig.G**

Set panel in wall channel first,  
then down into bottom channel

### **Cutting Assembling and Installing Header**

(1) Measure the distance wall to wall over the top of the glass. Cut your header to this length.

2) Now you can place the 2) BWB2 Brass Wall Brackets into the ends of the header and position them flush to the end of the header. The hole in the end of the bracket will face the wall that you are attaching your header to. With the brackets positioned correctly, firmly tighten the Allen set screws in the bracket until they are secured.


3) **Installing Header:** Now that the header has been cut and assembled, it can be installed. To test fit the header, use two 1" strips of the header vinyl and place on

the top of the panel. Place the header down on top of the glass to check the fit. Make any necessary adjustments. Header should be level and allow clearance for the door glass including the 7/16" setting blocks. The holes in the BWB2 should match the marks you made earlier for the wall mounting screws. Remove the header. Remove the panel. (You have the option of drilling the holes when they were marked earlier in the process, when the BWB2 plumb lines were made and the glass had not been set yet). Drill with a 3/16" masonry bit. Follow with a 1/4" masonry bit and insert a 1/4" wall anchor flush to installation surface. Then put a full length strip of clear vinyl on top of the glass and install the header. Do not push header down too far or the vinyl will fold up into the header and then you will have to start over. The header will slide down approximately 3/8" over the top of the glass. Secure with the 2" screws provided.


### **Mounting Hinges**

#### **Mounting Top Hinge: (Fig.J)**

Determine which side you want to hinge from. If the hinge is on the panel side then measure over 2" (presuming it is plumb) then make a pencil mark on the outside of the header. If the hinge is on the wall side then measure over 2" (+ or - wall outage) from the wall then make a mark on the outside of the header with a pencil. This is the location of where you will drill a 1/4" hole vertically through the center of the header cross web. Remove the base plate from one of the hinges using a #2 Phillips screwdriver, then, insert the square base of the pin into the Header Adapter Block. With hinge inserted, slip the Adapter Block up into the header. While holding the hinge in place secure it from above with the shorter of the two pan head screws that came with the Header Adapter Block. This will take a #3 Phillips head screwdriver. (Disregard the long notch in the Adapter Block as it is for a clip not used in this application.) Measure the open channel space above the door, cut and install the Snap In Filler Insert.

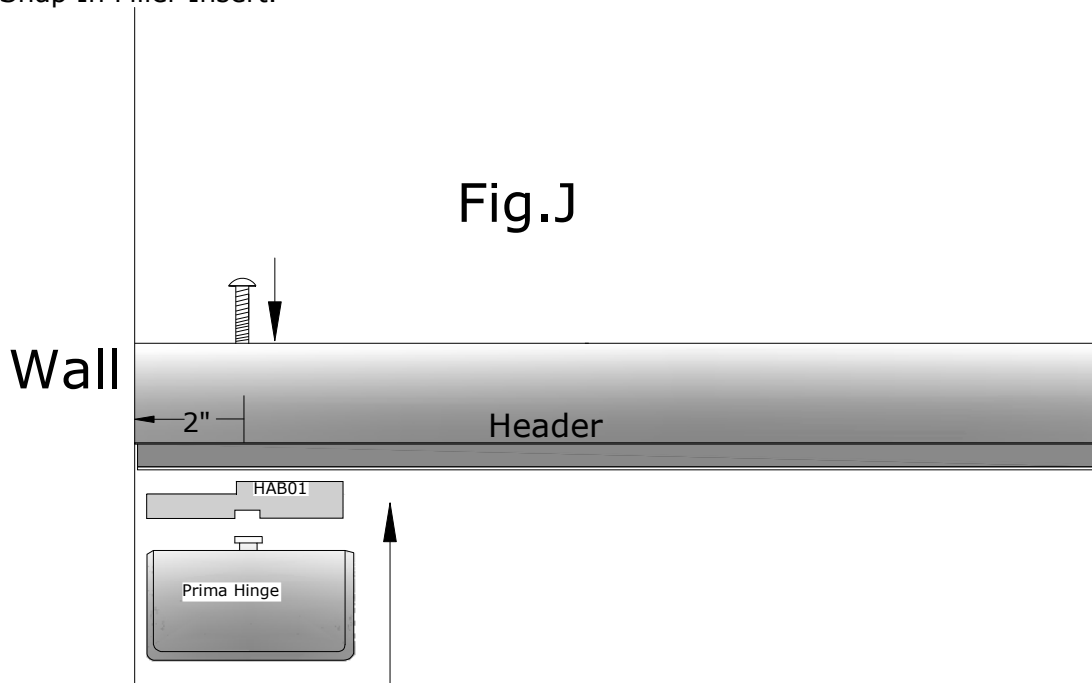

**Mounting Bottom Hinge:** (Fig.K) Measure 2" over from the inline panel or the wall, depending on your application, on the centerline. This will be the center of the pin. Holding the back plate of the hinge, turn the hinge 90° so you can mark the 2 hinge holes on the curb (or use the back plate that was removed from the top hinge, as your template). Mark the holes. Drill holes in curb using a 3/16" masonry drill bit. After drilling the two holes, follow with a 1/4" masonry bit. Insert 1/4" wall anchors. Cut anchors flush to tile surface if they do not fully insert. Secure hinge with the screws provided.

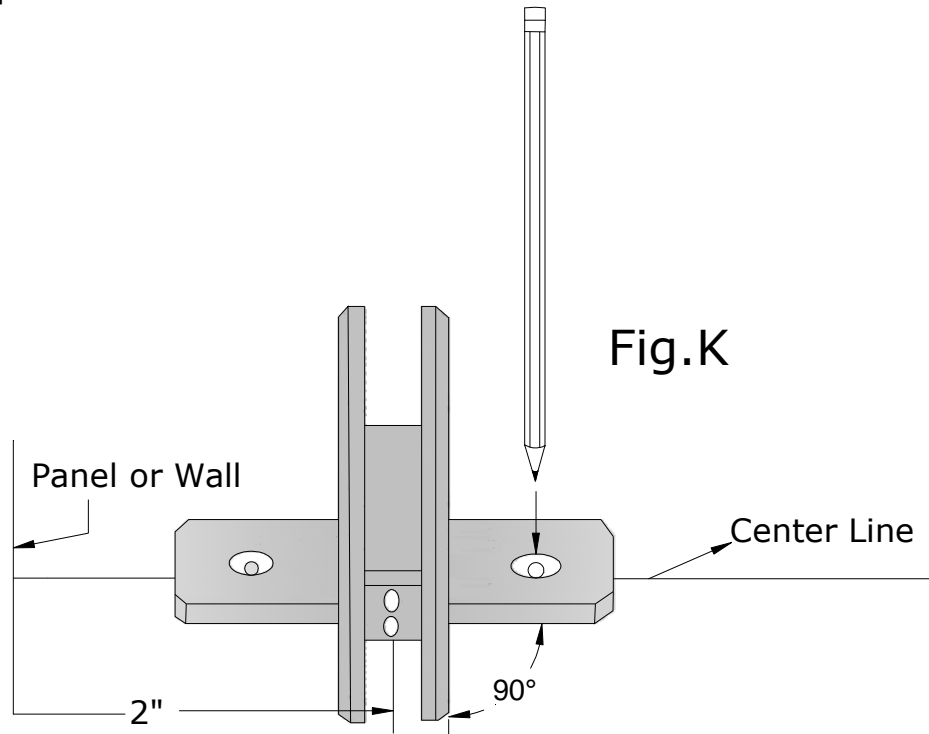


### **Setting Door**

This will take two people

**Installing Door:** The glass and gaskets should be free of grime, grease, oils or anything else that would prevent the hinge and gasket from making good contact with glass. Use glass cleaner to remove these things. Remove the cover plates and screws from the hinges. Apply the gaskets to both sides of the door around the hinge cutouts. Apply light pressure so they will stay in place. Place 2) 7/16" setting blocks on the curb to give the proper clearance for the sweep.



# Setting Blocks For Door Example

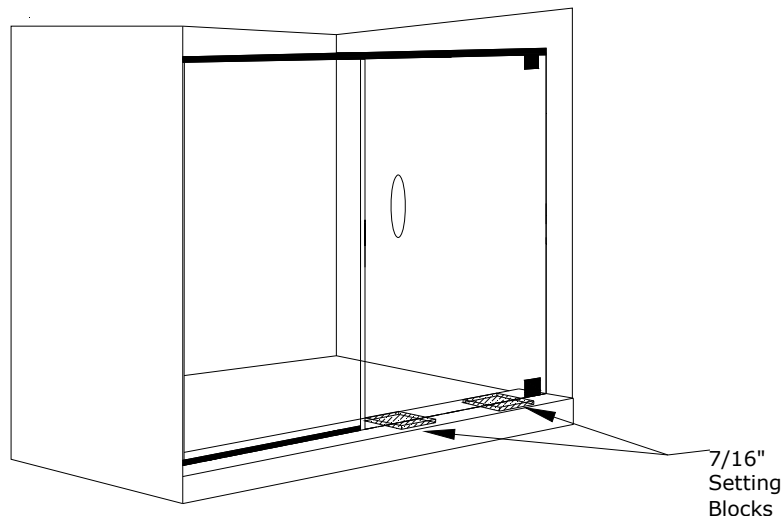


With the hinges in a closed position, lift the door into the shower top first then down onto the setting blocks. Slowly push the door fully up against the top and bottom hinge. Check the alignment around door. Gaps should be even and consistent. Align the door, then, have an assistant hold the door in place with a glaziers suction cup. After everything is aligned, secure the top inside cover plate with the supplied machine screws. **Note: Always tighten machine screws by hand!** Use a #3 Phillips head screwdriver for this. When tightening the screws alternate from one screw to the other so the pressure is evenly applied to the inside cover plate. Repeat the above process on the bottom hinge.

## Door Pull

- 1) Take the two stud head mounting screws and sleeve one clear washer on each screw. Next, insert the clear grommets into the holes in the door. From the outside of the door, push the thread of the screws through the grommets in the holes in the glass. On the inside of the door, sleeve a clear washer onto the screws.
- 2) Take the pull that has the threaded hole in the end and begin to thread the top screw into it and then the bottom screw. Tighten the stud head screws down with a screwdriver (not a drill). This pull will be on the inside of the door.

3) Place the remaining pull, with the large holes and set screw, onto the stud heads of the screws. Tighten the set screws with Allen wrench provided.

## Back To Back Pull

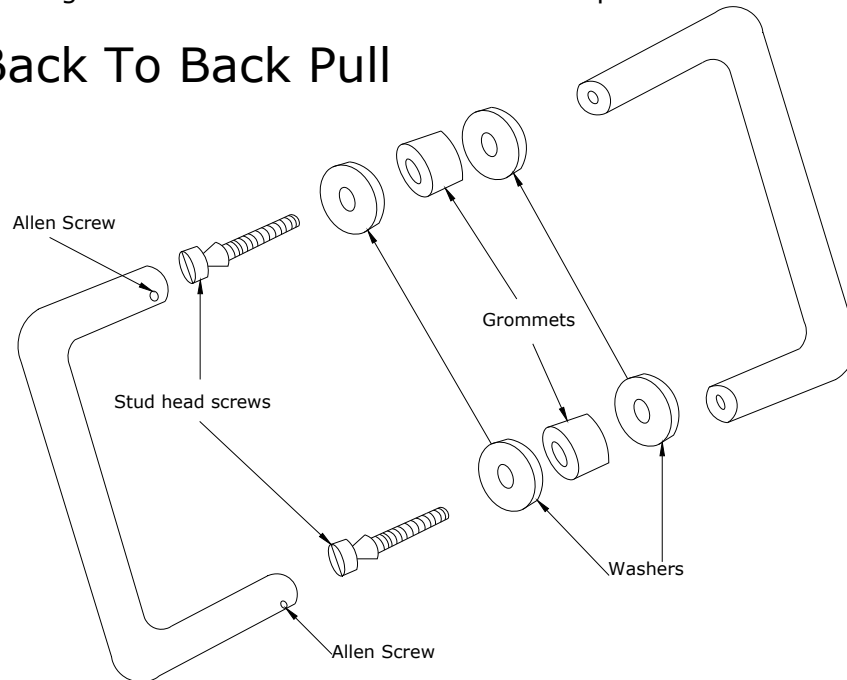

**\*\*When Applicable\*\***

(in some applications there may not be room for seals and or sweeps)

---


### **Directions for SDTDF Double Fin, SDTJ-SDTB Bulb Seal, SDDTNL "L" Seal**

When installing seals the glass edges should be clean and free from any dirt or hand oil etc... as these will prohibit adhesion. Glass cleaner will do.

Vertical seals will be applied to the edge of the glass using a VHB (very high bond) tape.

Apply VHB tape to edge of glass by adhering it top to bottom, gradually unrolling the tape as you slowly move from top to bottom. Apply the full length of glass. Cut flush

to the bottom of door glass.

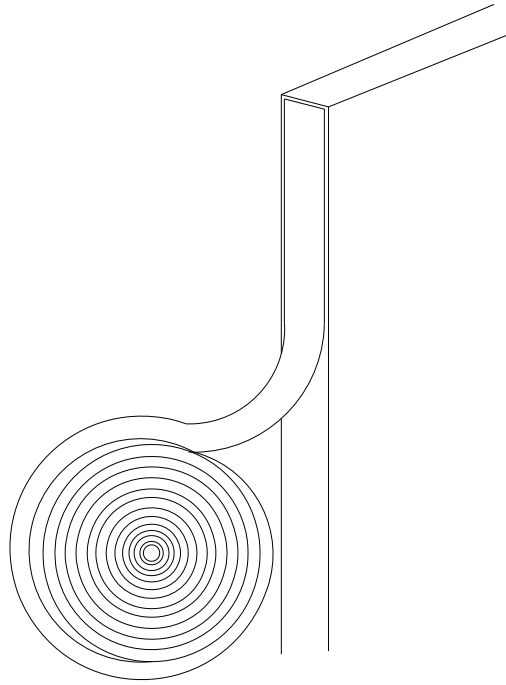

Then remove protective layer from other side and attach seal to the tape surface. Press on by hand. Cut flush to the bottom of the door using pliers-type cutter, scissors, or razor knife. The VHB tape will gain strength and achieve full bond within 72 hours.

Adjust door accordingly to achieve optimum seal.

#### **Directions for P990WS**


- 1) Measure and cut seal to appropriate size using miter saw or hacksaw.
- 2) Place over bottom edge of door. Then, using a plastic covered mallet, gently tap on bottom sweep until it is fully on. Make adjustments as needed.
- 3) Silicone ends and horizontal seams from glass to plastic.

#### **Silicone Application**

Once you confirm alignment of glass and everything is set, you need to apply a cap bead of clear 100% silicone around perimeter of u-channel edge where it meets the glass, both inside and out. Apply a small bead where u-channel meets installation surface, both inside and out. Finally apply a small bead from top to bottom in the inside corner of the butt joint.

# ARIZONA SHOWER DOOR

HG-NEO-HP-38

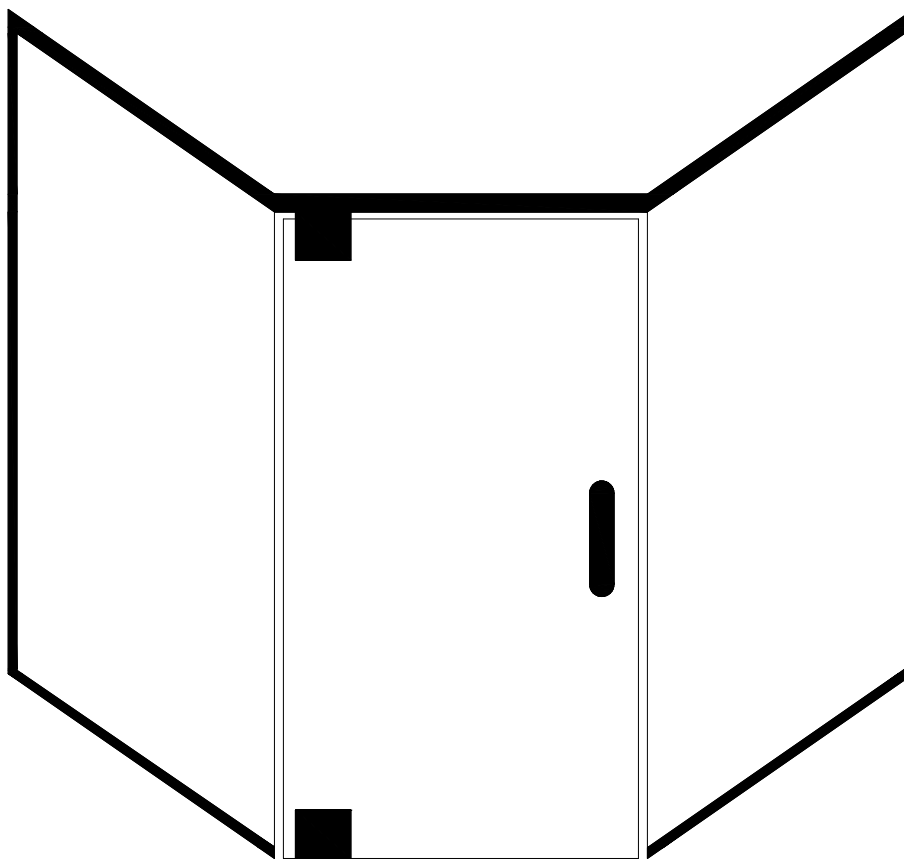


Please read instructions completely before proceeding to get an overview of the installation.

**Brief Outline of Installation Procedures**

- A) Prior measure of opening with centerline dimensions. For necessary accuracy a 2', 4', and 6' level should be used on appropriate surfaces as heavy frameless units are designed to be installed level and plumb.(Fig.A)


Fig.A

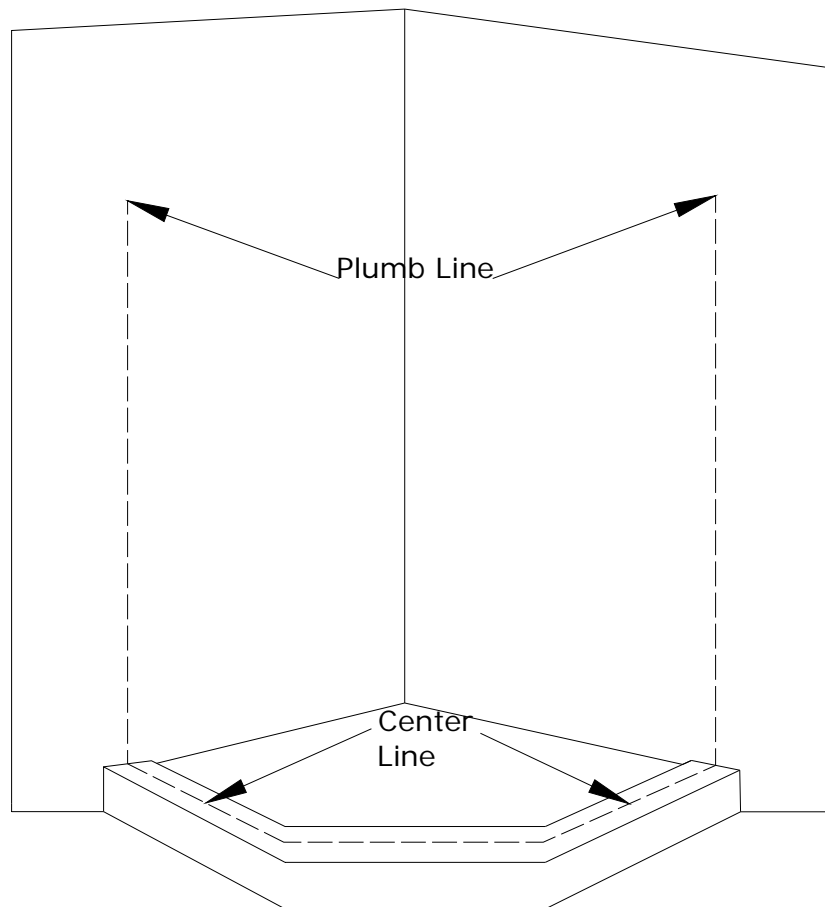


- B) Mark centerline plumb line for BWB2 Brass Wall Mount header clamp location
- C) Preparing u-channel for installation i.e. cutting, drilling
- D) Installing channel
- E) Setting panels
- F) Cutting, Assembling, and Installing Header
- G) Mounting Hinges
- H) Setting door
- I) Mount door pull
- J) Clean glass
- K) Install seals and adjust door if needed
- L) Apply silicone

### **BWB2 plumb line**

On each side wall where u-channel will be installed, take a level and make a pencil line up the wall corresponding to the centerline of the glass. Then place a mark on the center line, 1/4" down from the top of where the header will finish (the overall height of the unit. (Fig.B)

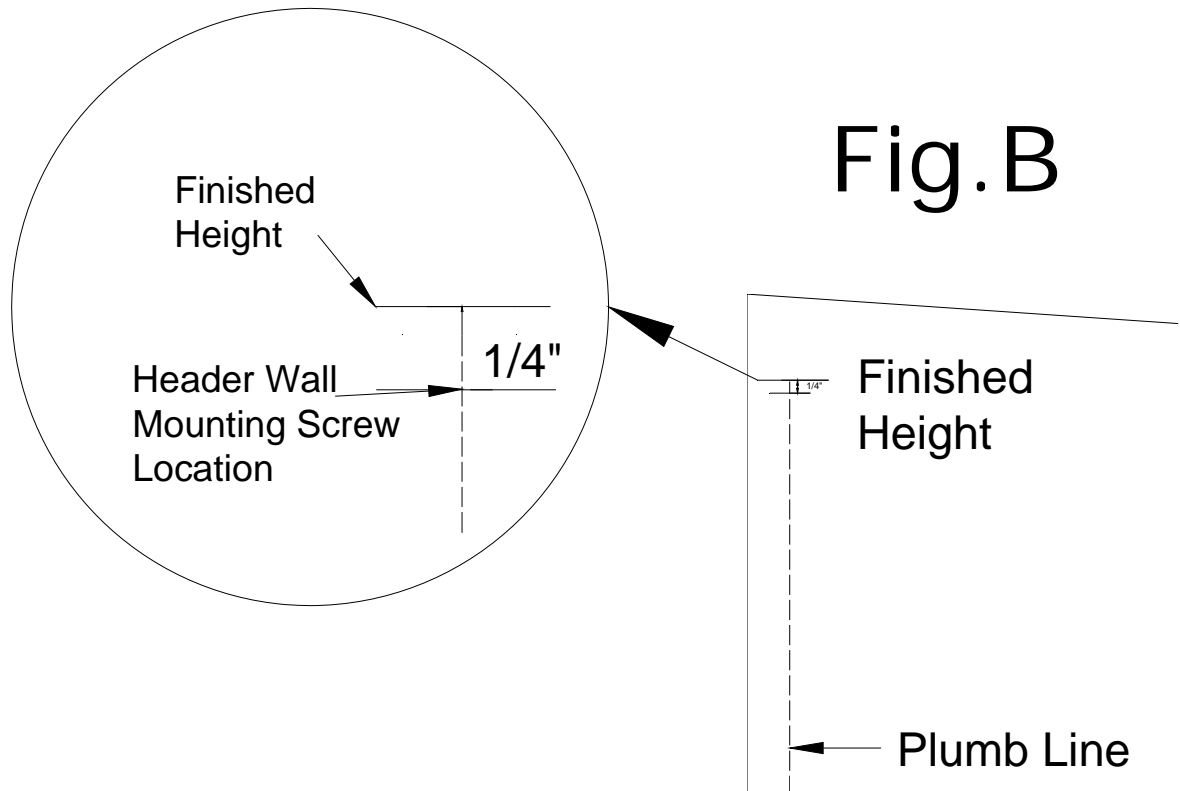

This will be the location of the wall mounting screws for the header. (Fig.C)

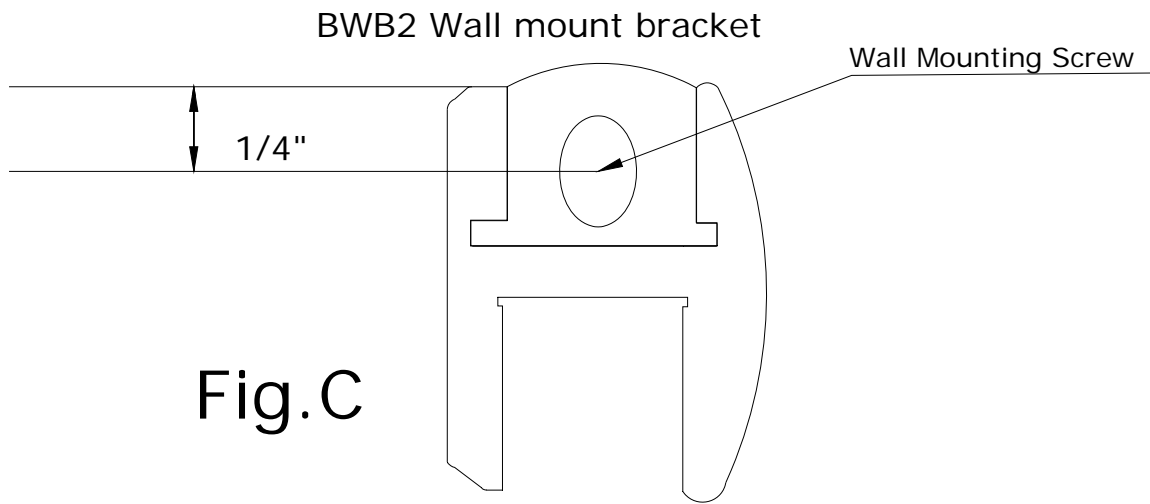


You may drill these now or wait until glass is set to test fit header and hole locations. Drilling instructions are in the cutting, assembling, and installing header section.

### **Cutting U-channel**

Using the center line dimensions used to figure glass sizes you can figure u-channel cut sizes. Use the following formulas to get cut sizes.

Base return channels: center line dimension + 1/8" (sq end to outside end of miter)(Fig.D)

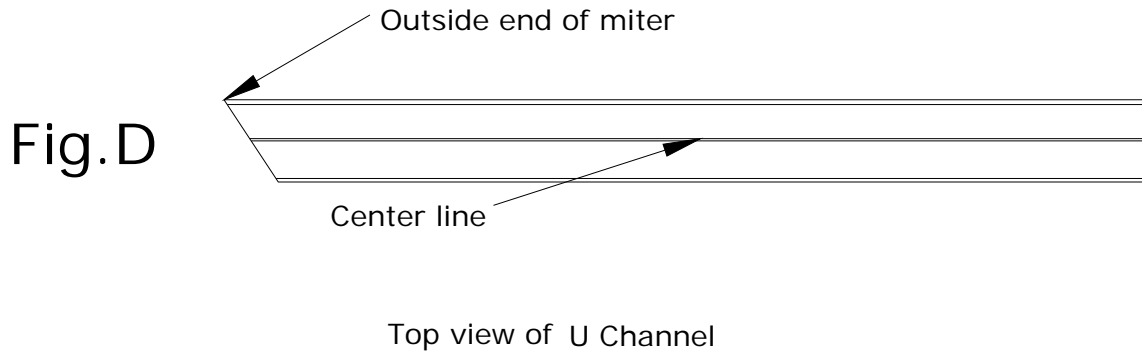

Wall channels: actual height of glass – 3/16" (sq end to sq end)

\*Oil Rubbed Bronze u-channel does not fit inside the header. The formula for ORB is:

Overall height of Unit – 2"

It will be helpful to preserve the marks from the time of the measure to the day of the install so the installer has reference marks.


You will also want to draw plumb line.

### **Installation of Channel**


1) Drill **base return channels** for weep holes,(Fig.E) as close to the bottom as possible, on the inside wall of the channel with a 3/16" drill bit approximately 6 inches in from each end. Two holes



are sufficient. If channel is under 12" only one hole is necessary.

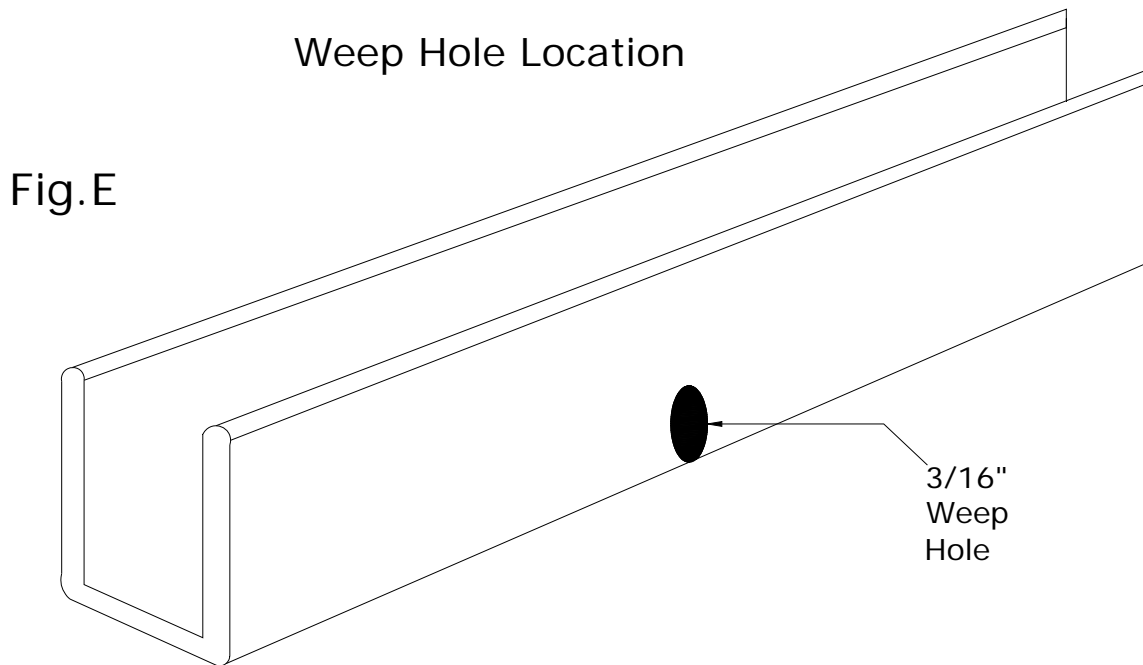

- 2) Drill bottoms of all channels with 3/16" holes approximately 12" apart for mounting to surface.
- 3) Align all channels based on the centerline marks that were made at the time of measure. Wall channel will set on top of base channel. (Fig.F)

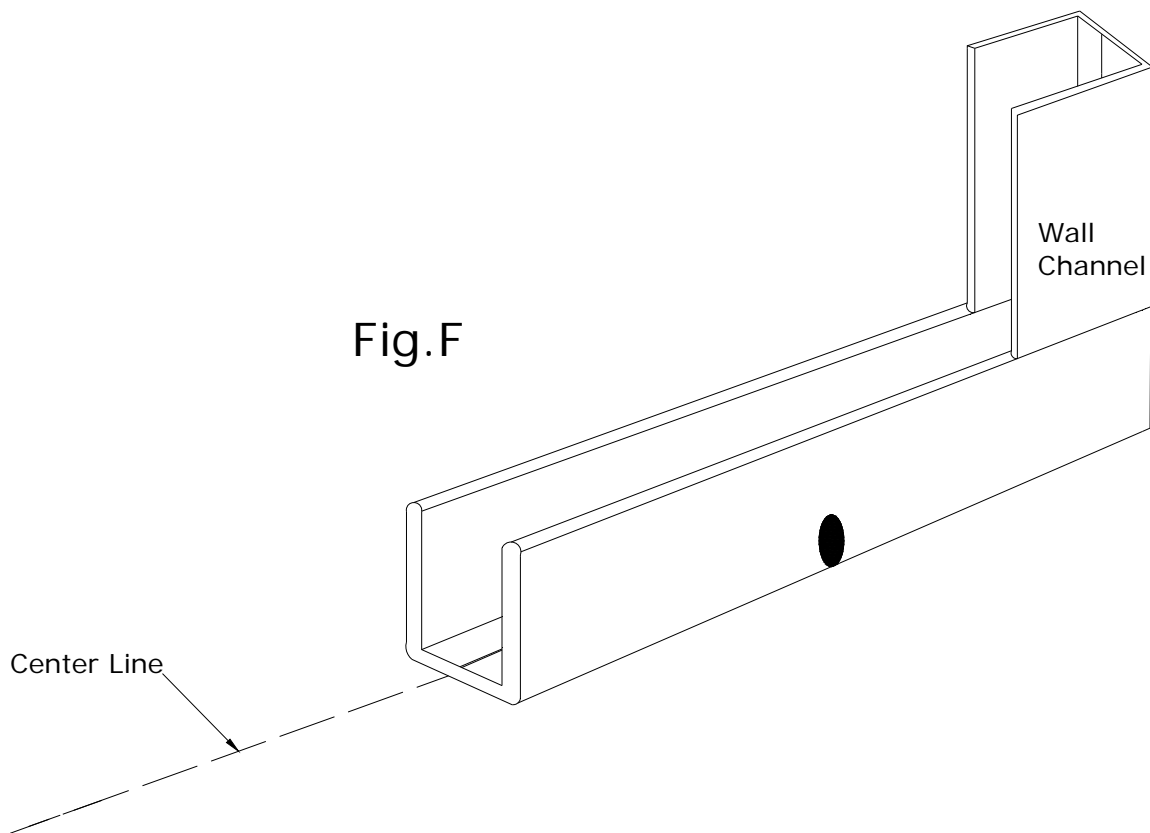

Mark the holes to be drilled (have an assistant hold the vertical channels plumb with a level while you mark the holes, or use blue tape to hold them plumb while you mark the holes).

4) After holes are marked, drill holes with 3/16" masonry drill bit. Apply silicone in holes on horizontal surface. Insert 3/16" plug anchors in all holes.

5) Secure channel with #8x1 flathead screws and drill. Remember that vertical channels will sit on horizontal channels where they meet. Apply blob of silicone over screw heads in horizontal channels and in all corners and seams.

### **Setting Glass Panels**

1) Place 1/4" setting blocks in channels, one on each end where glass will sit.

2) Return Panels: These directions apply for left and right panels. Using a glaziers suction cup, set neo angle return panel over base channel and lower down into the channel and down onto setting blocks being very careful not to set glass on the metal.(Fig.G)

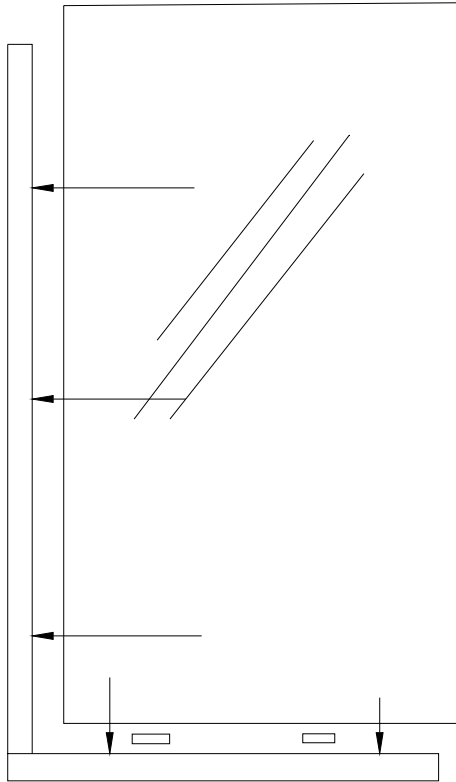


Fig.G

Set panel in wall channel first,  
then down into bottom channel

Use a level to check plumb and level of panel. If outages were accurately accounted for in the measure, **the panels should be plumb and level**. Move panel into place with mitered edge on glass flush with miter on open end of channel.

**Cutting Assembling and Installing Header**  
Fig.H)

Neo angle headers require 22-1/2° miters cut at the corners (if the corners are 135°), and 90° square cuts where they meet the wall (assuming the curb is 90° to the wall).


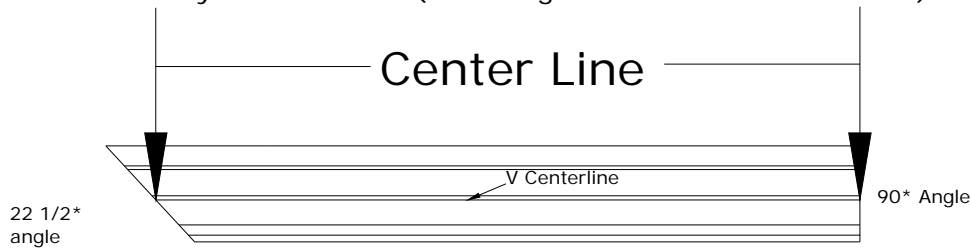


Fig.H  
Top View of Header  
and Glass

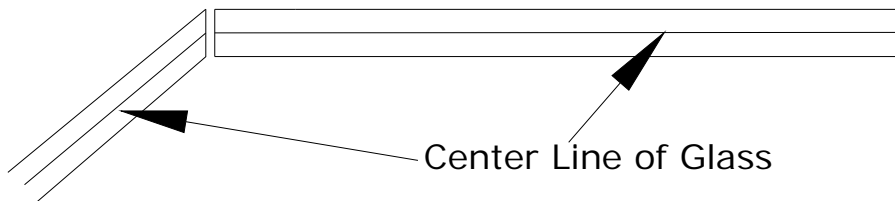

The top side of the header (shallow side) has a v line running the length of the extrusion. This line matches the center line of the glass. All cutting measurements should be taken from point to point along this line.


1) Return Headers: Assuming that the panels are level and plumb, measure from the wall along the center of the top of the glass over to the miter. This will be your cut size. Follow the same procedure for the other header.

2) Center header: Measure distance between the two return panels at the center points of each panel. This dimension will be the centerline dimension of your header, miter to miter. (Remember, this part of the header will need a 22-1/2° miter on each end).

3) Assembling Header: When the header is assembled it should be done on a surface that will not damage or scratch it. Assemble header using the 2) BHC135 Brass Header Corners. Insert them into the slot in each side of the center header. Slide the return headers onto the other end of the corners. Hold the corners together then firmly tighten the Allen set screws in the bracket until they are secured.


Now you can place the 2) BWB2 Brass Wall Brackets into the ends of the header and position them flush to the end of the header. The hole in the end of the bracket will face the wall that you are attaching your header to. With the brackets positioned correctly, firmly tighten the Allen set screws

in the bracket until they are secured.

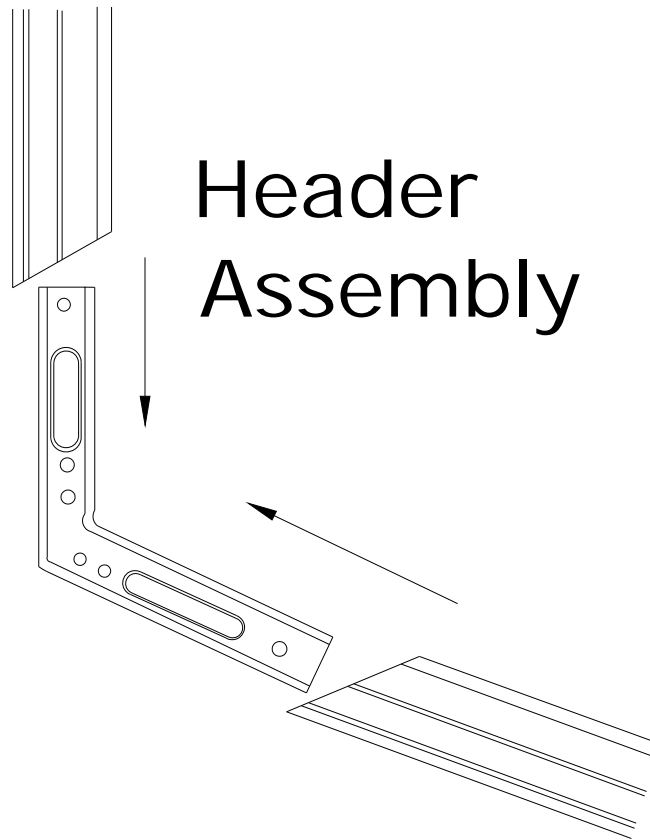

4) Installing Header: Now that the header has been cut and assembled, it can be installed. To test fit the header, use two 1" strips of the header vinyl and place on the top of each panel. (Fig.1)

Fig. I

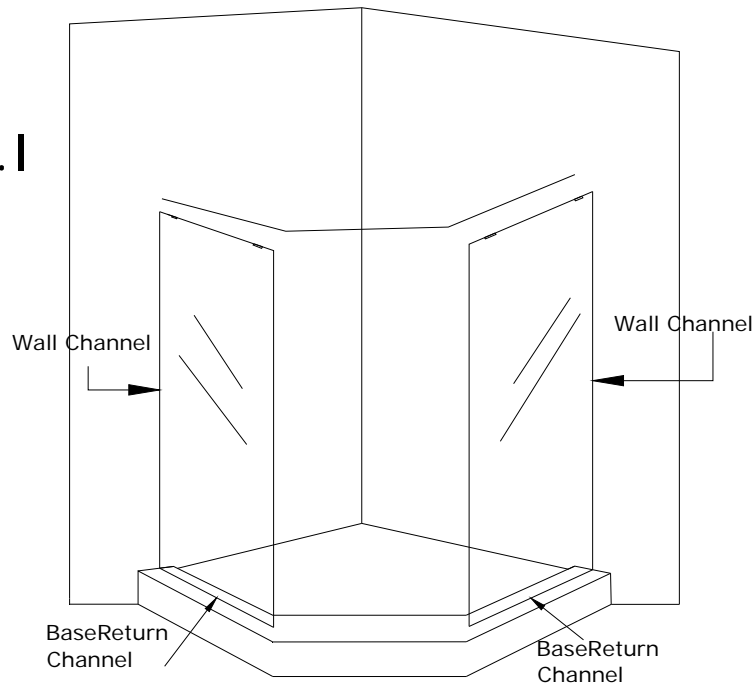


Place the header down on top of the glass to check the fit. Make any necessary adjustments. Header should be level and allow clearance for the door glass including the 7/16" setting blocks. The holes in the BWB2 should match the marks you made earlier for the wall mounting screws. Remove the header. Remove the panel. (You have the option of drilling the holes when they were marked earlier in the process, when the BWB2 plumb lines were made and the glass had not been set yet). Drill with a 3/16" masonry bit. Follow with a 1/4" masonry bit and insert a 1/4" wall anchor flush to installation surface. Then put a full length strip of clear vinyl on top of the glass and install the header. Do not push header down too far or the vinyl will fold up into the header and then you will have to start over. The header will slide down approximately 3/8" over the top of the glass. Secure with the 2" screws provided.

### **Mounting Hinges** Standard Configuration

**Marking Placement:** To mark the placements of the hinges you must first make sure that the return panels are plumb. If not, then the gaps between the panels will be inconsistent and vary from top to bottom causing a problem when trying to apply the seals. It will also not look good.

Mounting Top Hinge: (Fig.J)

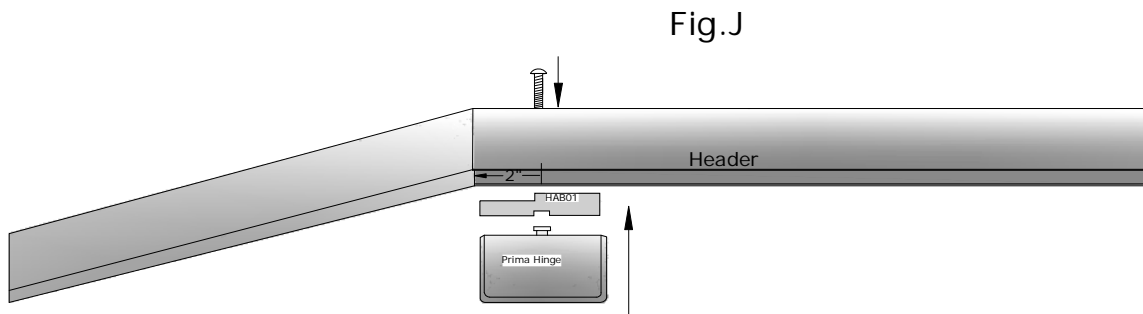


Determine which side you want to hinge from, then, measure over from the panel 2" then make a mark on the outside of the header with a pencil. This is the location of where you will drill a 1/4" hole vertically through the center of the header cross web.

Remove the base plate from one of the hinges using a #2 Phillips screwdriver, then, insert the square base of the pin into the Header Adapter Block. With hinge inserted, slip the Adapter Block up into the header. While holding the hinge in place secure it from above with the longer of the two pan head screws that came with the Header Adapter Block. This will take a #3 Phillips head screwdriver. (Disregard the long notch in the Adapter Block as it is for a clip not used for this application.)

Measure the open channel space above the door, cut and install the Snap In Filler Insert.

Mounting Bottom Hinge: (Fig.K) Measure 2" over from the return panel on the centerline. This will be the center of the pin. Holding the back plate of the hinge, turn the hinge 90° so you can mark the 2 hinge holes on the curb (or use the back plate that was removed from the top hinge, as your template). Mark the holes. Drill holes in curb using a 3/16" masonry drill bit. After drilling the two holes, follow with a 1/4" masonry bit. Insert 1/4" wall anchors. Cut anchors flush to tile surface if

they do not fully insert. Secure hinge with the screws provided.

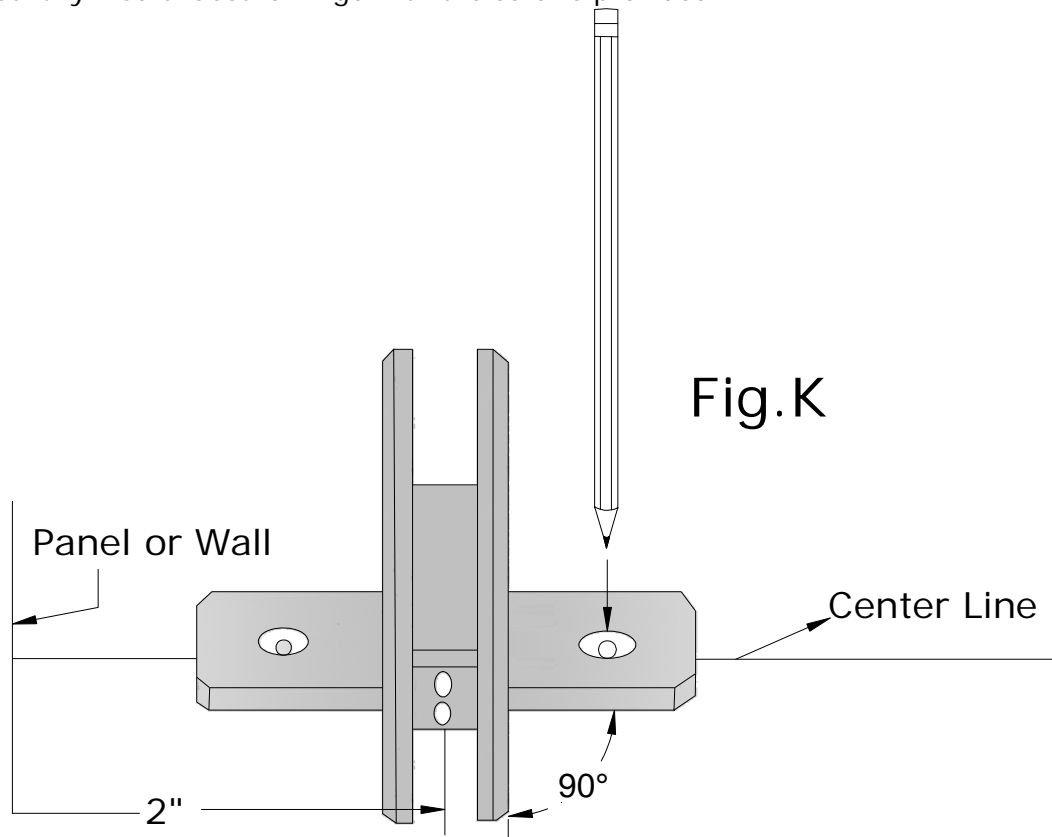


### **Setting Door**

This will take two people

**Installing Door:** The glass and gaskets should be free of grime, grease, oils or anything else that would prevent the hinge and gasket from making good contact with glass. Use glass cleaner to remove these things. Remove the cover plates and screws from the hinges. Apply the gaskets to both sides of the door around the hinge cutouts. Apply light pressure so they will stay in place. Place 2) 7/16" setting blocks on the curb to give the proper clearance for the sweep. With the hinges in a closed position, lift the door into the shower top first then down onto the setting blocks. Slowly push the door fully up against the top and bottom hinge. Check the alignment around door. Gaps should be even and consistent. Align the door, then, have an assistant hold the door in place with a glaziers suction cup. After everything is aligned, secure the top inside cover plate with the supplied machine screws. **Note: Always tighten machine screws by hand!** Use a #3 Phillips head screwdriver for this. When tightening the screws alternate from one screw to the other so the pressure is evenly applied to the inside cover plate. Repeat the above process on the bottom hinge.




# Setting Blocks For Door Example

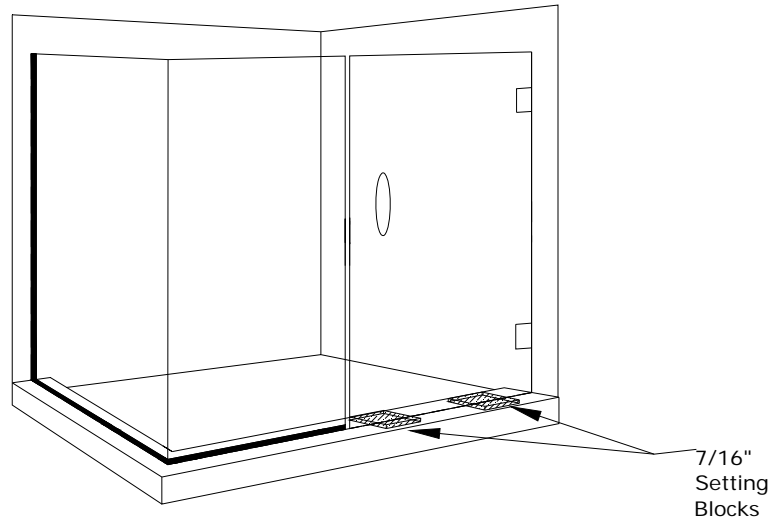

## **Door Pull**

### Back To Back Pull

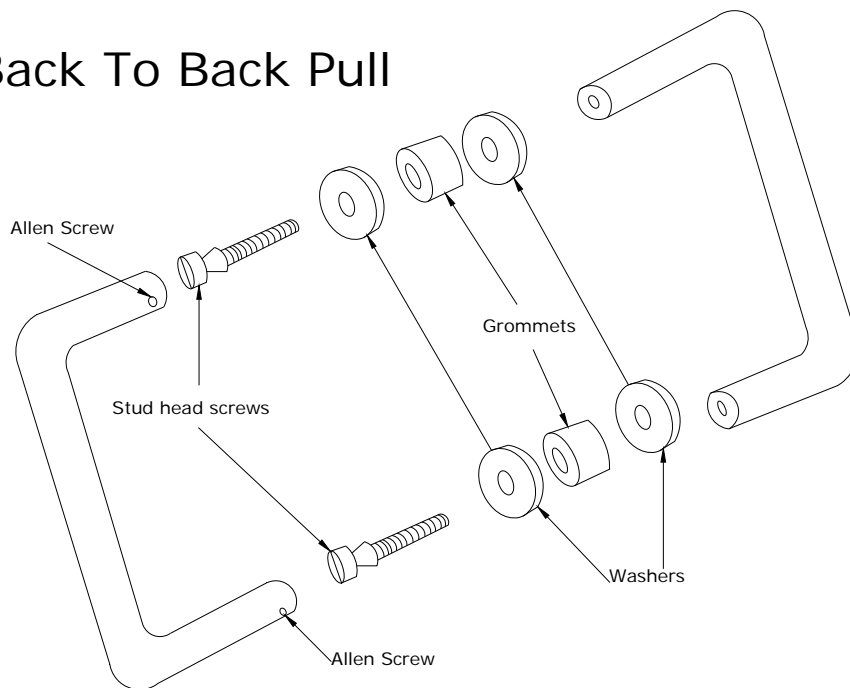

1) Take the two stud head mounting screws and sleeve one clear washer on each screw. Next, insert the clear grommets into the holes in the door. From the outside of the door, push the thread of the screws through the grommets in the holes in the glass. On the inside of the door, sleeve a clear washer onto the screws.

2) Take the pull that has the threaded hole in the end and begin to thread the top screw into it and then the bottom screw. Tighten the stud head screws down with a screwdriver (not a drill). This pull will be on the inside of the door.

3) Place the remaining pull, with the large holes and set screw, onto the stud heads of the screws. Tighten the set screws with Allen wrench provided.

### **Directions for SDTDF Double Fin, SDTJ-SDTB Bulb Seal, SDDTNL "L" Seal**


#### **\*\*When Applicable\*\***

#### **(in some applications there may not be room for seals and or sweeps)**

When installing seals the glass edges should be clean and free from any dirt or hand oil etc... as these will prohibit adhesion. Glass cleaner will do.

Vertical seals will be applied to the edge of the glass using a VHB (very high bond) tape.

Apply VHB tape to edge of glass by adhering it top to bottom, gradually unrolling the tape as you slowly move from top to bottom. Apply the full length of glass. Cut flush to the bottom of door glass.

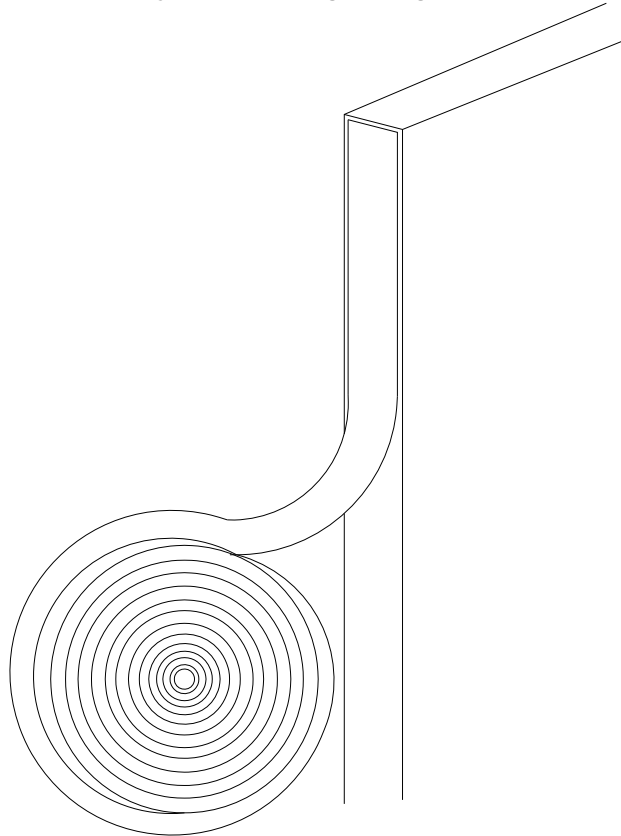

Then remove protective layer from other side and attach seal to the tape surface. Press on by hand. Cut flush to the bottom of the door using pliers-type cutter, scissors, or razor knife. The VHB tape will gain strength and achieve full bond within 72 hours.

Adjust door accordingly to achieve optimum seal.

### **Directions for P990WS**

1) Measure and cut seal to appropriate size using miter saw or hacksaw.

2) Place over bottom edge of door. Then, using a plastic covered mallet, gently tap on bottom sweep until it is fully on. Make adjustments as needed.

3) Silicone ends and horizontal seams from glass to plastic.

### **Silicone Application**

Once you confirm alignment of glass and everything is set, you need to apply a cap bead of clear 100% silicone around perimeter of u-channel edge where it meets the glass, both inside and out. Apply a small bead where u-channel meets installation surface, both inside and out. Finally apply a small bead from top to bottom in the inside corner of the butt joint.