


WELL BUBBLER 10-120 SEAMETRICS WMP FLOW METER WIRING DIAGRAM

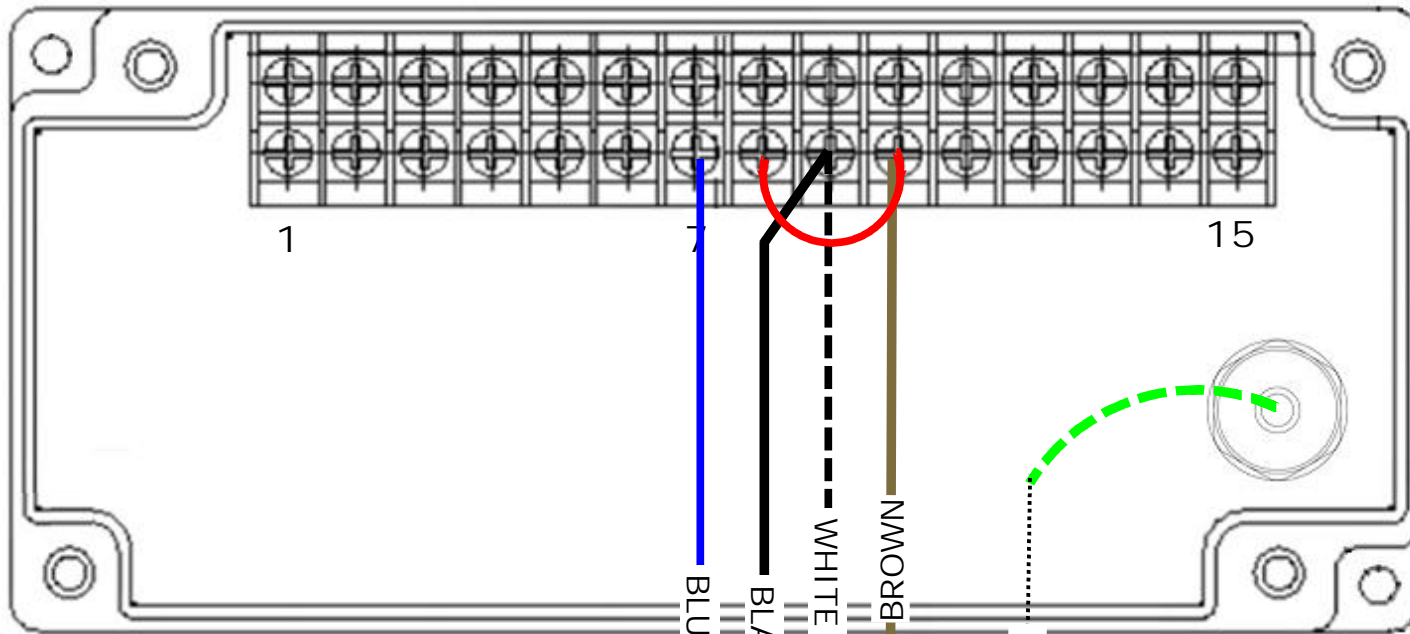

NOTES
Use only shielded wire to connect pulse-type flow meter to Well Bubbler
Land shield drain wire on Well Bubbler chassis ground wire (GREEN / YELLOW)
Install 18-22 AWG wire jumper between Bubbler terminals 8 and 10
Install filter capacitor between terminals 7 (+) and 9 (-) if flow meter used with VFD

WIRING INSTRUCTIONS		
WIRE	COLOR	TERMINAL #
PULSE +	BLUE	7
PULSE -	WHITE	9
POWER -	BLACK	9
POWER +	BROWN	10
GROUND	GREY	None
JUMPER	ANY	8 and 10
SHIELD	BARE	GND (GRN/YLW)

DRAWING	Well Bubbler 10-120 Seametrics WMP Flow Meter Wiring Diagram		
VERSION	1.0	PAGE	1 OF 1
DATE	02/05/19		
DRAWN BY	A. BUGROV		

