

SLK R171 wind deflector - installation instructions:

Required tools:

Torx TX 20 screwdriver / small ratchet with 10mm hexagon socket

Note:


To install, open the roof completely and please do not kneel on the seats, as this could damage the seat heating ! (*Wind deflector - installation time approx. 10 minutes*)

<p>1.) open the rear storage compartment</p> 	<p>2.) unscrew both Torx screws of the semicircular cap</p> 
<p>3.) pull the semicircular cap upwards</p> 	<p>4.) loosen both hexagon screws until a gap of 4mm is created</p> 
<p>5.) push the bracket from above, behind the loosened panel</p> 	<p>6.) check position (arrow) and tighten hexagon screws again</p> 
<p>7.) put the semicircular cap on from above and screw it tight</p> 	<p>8.) attach the wind deflector and tighten it with the knobs</p> 

to 7.)

Please reinstall the semi-circular cap first and then attach the wind deflector (item 8) !

If the cap does not want to slide into its original position immediately, reach under the cap and pull the small, rectangular, vertical bar of the console slightly towards the interior so that the cap can slide into its final position behind it and then be screwed tight.

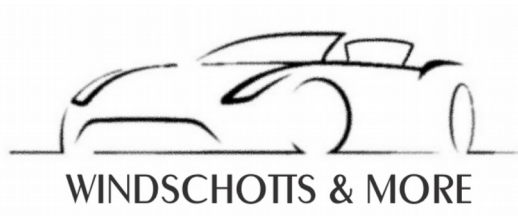

Care instructions:

Never clean the wind deflector with harsh cleaning agents, solvents or alcohol !!!

Clean the wind deflector with lukewarm water and a few drops of dishwashing liquid. Then dry it with a soft, lint-free cotton cloth (dish towel).

Should a scratch occur, it can be easily removed with an acrylic or plexiglass polishing paste (e.g. Displex), but it also works very well with fine car paint polish.

**Have fun with your new wind deflector
and safe journeys.**

Best wishes from Hamburg

Maik Kohlborn
Windschotts & more

