


Standard Plumbing Stub Up “Big Boy Series”

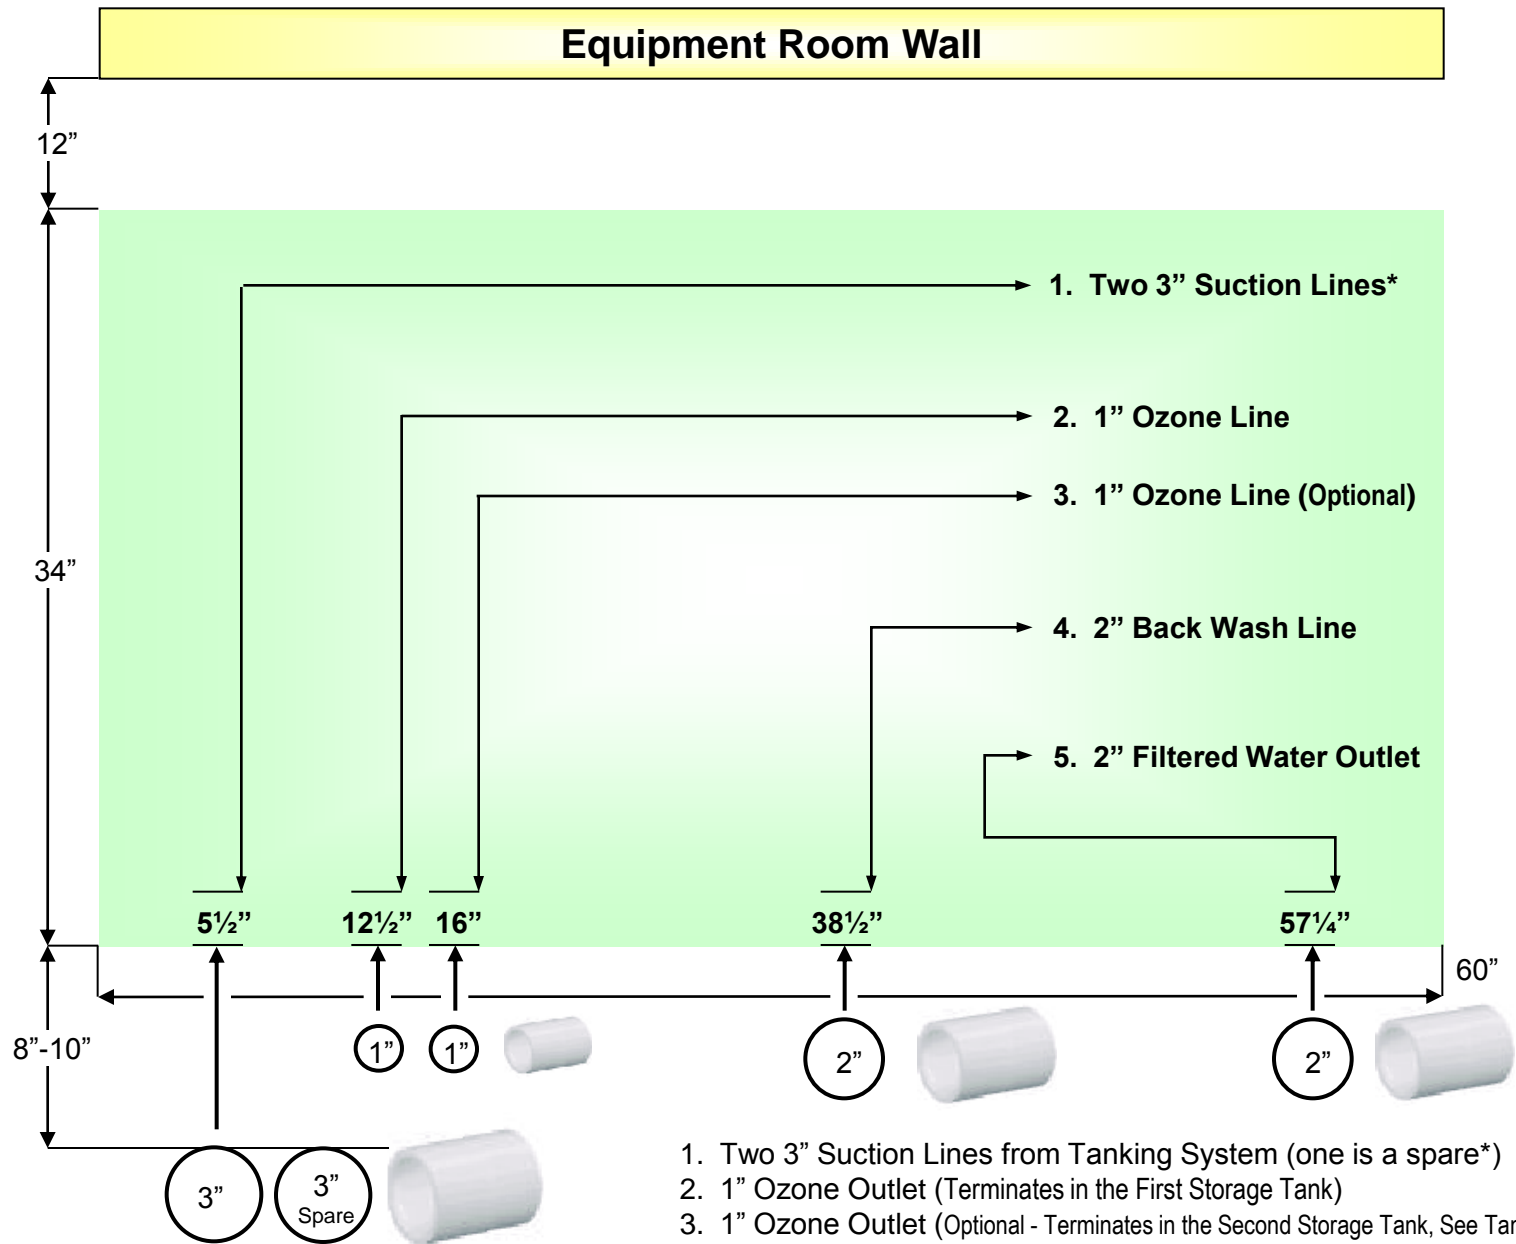

* This Stub Up Suction Line should be **approximately 8"-10" from platform**. We strongly recommend installing a **2nd Suction Line** as a spare, to reduce any plumbing problems that could occur during construction or in the future.

1. Two 3" Suction Lines from Tanking System (one is a spare*)
2. 1" Ozone Outlet (Terminates in the First Storage Tank)
3. 1" Ozone Outlet (Optional - Terminates in the Second Storage Tank, See Tank Drawings)
4. 2" Backwash Line
5. 2" Filtered Water Outlet