


# CS-100PS – (Two Pump) Plumbing Stub Up

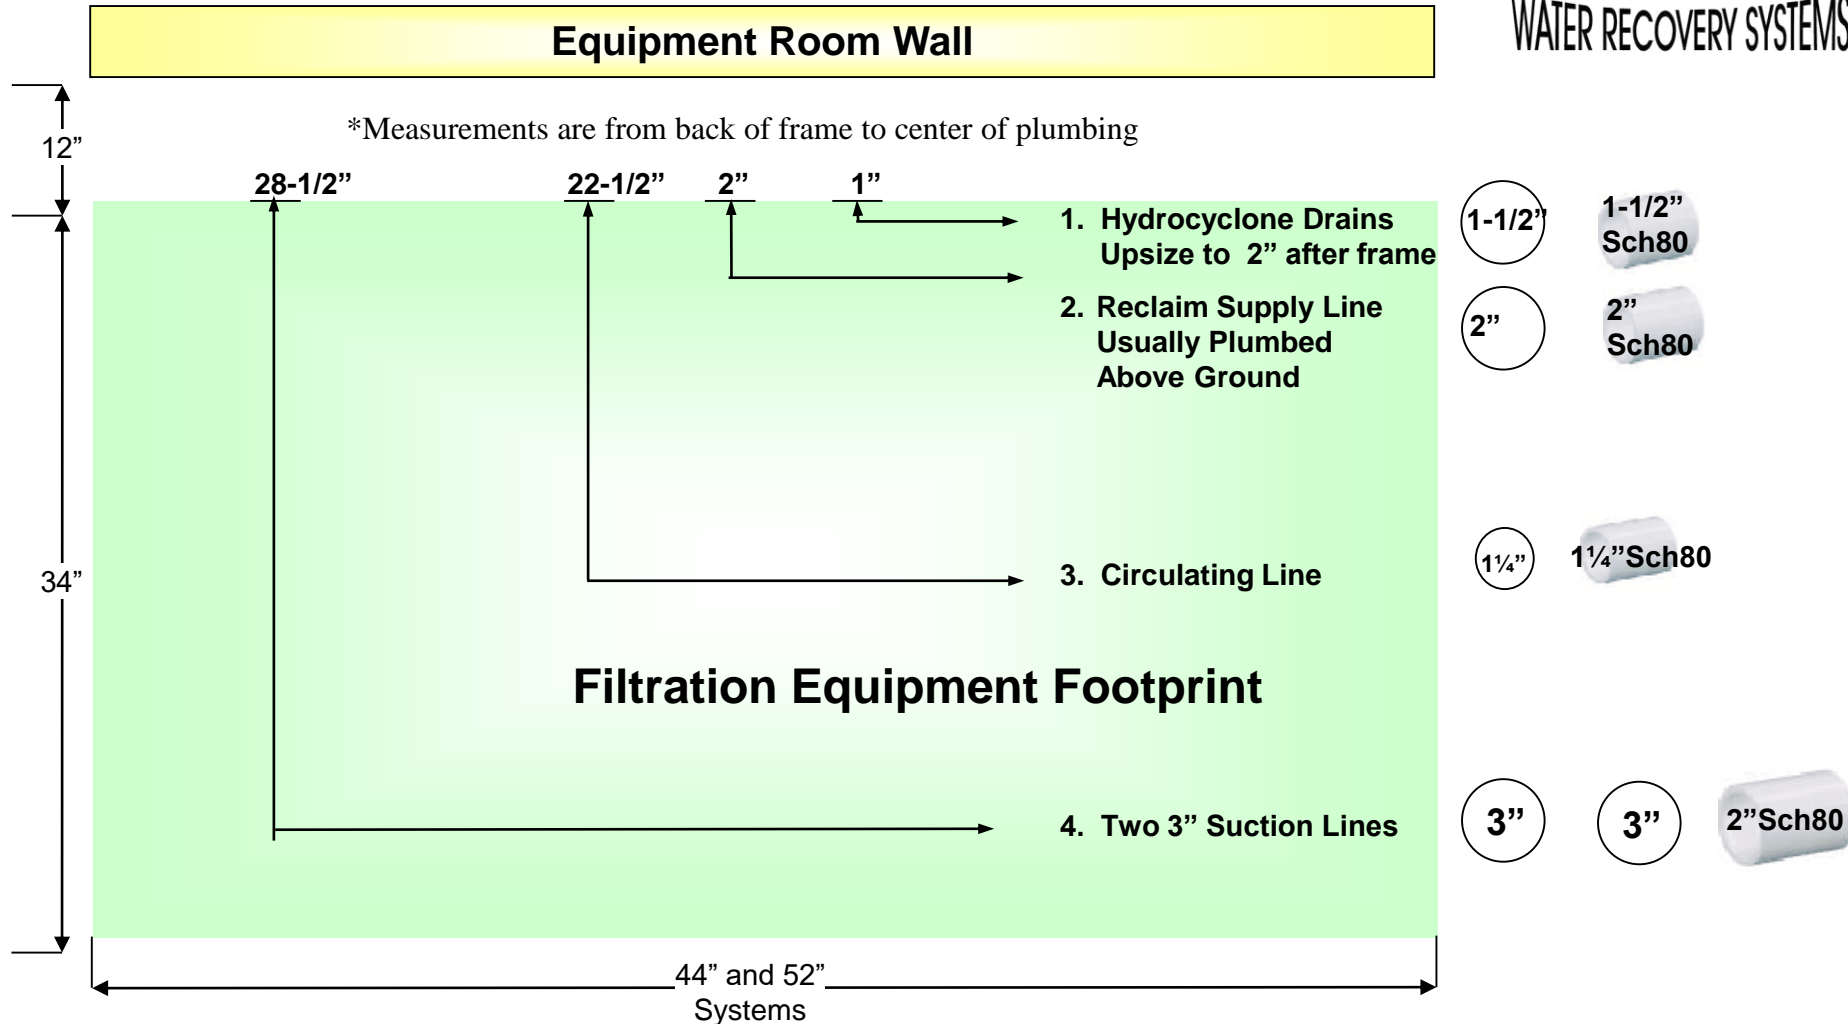

1. Upsize to 2" Sch 80 PVC Hydrocyclone Drain, Return to Conveyor Trough
2. 1-1/2" Sch 80 PVC Reclaim Supply Line to Car Wash Equipment
3. 1-1/4" Sch 80 PVC Circulating Line, Return Line Back to Tanking System
4. Two (2) 2" Sch 80 PVC Suction Lines from Tanking System or Two (2) 3" Sch 80 PVC Suction Lines for 100+ GPM Equipment. Plumbed far enough apart to manifold together. Shut off valves for each line required.