



PROJECT PLANNER

Watch the project video and use the planner to note important information and the step-by-step instructions.

Project Name Quilted (optional) Tool/brush Roll Start Date:

End Date:

To complete the project:

2 Fat Quarters ór T-cloths

8" (20cm) Zip

Fusible Fleece or alternative

interfacing

Button

Hair tie/rouleau loop or

thin elastic

Measurements of project. (Note pattern size and finished size.) Your measurements (if required).

Your fabric selection and swatches

Instructions

- 1. Measure the tools or brushes/pencils you want to store in the roll and note the length of the longest item. This length plus 1" (2.5cm) allowance plus 1/2" (1.2cm) seam allowance will be the height of the roll. The width of the roll will be determined by laying out all the tools/brushes on the fabric and adding 1" either side as an allowance plus 1/2" seam allowance will be the width.
- 2. The pocket at the top and the bottom will be the width of the roll as determined in item 1.
- 3. Cut the fusible fleece/alternative interfacing 1/2" smaller than the outside fabric all around to avoid getting into seams.
- 4. Take the pocket fabric and sew a narrow hem along one length.
- 5. Place the lining piece down right side up and place the pockets down on top and bottom. The sewn edge should face inwards and the raw edge on the outside. Pin the ends of the pockets.



Watch the project video and to note important information and the step-by-step instructions.

- 9. Take the tools or brushes you want to store in the roll and lay them down on the fabric.
- 10. Mark or pin the space needed for each item on the pocket pieces on top and bottom.
- 11. Stitch each smaller pocket ensuring to backstitch at the top and bottom.
- 12. Cut strap strips of fabric sufficiently long enough to form the looped strap or cut elastic the full width of the roll.
- 13. Sew the strap strips together to form the full length needed. Press the strip in half. Open the strip up and fold edge into centre and press again on both sides along the length. Press the strap again to ensure raw edges are inside the fold. Sew the open edge.
- 15. With the tools/brushes on the outside fabric lay the tools down in their pockets and lay the strap/elastic along the length about 2/3rd up the roll. Pin the strap or elastic into place. Take out tools and sew strap/elastic into place.
- 16. Lay down outside fabric with fleece/alternative onto the inside. Pin.

OPTIONAL - QUILTING OUTIDE FABRIC

If you want to quit the outside fabric you should do this now using your quilting guide or the sewing template below. Quilt the outside fabric and the interfacing.

17. Lay the front fabric (with interfacing) down wrong side up and lay the internal fabric right side up on top. Pin on either side. Put the tools/brushes into the pockets and closures you have made. Fold the tool roll closed and mark where the closure will be according to the options below.

CLOSURE 1 - ELASTIC AND BUTTON

18. Take a hair tie or make a small loop from elastic or fabric and pin it into the seam, on one side. Roll up the tool roll with the tools inside and mark the place where the button should be to hold it closed.

©Dr Sheila M Leahy





Watch the project video and to note important information and the step-by-step instructions.

Slightly stretch the elastic to make it hold in place. CLOSURE 2 - STRAP

- 19. Make a strap as set out in point 13 which is long enough to wrap twice around the full roll and sufficient to make a bow closure.
- 20. With the roll full of tools/brushes, mark with a pin a point on the horizontal centre line at the back of the roll (ie opposite the open end).
- 21. Unroll the project and remove the tools/brushes. Unpin the lining from the front fabric.
- 22. Turn the front fabric right side up and pin the strap in place. Sew the strap down using several lines of stitching.
- 23. Lay the outer fabric and interfacing down right side up make sure that the strap closure is in the middle of the fabric.
- 24. Lay the lining fabric right side down on top of the outer and ensure that the tab closure (if you have used one) is in place.
- 25. With the outer and lining right sides together, pin, tack and stitch all around making sure the loop is inside and leaving a gap of a few inches/centimetres at the bottom to turn out.
- 15. Turn out the bag and top stitch all around making sure to close the gap.



Watch the project video and to note important information and the step-by-step instructions.

OUTER AND LINING - 22 x 10" (56 x 25.5cm) or your own measurements CUT ONE OUTER AND ONE LINING

> 1/2" (1.2cm) seam allowance

POCKET - 20×5 " (51×13 cm) or your own measurements CUT TWO

1/2" (1.2cm) seam allowance



Watch the project video and to note important information and the step-by-step instructions.

STRAP - 22 x 10" (56 x 25.5cm) or your own measurements
CUT SUFFICIENT TO MEET LENGTH
REQUIREMENTS

1/2" (1.2cm) seam allowance BINDING CUT SUFFICIENT
TO SEW AROUND
THE OUTSIDE OF
THE PROJECT
ROLL

©Dr Sheila M Leahy






SEWING PROJECT 8 - TEMPLATE

Watch the project video and to note important information and the step-by-step instructions. Measure your mobile phone to ensure it fits this size.

Cross Hatch Quilting sewing template.

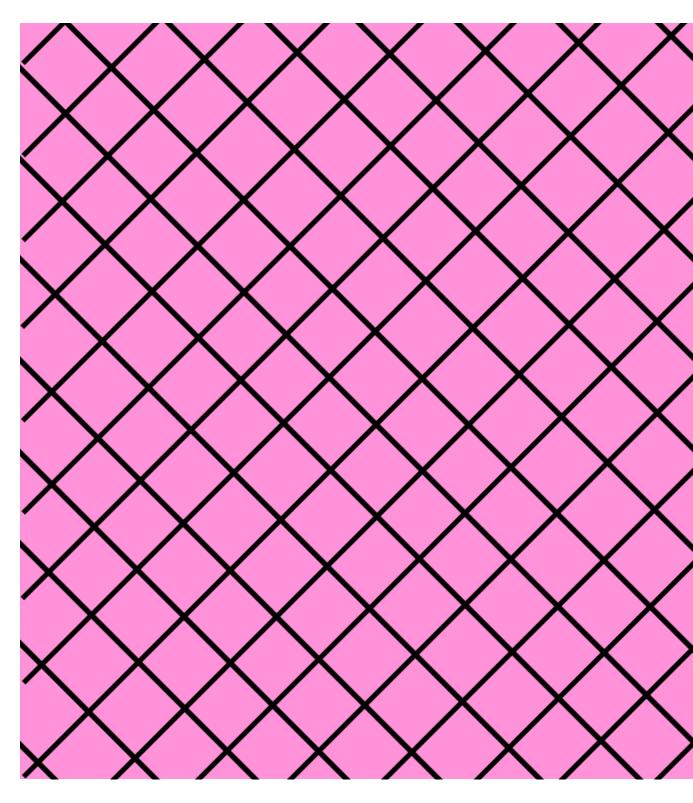

©Dr Sheila M Leahy

