




[Home](#) > [Installation – Cadillac CTS 4](#)

# Installation – Cadillac CTS 4


## Cadillac CTS 4 – 3.6L LLT Engine






Engine with cover – Remove cover by removing the oil fill and lifting carefully on the front edge, gently pull up and forward removing the cover.

Engine from Passenger side looking towards drivers side

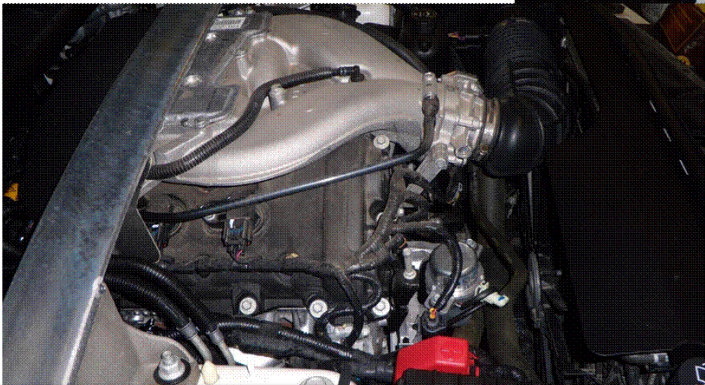



Engine From Front looking aft

Cut "PCV" line at approximately these locations, see next page

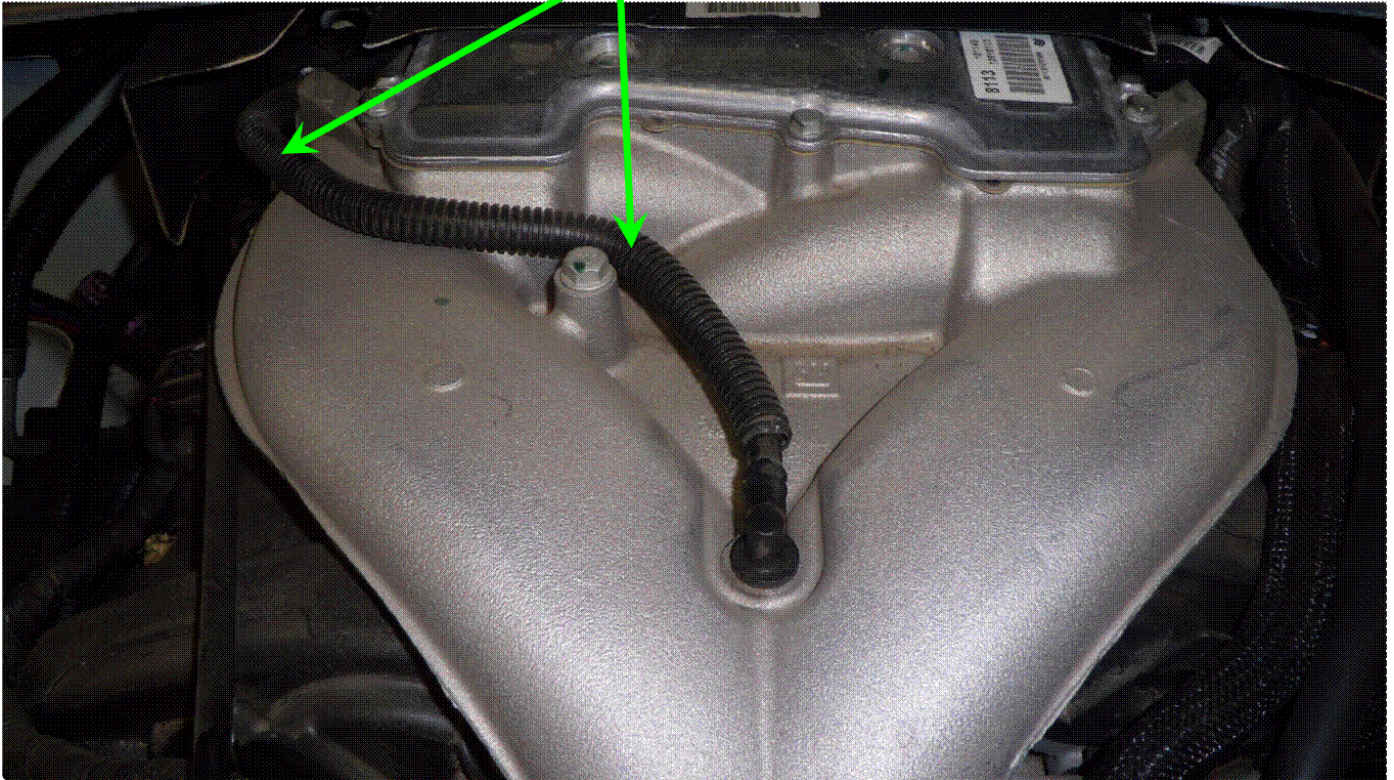


Looking aft at passenger side valve cover.  
Looking under the cross bar and rear cover  
Cut this line approximately 2 to 3 inches  
from the front plane of the cover. Where  
the line runs straight.

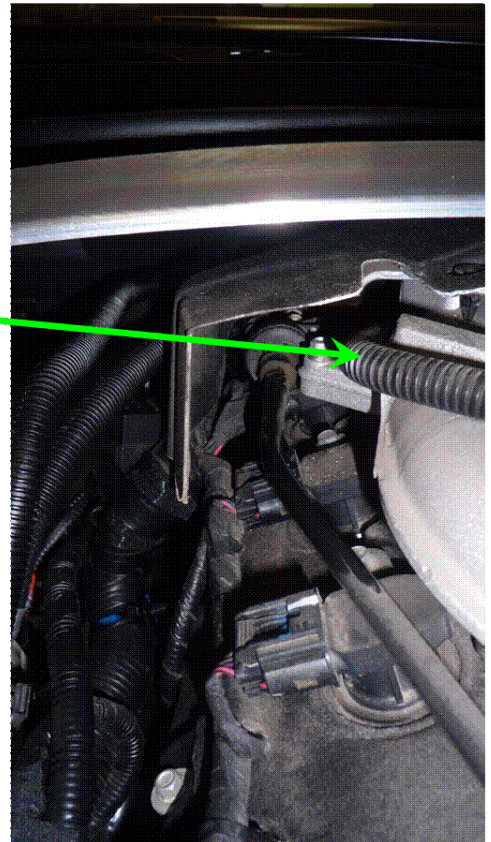


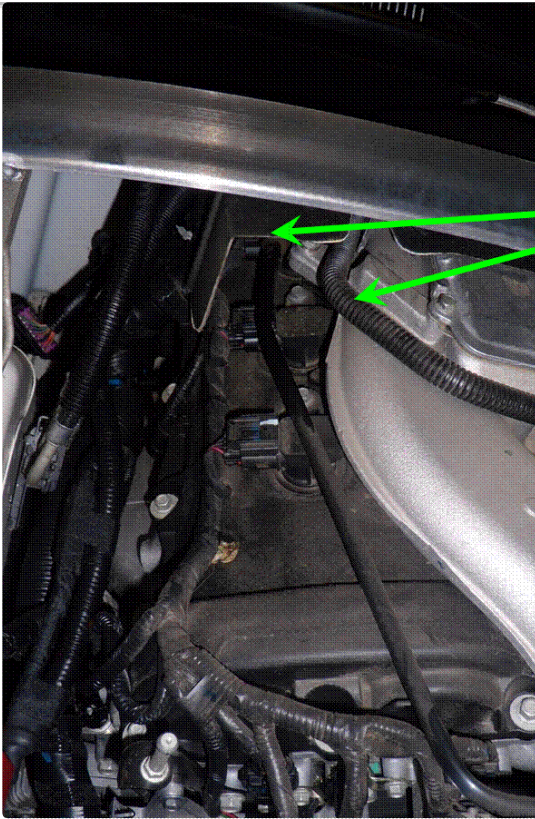


Looking aft at passenger side valve cover. Looking under the cross bar and rear cover Cut this line approximately 2 to 3 inches from the front plane of the cover. Where the line runs straight.

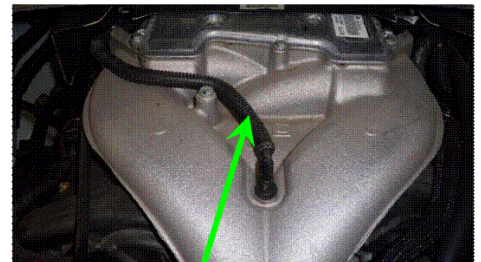

Trace this line back to the connection on top of the passenger side valve cover close to the fire wall. Remove the line, remove the "PCV" nipple from the valve cover and drill three holes to larger diameter. This is all to be done without any damage.

Install the "Catch Can" in front of the engine between the block and the fan. Or between the firewall or the passenger side strut....if it fits. Make sure that the drain line can run clear and kink free to the bottom of the car.

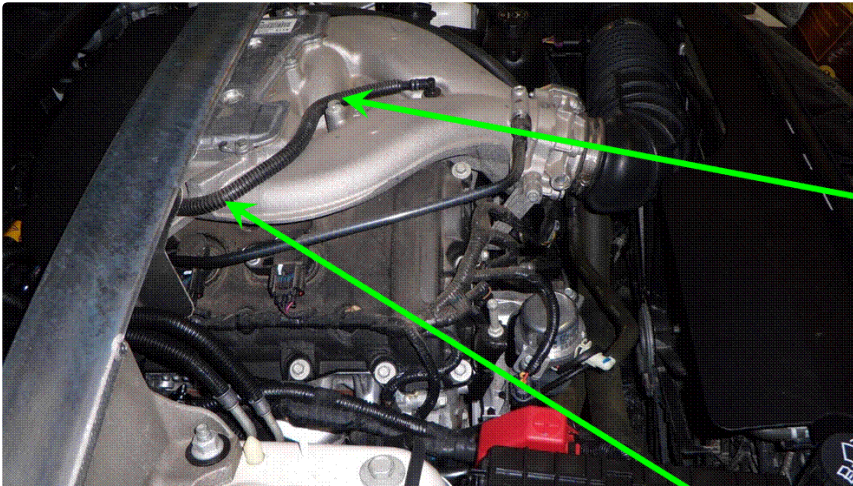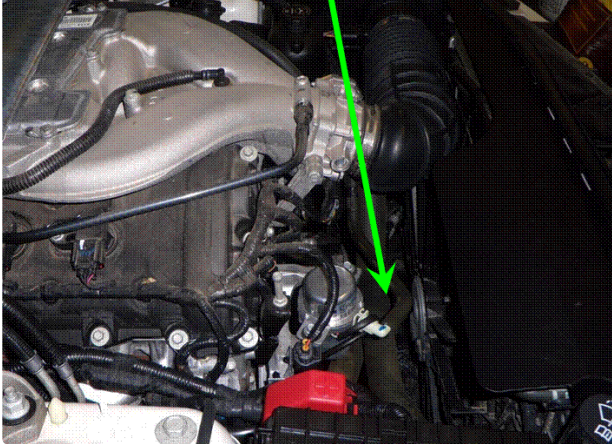

Approximate "PCV" line cut location for connection to catch can "Out".

Approximate "PCV" line cut location for connection to catch can "In"

This system is available direct from the manufacturer at:  
[www.tracylewisperformance.com](http://www.tracylewisperformance.com) or by phone at: 941-235-1713.