



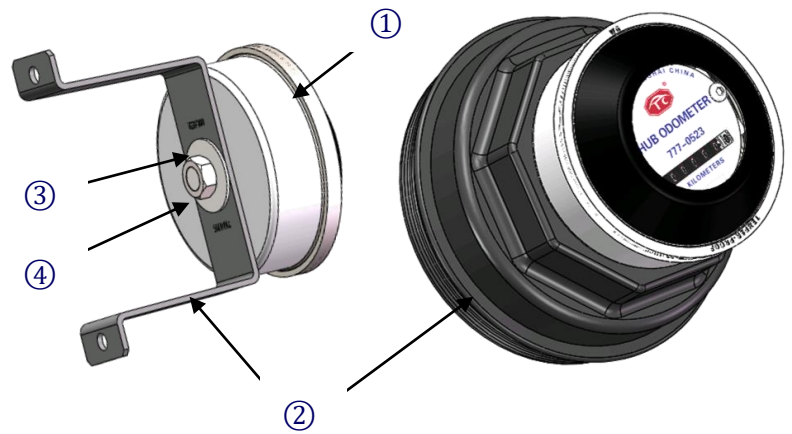

Installation Instruction

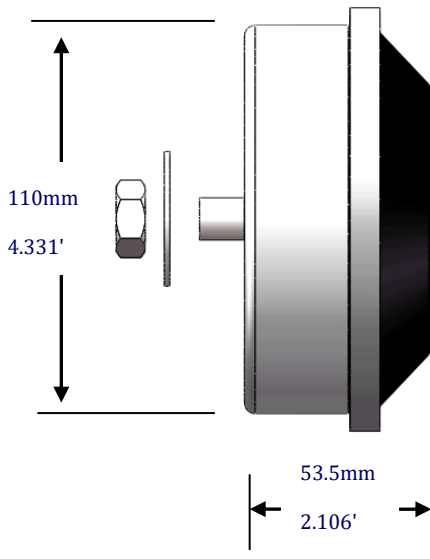

1- Hubodometer 2- Bracket or Hubcap

3- washer

4- Lock Nut

Mounting

- DOTTO/TEXCAN hub odometer can be mounted on an DOTTO/TEXCAN bracket or hub cap. Concentricity of the hub odometer to the axle must be within 0.062"(1.6mm) .
- **Welding the stud is not allowed.**

Installation

1. Insert the mounting stud of hub odometer into the mounting hole
2. Install the washer over the stud and secure with the lock nut
3. Torque the nut to 18-22 lb.-ft (24-30 NM) maximum
4. If installation is on a DOTTO/TEXCAN bracket or hub cap, install it per provided instructions.
5. Refer to provided instructions with hub odometer for further procedures
6. Consult DOTTO/TEXCAN regarding on any unusual application, installation, or possible modification of the basic design.

Cleaning

Use a mild detergent and water to clear the hub odometer's front crystal window