


Alvim/Drive Surgical Kit

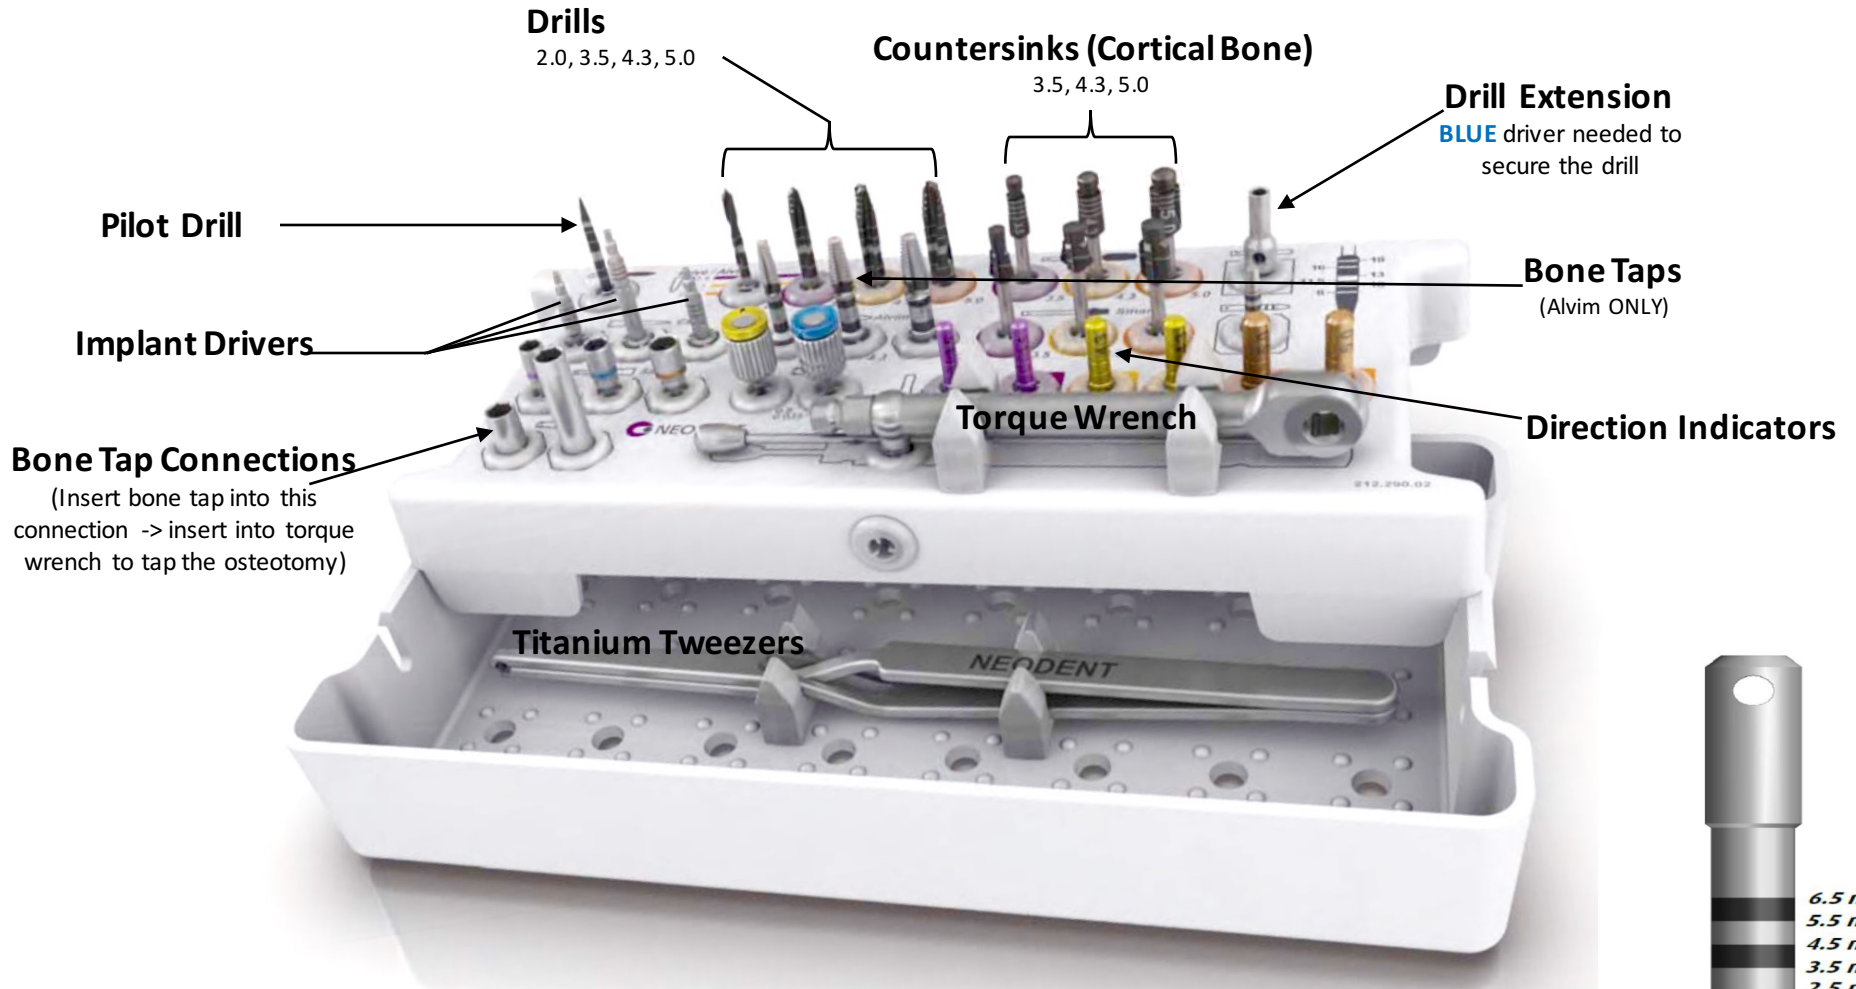

Drills

2.0, 3.5, 4.3, 5.0

Countersinks (Cortical Bone)

3.5, 4.3, 5.0

Drill Extension

BLUE driver needed to secure the drill

Pilot Drill

Implant Drivers

Bone Taps

(Alvim ONLY)

Bone Tap Connections

(Insert bone tap into this connection -> insert into torque wrench to tap the osteotomy)


Torque Wrench

Direction Indicators

Titanium Tweezers

BLUE Driver – Cover screw, Healing abutment, Impression coping

YELLOW Driver – Prosthetics

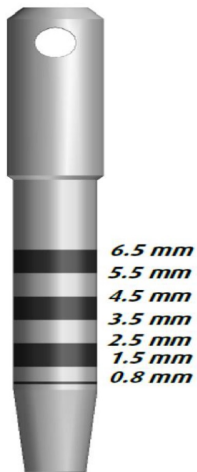

6.5 mm
5.5 mm
4.5 mm
3.5 mm
2.5 mm
1.5 mm
0.8 mm