


Installation guide - Corrugated iron Roof

STEP 1 - CLEAN GUTTERS, VALLEYS & DOWNPIPES

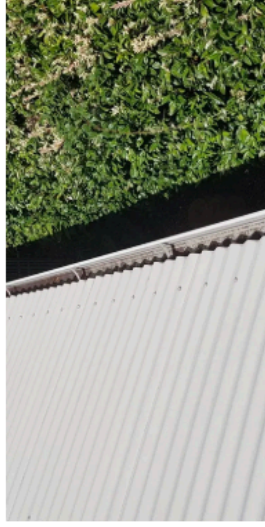

It is important that all leaves and debris are removed from the gutters, and valleys and downpipes. It is also recommended to flush out downpipes and wash out gutters leaving a clear and clean surface.

STEP 2 - ROLL OUT THE MESH ALONG THE GUTTER



Roll out the Gutter Mesh along the length of the Gutter. Line it up to the edge of the Gutter lip ready for the Gutter fixing trim to be applied over the top.

STEP 3 - ATTACH THE MESH USING GUTTER FIXING TRIMS



Line up the Gutter fixing trim with the edge of the Gutter ensuring that the mesh is sitting straight and attach trim with screws. Attach screws in 250mm intervals.

STEP 4 - MAKE CUTS IN MESH




Make a cut in line with every second corrugation approx 1 inch deep. Use appropriate cutting tool that is sharp.

STEP 5 - SCREW DOWN THE SADDLES



Attach the Gutter Mesh to the Roof by fastening the saddles with screws. Attach saddles every second corrugation.

STEP 6 - FINISHED PRODUCT

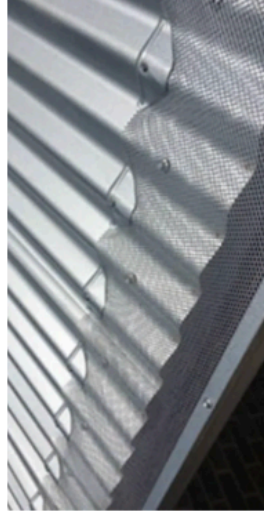

Well done!

Enjoy leaf free gutters for years to come!