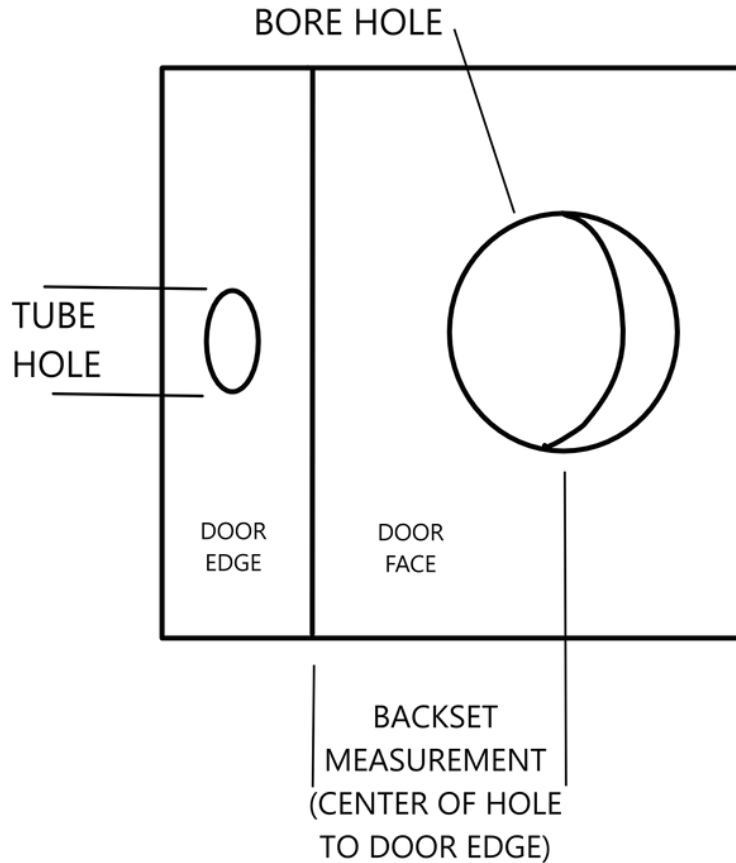

TECHNICAL INFO



Knobs & Handles
Prairie City, Oregon

DOOR KNOB BORE HOLES



Bore Hole Backset Measurement: This measurement on pre-drilled doors is typically either 2- $\frac{3}{4}$ " or 2- $\frac{3}{8}$ ". Make sure to size the new hole to your hardware, or size your hardware to the pre-existing hole. On tube latches the measurement is to the center of the spindle hole in the latch when inserted (and the face-plate inset).

Tube Hole: This is the hole that the latch assembly will insert through. If the door is pre-drilled, it is typically a 1" hole diameter. If this is a new door, follow the latch instructions or measure the outside diameter of the tube latch.

KNOBS & HANDLES

132 NW FRONT ST - PO BOX 252

PRAIRIE CITY, OR 97869

541-620-3668

WWW.KNOBSANDHANDLES.PC.COM