



Anderson Pregnancy Care Tote Bags

Use upholstery or canvas fabric. Finished bag is approx. 18 in. wide from seam to seam when lying flat and 15-16 in. high from the bottom seam. Seams can either be finished with French Seams (FS) or sewn with straight stitch and finished with zig zag or serger (ZZ).

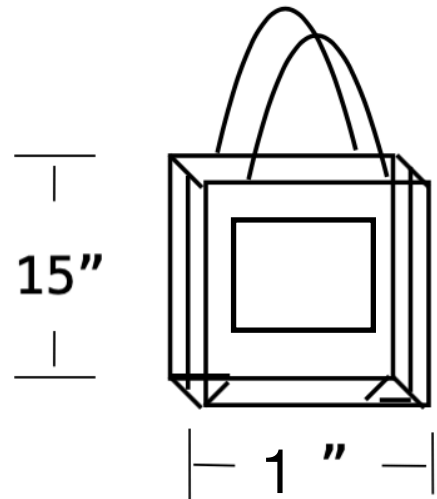

1. Cut one rectangle 17.5 X 40 in (FS) or 17.5 X 38 (ZZ). **OR** You can use 2 pieces 17.5 x 21 (FS) or 17.5 X 20 (ZZ).
2. Cut one pocket 10 in X 12 in. Can be folded or lined. Hem unlined pocket top by folding top, fold again and topstitch. Fold and press 3 sides. When lining pocket: sew right sides together all 4 sides, leaving a gap in the bottom to pull the fabric inside out. Press. Topstitch 1/4 inch from top. Pin and topstitch 3 sides of the pocket onto the bag.

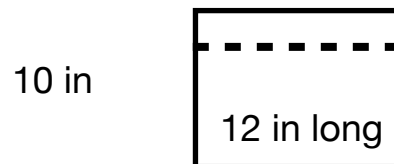

3. Sew bottom and side(s) seams of tote using French seams or straight stitch finished with zig zag or serger.
4. Corner gusset: Sew 5 in long deep corner triangles by aligning side and bottom seams.
5. Hem top of bag by folding & folding again. Top stitch.
6. Prepare handles 20-22 inches, using either webbing or cut 2 X 4 in width from fabric. Fold under 3/8 inch at each end. Fold in half, wrong sides together. Press. Press rough edge towards center fold. Sew along edge.
7. Attach handles neatly and securely. Measure 3 in from the center of the bag and pin. There are 6 in between the ends of each handle. Overlap either inside or outside bag 1.5 - 2 inches.