

Thank you!

*** PLEASE READ THE INSTRUCTIONS BELOW PRIOR TO UNROLLING YOUR SCROLL***

FOR DETAILED ASSEMBLY INSTRUCTIONS,
PLEASE VISIT OUR WEBSITE AND WATCH OUR SCROLL ASSEMBLY VIDEO.

1.

UNROLL YOUR SCROLL SLOWLY ON A FLAT, CLEAN & DRY SURFACE. KITCHEN TABLES WORK GREAT.



3.

UNWIND JUTE ROPE AND LAY ON SCROLL, APPROXIMATELY 2" FROM TOP.




5.

HOLD THE ROLL WITH ONE HAND & SECURE WITH MAGNETS – ONE SIDE AT A TIME. 1ST MAGNET INSIDE THE ROLL & 2ND MAGNET ON THE OUTSIDE OF THE ROLL DIRECTLY UNDERNEATH THE 1ST MAGNET. REPEAT FOR OTHER SIDE.
*ADJUSTING MAGNETS MAY BE REQUIRED ONCE YOU HANG YOUR SCROLL.



2.

SEPARATE MAGNETS FOR EASE OF USE. TWO GROUPS OF 4 WORK WELL.

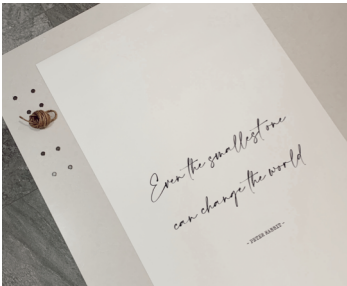

4.

ROLL PAPER AROUND JUTE ROPE GENTLY UNTIL DESIRED LOOK IS ACHIEVED. AS YOU ROLL, PAT EACH END OF THE ROLL TO ENSURE IT STAYS STRAIGHT.



Next page for further
instructions...


6.

TIE THE ROPE ENDS TOGETHER TO DESIRED LENGTH. CUT OFF EXCESS ROPE IF REQUIRED. PLEASE VIEW ASSEMBLY VIDEO IF YOU WANT TO HIDE KNOT WITHIN ROLL.



8.

LIFT THE SCROLL BY THE ROPE AND PLACE AGAINST A WALL TO "TEST" YOUR SCROLL FOR CREASES ETC. ADJUST MAGNETS IF REQUIRED. *FOR BEST RESULTS ENSURE THE MAGNETS ARE PARALLEL AND FLUSH AGAINST THE WALL.

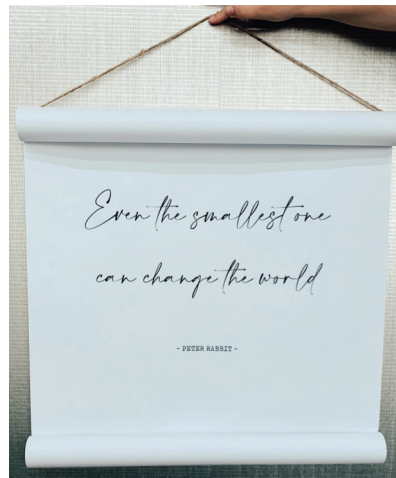

7.

ROLL THE BOTTOM OF THE SCROLL TO DESIRED LOOK AND AFFIX MAGNETS AS IN STEP 5.



9.

HANG YOUR BEAUTIFUL SCROLL & TAG US ON INSTAGRAM @THEPAPERANDSCRIPTCOMPANY

Xo
A + K