

# Pinnacle Safety Products (PS-1)


## Electrical Panel Lockout System

### Step 1: Prepare Mounting Surface




Clean dust and oils from circuit breaker panel cover and door face using an isopropyl alcohol wipe.

### Step 2: Secure Mounting Attachments Together with Included Alignment Pin

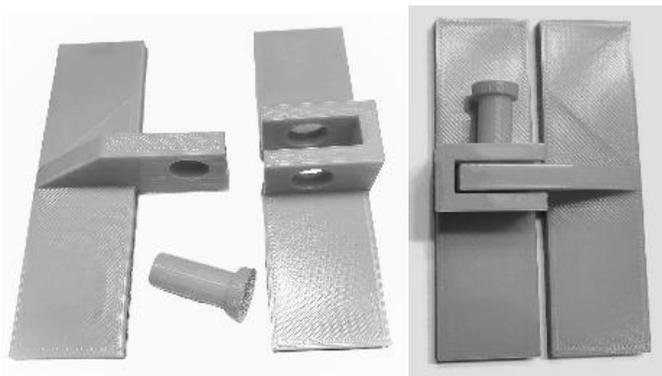

This system comes with an alignment pin to ensure proper installation that will be replaced with a padlock after installation. (Note: The alignment pin is only provided for proper hole alignment during the attachment mounting. The pin must be discarded and replaced with a padlock after attachments are secured).


### Step 3: Affix Mounting Attachments to Panel Cover and Circuit Breaker Access Door

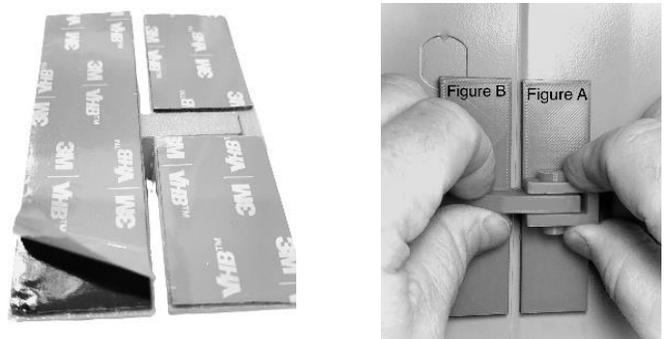

With the alignment pin installed, remove the transfer tape liner from the back of both attachments. Attach Figure A (female receiver) on the fixed panel cover, along the edge adjacent to the circuit breaker access door. Then, attach Figure B to the edge of the circuit breaker access door. Press firmly to secure both attachments.

Devices will also fit double door panel covers. Attach Figure B on the outer, overlapping hinged door and Attach Figure A onto the secondary door. The installed padlock prevents opening of either door.

### Step 4: Remove Alignment Pin and Install Padlock

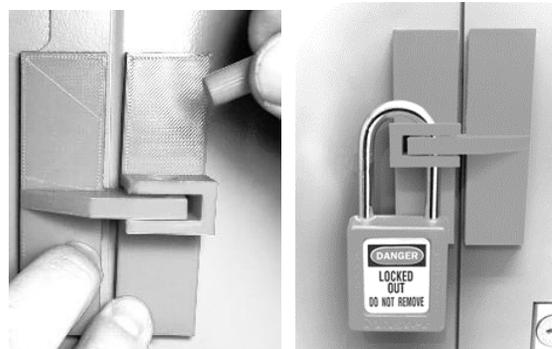

Remove the plastic alignment pin and install a padlock to secure all breaker positions within the electrical panel.

Note: If removing PS-1 device attachments after use, a non-marring plastic device must be used to lift attachments to prevent damage to painted finishes.

## Productos de seguridad Pinnacle (PS-1)


### Sistema de bloqueo del panel eléctrico

#### Paso 1: Preparar la superficie de montaje




Limpie el polvo y los aceites de la cubierta del panel de disyuntores y la cara de la puerta con una toallita con alcohol isopropílico.

#### Paso 2: Fije los accesorios de montaje junto con el pasador de alineación incluido

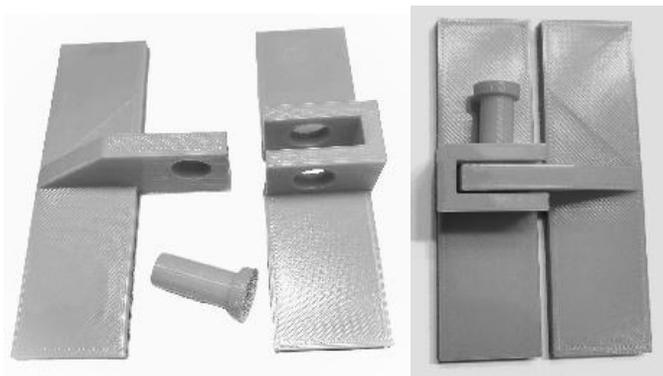

Este sistema viene con un pasador de alineación para garantizar una instalación adecuada que será reemplazado por un candado después de la instalación. (Nota: El pasador de alineación solo se proporciona para la alineación adecuada del orificio durante el montaje del accesorio. El pasador debe desecharse y reemplazarse con un candado después de que se aseguren los accesorios).


#### Paso 3: Fije los accesorios de montaje a la cubierta del panel y a la puerta de acceso al disyuntor

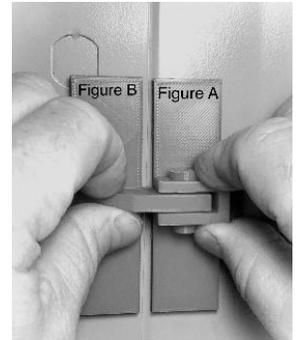

Con el pasador de alineación instalado, retire el revestimiento de la cinta de transferencia de la parte posterior de ambos accesorios. Coloque la Figura A (receptor hembra) en la cubierta del panel fijo, a lo largo del borde adyacente a la puerta de acceso al disyuntor. Luego, coloque la Figura B en el borde de la puerta de acceso al disyuntor. Presione firmemente para asegurar ambos accesorios.

Los dispositivos también se adaptarán a las cubiertas de los paneles de las puertas dobles. Coloque la Figura B en la puerta exterior con bisagras superpuestas y la Figura A en la puerta secundaria. El candado instalado impide la apertura de cualquiera de las puertas.

#### Paso 4: Retire el pasador de alineación e instale el candado

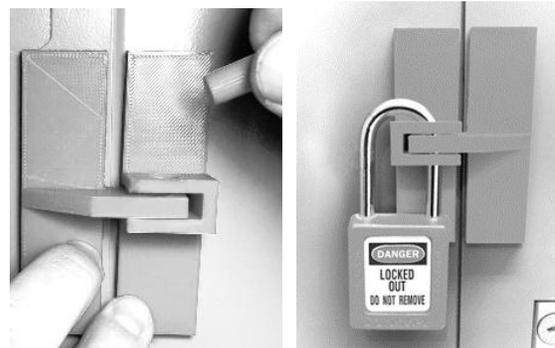

Retire el pasador de alineación de plástico e instale un candado para asegurar todas las posiciones de los interruptores dentro del panel eléctrico.

Nota: Si retira los accesorios del dispositivo PS-1 después de su uso, se debe usar un dispositivo de plástico que no dañe para levantar los accesorios y evitar daños a los acabados pintados.