


Working procedure



Setting of model, JIG-Putty, Separating medium (Vaseline), Inlay wax, carving knife, curing light, ceramic denture bur.

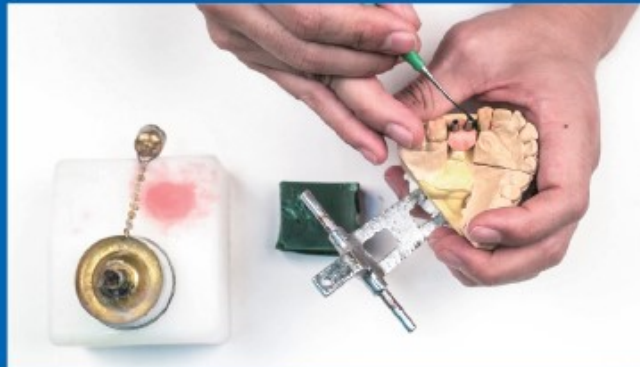

Apply separating medium (Vaseline) to model.



Apply inlay wax to hole.




Discharge JIG-Putty.




Make implant jig with carving knife.



Light curing fully during 20 -30 seconds.

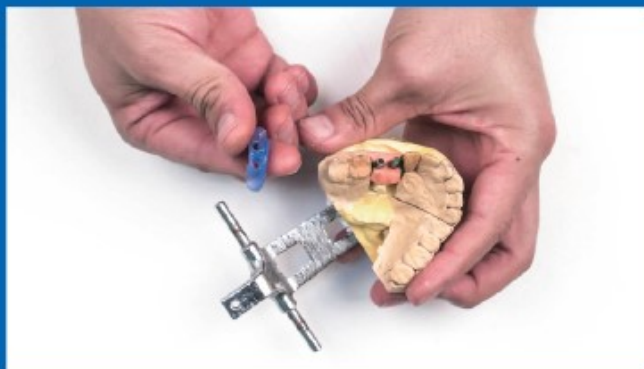

Disjoin solidified implant jig from model.

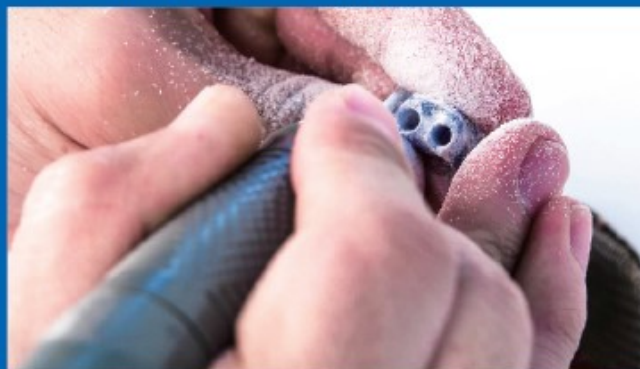

Trimming & polishing implant jig with ceramic bur.



Total working time is 3 minutes.