


## P.A.C.E Pre-Installation Checklist

Before you begin installation, remember to P.A.C.E yourself with the checklist below.


Full installation instructions and maintenance guidelines can also be found at [www.venusflooring.co.nz](http://www.venusflooring.co.nz)

### PACE Prepare

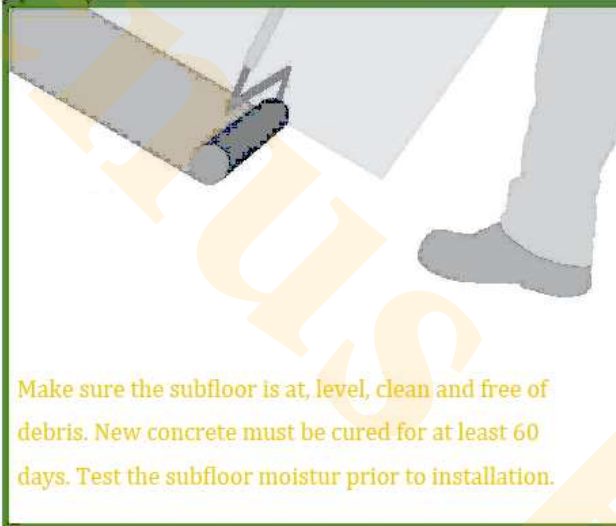


Make sure the subfloor is at, level, clean and free of debris. New concrete must be cured for at least 60 days. Test the subfloor moisture prior to installation.

### PACE Acclimate

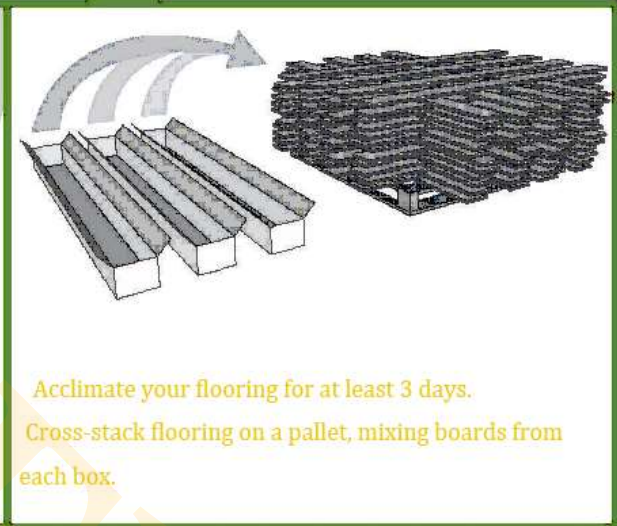


Acclimate your flooring for at least 3 days. Cross-stack flooring on a pallet, mixing boards from each box.

### PACE Control

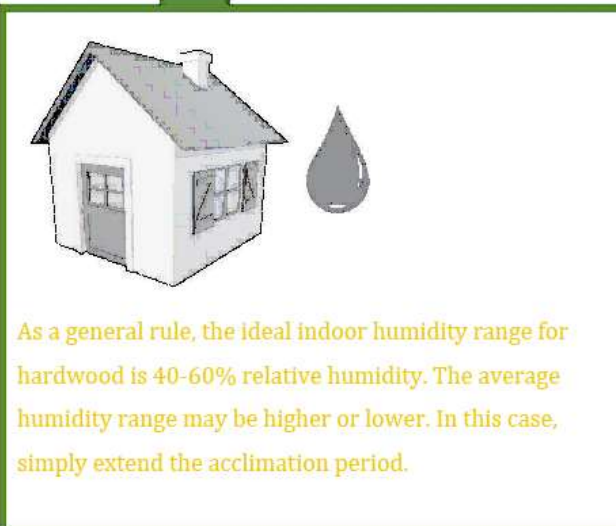

As a general rule, the ideal indoor humidity range for hardwood is 40-60% relative humidity. The average humidity range may be higher or lower. In this case, simply extend the acclimation period.

### PACE Expansion

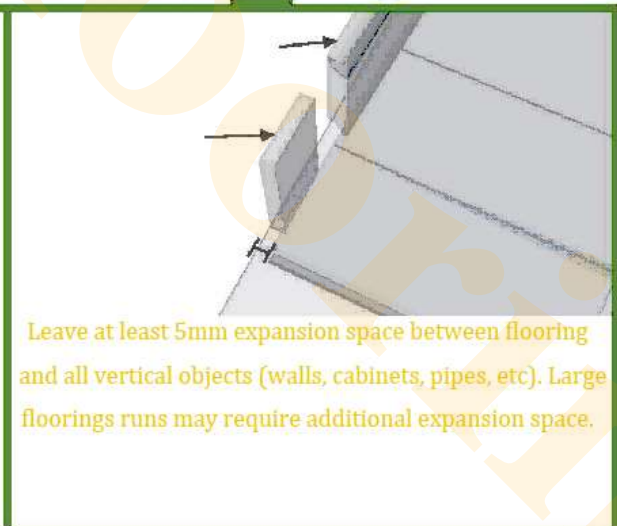

Leave at least 5mm expansion space between flooring and all vertical objects (walls, cabinets, pipes, etc). Large floorings runs may require additional expansion space.

The subfloor should be dry, clean, level and free of any cracks.

Irregularities on the subfloor should not exceed 2mm every 1 meter in all direction.