
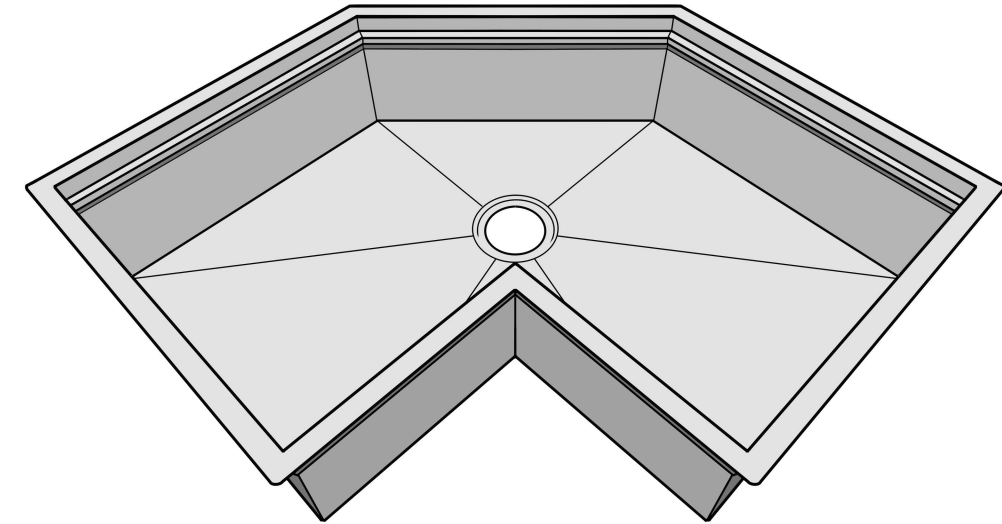


# CORNER SINK INSTALLATION GUIDE

EVERY RACHIELE SINK IS CUSTOM DESIGNED, THEREFORE THESE ARE GENERIC INSTRUCTIONS. SOME CABINET INSIDES MAY REQUIRE ALTERATIONS TO ALLOW THE APPROPRIATE SPACE FOR SINK TO BE DROPPED IN. ANY SIDE SUPPORTS OR CORNER GUSSETS WILL NEED TO BE REMOVED BEFORE SINK INSTALLATION.

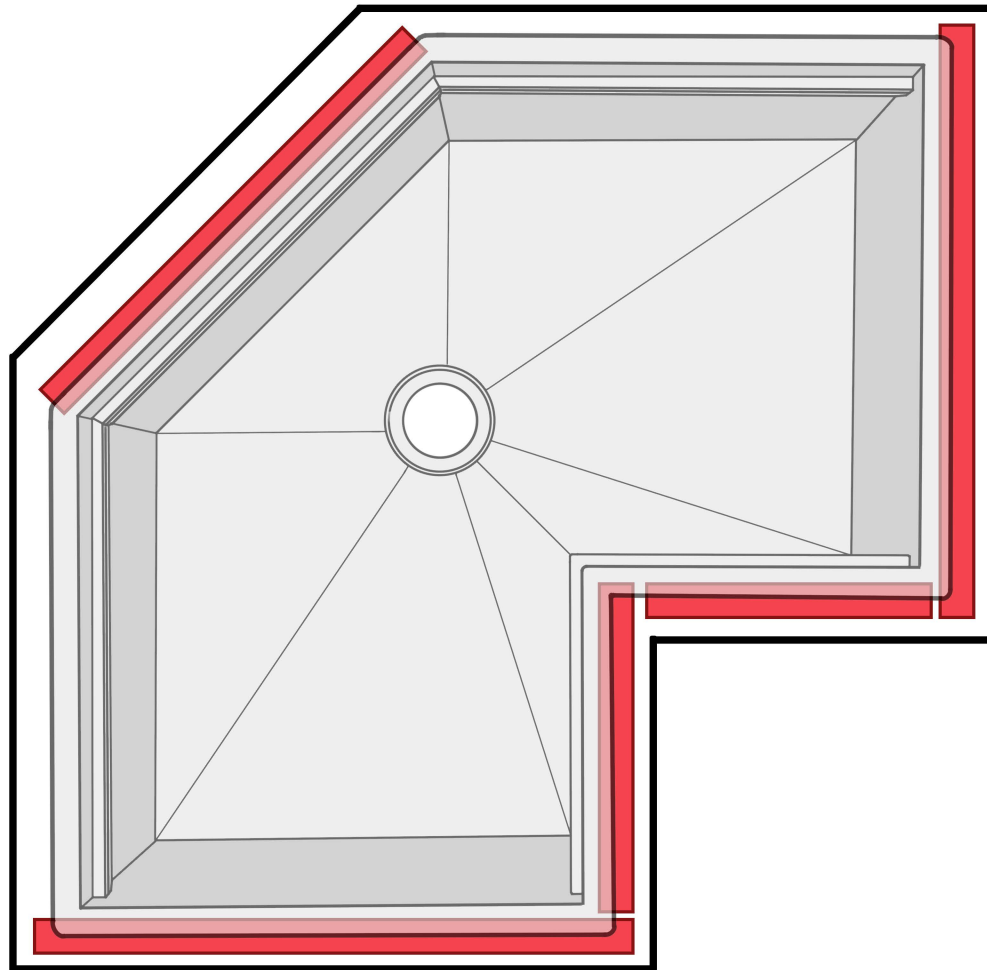

① INSTALL WOOD SUPPORTS IN AREAS SHOWN, 1/16" BELOW THE TOP OF THE CABINET. NO SUPPORT IS TO BE USED AT THE BOTTOM OF THE SINK. NO OTHER SUPPORT IS NEEDED. THE 1/16" ACCOUNTS FOR THE THICKNESS OF THE METAL.

② WE SUGGEST INSTALLING PRIOR TO COUNTERTOP TEMPLATING.  
**IMPORTANT:** THE COUNTERTOP MUST BE CUT FLUSH WITH THE INSIDE OF THE BOWL. **NO OVERHANG, NO REVEAL.**

PLEASE NOTE: THIS IS ONE OF MANY CORRECT WAYS TO INSTALL OUR UNDER MOUNT SINKS. OCCASIONALLY COUNTER TOP SUPPLIERS WILL SUPPLY CLIPS AND ATTACH THE SINK TO THE BOTTOM OF THE COUNTER TOP. THAT METHOD IS FINE. HOWEVER, SINKS SHOULD NEVER BE SUPPORTED FROM THE BOTTOM. ALL METAL UNDER MOUNT SINKS SHOULD BE SUPPORTED BY THE FLANGES ONLY.

FOR MORE INFO ON INSTALLATION, VISIT  
[RACHIELE.COM/INSTALLATION-AND-CARE](http://RACHIELE.COM/INSTALLATION-AND-CARE)