


## How to measure for a Custom Retrofit Grid and Cutting Board

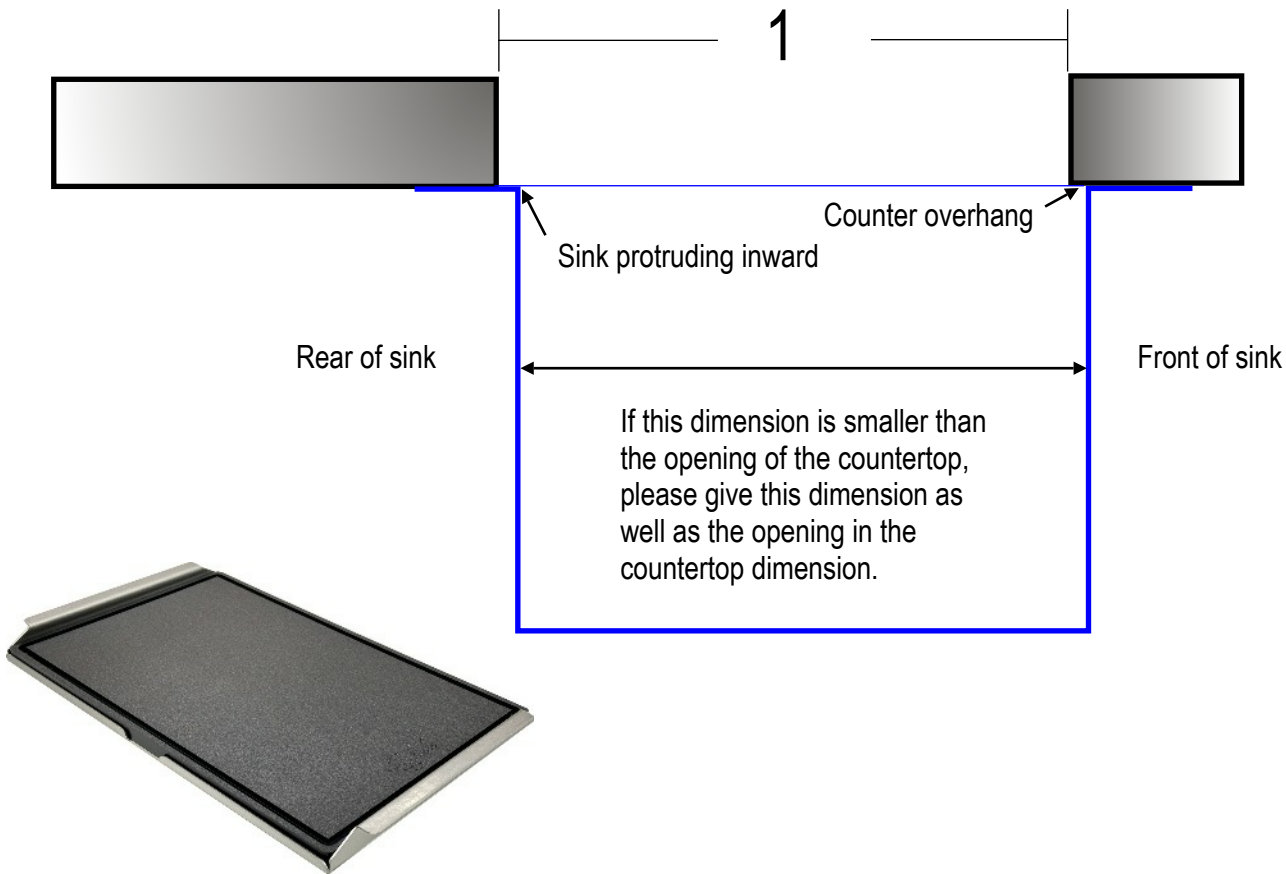

1. Measure narrowest point, front to back, between the two counter tops. If your sink protrudes inward, we need to know that narrower dimension. Lastly, we will make the front to back dimension custom to your measurements. Keep in mind, if your measurements are off, we cannot take back or refund the cost. It is always best to send a photo or two along with the measurements. **Please write down your dimensions. We cannot work with photos of tape measures.**