



Ram Reg/Quad/Crew Cab 1500 CHMSL Cargo Camera Installation Instructions

Items Required for the Installation


SGW Bypass for 2018+ Ram Trucks (not required for Ram Trucks prior to 2018 model year)
 Alfaobd and compatible device to run it on (windows or Android device, does not support IOS)
 Obdlink MX+ or any other OBD Scanner compatible with Alfaobd (See www.alfaobd.com for a list)
 Radio must be a 2013+ 8.4 Uconnect. If the radio is a 2013-2015, it must be on software version 17.11.xx. If the radio is 2016+ then any software version should work

What's Included:


Qty	Item
1	Main camera harness
1	Power Adapter T-harness
1	Radio harness

Before you get Started:


Installing SGW bypass (if applicable)

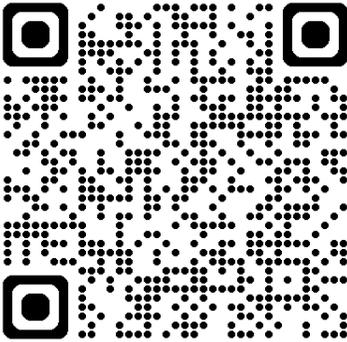

Backing up BCM config

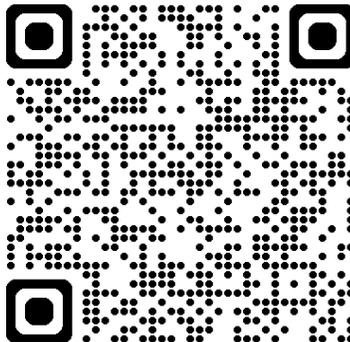


Programming the settings with alfaobd

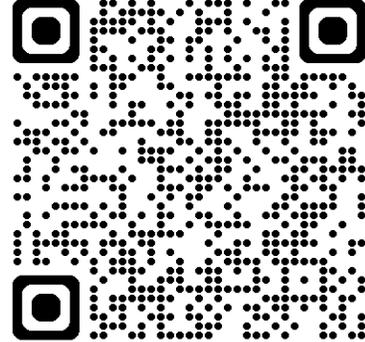

Installation Steps:


Walkthrough of the harness to be installed and instructions on how to pin the terminals

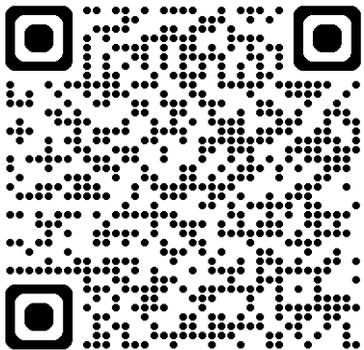

Note: Depending on the vehicle year, one of the camera wire pinning location at the green connector at the end of the dash may vary

Troubleshooting Section

De-pinning the door connectors

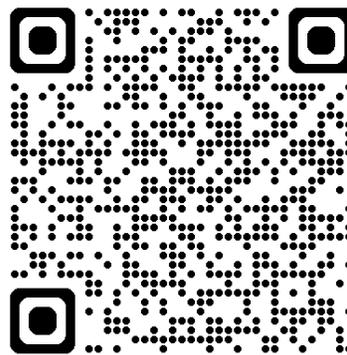

Removing the SGW bypass cable

