

Ram OEM Remote Start Installation Instructions

*****Follow steps 1-24 on the Mopar Installation Instructions, then follow the below steps for the programming with alfaobd.**

Remote Start

Notes

- Make sure to enable data logging and connect/backup to Google Drive
- 2018+ Trucks need security bypass cable

Procedure

Key in RUN position

Open App

Connect to OBD II device

Select **DODGE RAM 1500** or **2500** or **3500**

Select your **BODY COMPUTER > CONNECT**






Click on the **CAR WITH THE OPEN HOOD**

Click on **PROCEDURE TO START** and select **CAR CONFIG CHANGE**

Click **SELECT OPTION**




Select **VEHCONFIG 1-REMOTE START PRESENT**

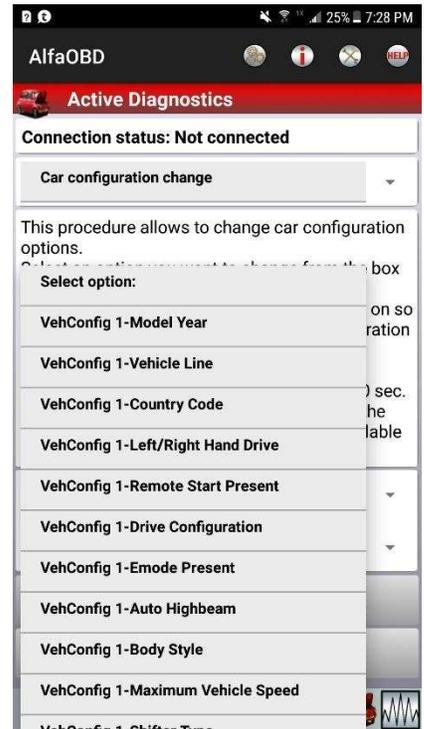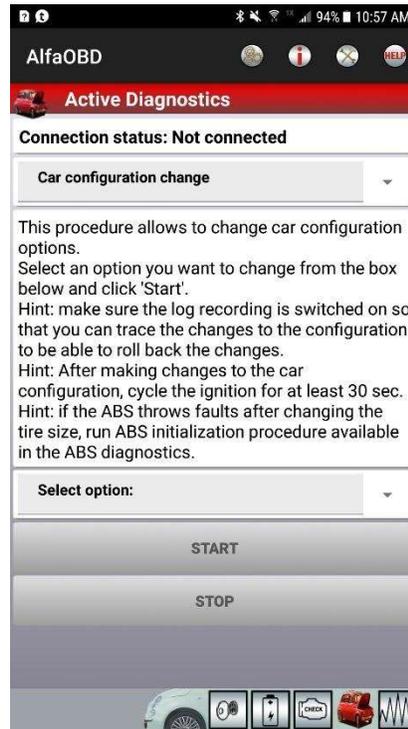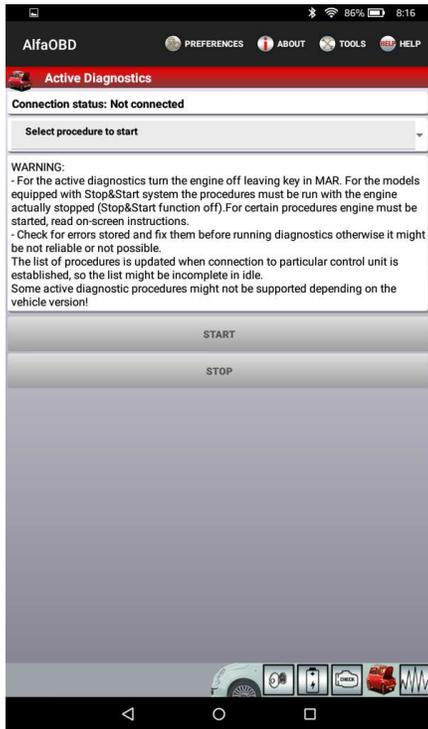

Click **SELECT VALUE >YES**
Click **START** and wait for it to complete



Click back on **VEHCONFIG 1** scroll Down and select **CBC I/O HOOD AJAR SWITCH PRESENT**

Click on **SELECT VALUE > YES**
Click **START** and wait for it to complete

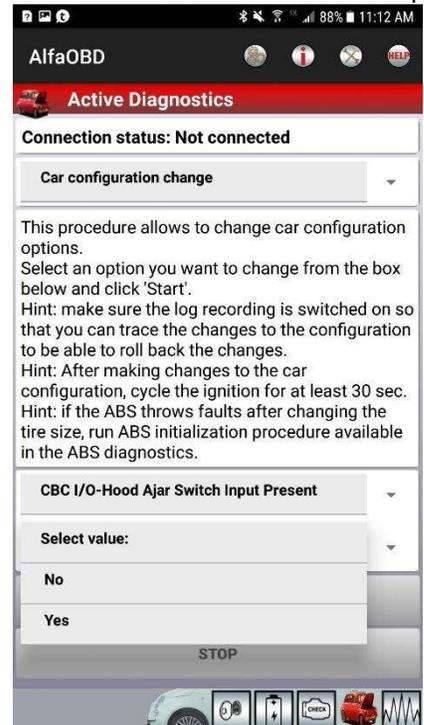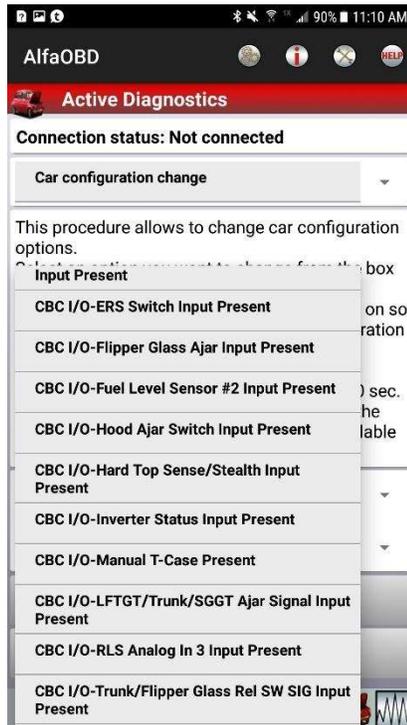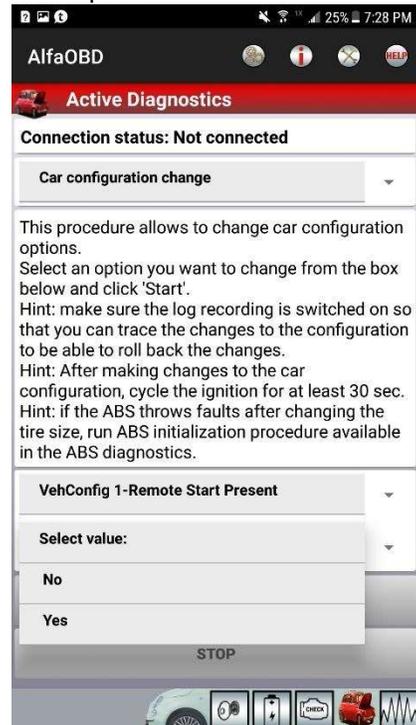

Click back on **CBC I/O-HOOD AJAR SWITCH**
 Scroll down and select
CBC I/O USAGE-HOOD AJAR SWITCH USAGE


Click **SELECT VALUE**
 Select **500 OHM SERIES AND 500 OHM PARALLEL RESISTORS**
 Click **START** and wait for it to complete

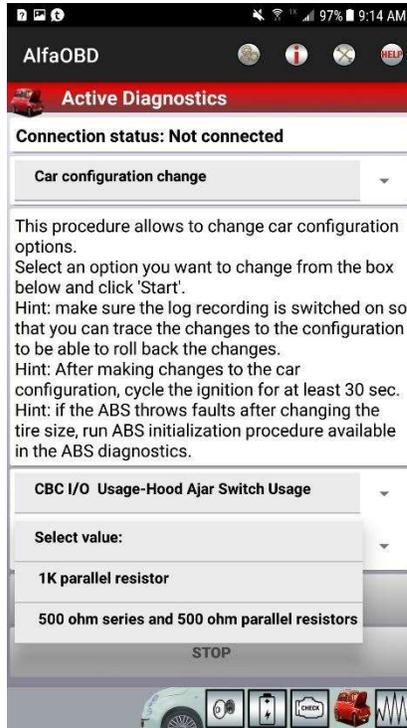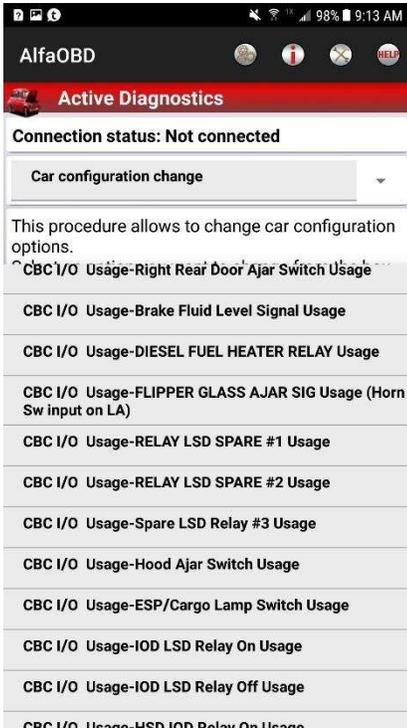

Back out to the home screen > click on **BODY COMPUTER**
 > select **RADIO FREQUENCY HUB(RFH)**

Select **YOUR RADIO FREQUENCY HUB**



click **CONNECT**

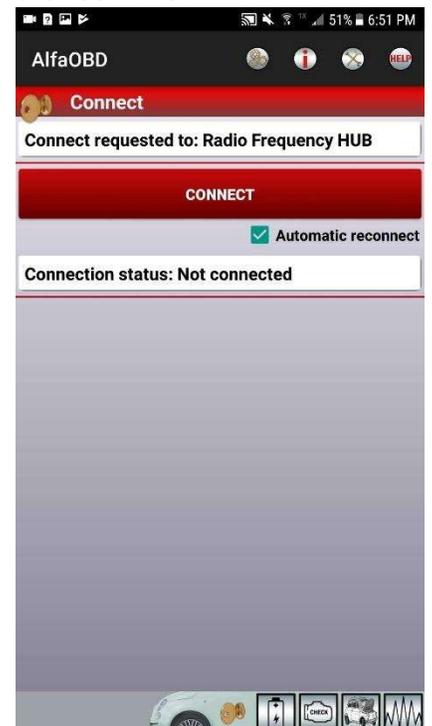

Click on the **CAR WITH THE OPEN HOOD**

Select RF-HUB **RESET/REPLACE**

Enter **4 DIGIT PIN** (Must get from dealer) > **START**

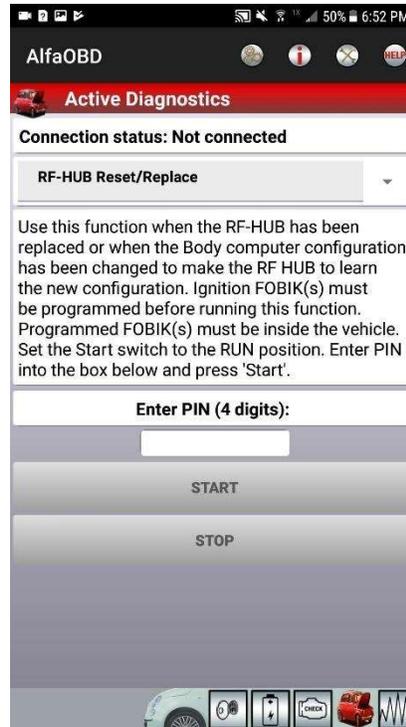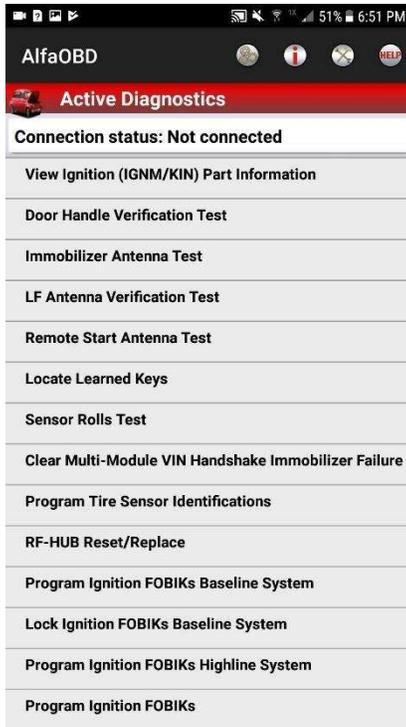

After reset is complete, **EXIT APP, TURN TRUCK OFF, WAIT 5-30 MINS** and try to use remote start to start the truck. You may need to drive the truck around for a bit, turn it off and on a few times before the remote start works. A good rule of thumb is to let the truck sit overnight and try it again in the morning.