



Ram Reg/Quad/Crew/Mega Cab HD CHMSL Cargo Camera Installation Instructions

Items Required for the Installation


SGW Bypass for 2018+ Ram Trucks (not required for Ram Trucks prior to 2018 model year)
 Alfaabd and compatible device to run it on (windows or Android device, does not support IOS)
 Obdlink MX+ or any other OBD Scanner compatible with Alfaabd (See www.alfaabd.com for a list)
 Radio must be a 2013+ 8.4 Uconnect. If the radio is a 2013-2015, it must be on software version 17.11.xx. If the radio is 2016+ then any software version should work

What's Included:


| Qty | Item |
|-----|-------------------------------|
| 1 | Main camera harness |
| 1 | Radio harness (if applicable) |

Before you get Started:


Installing SGW bypass (if applicable)

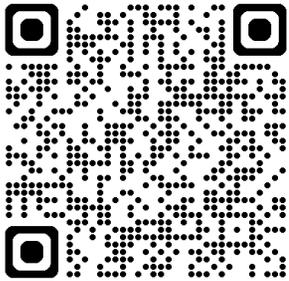

Backing up BCM config

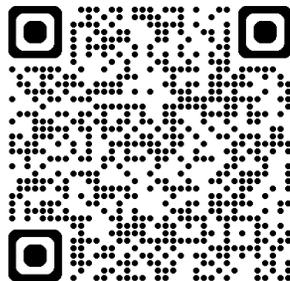


Programming the settings with alfaabd

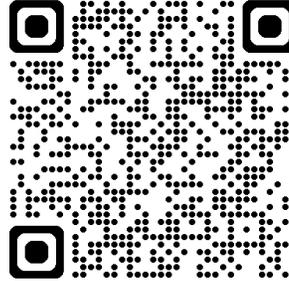


Troubleshooting Section

De-pinning the door connectors

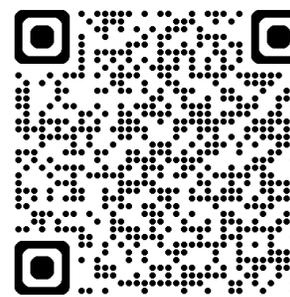


Removing the SGW bypass cable

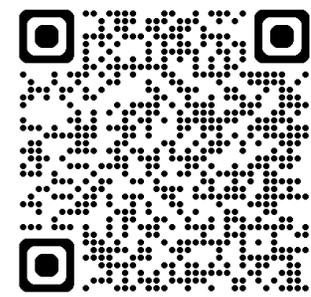


Installation Steps:


Walkthrough of the harness to be installed.

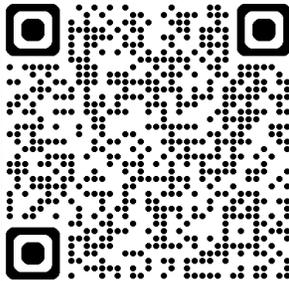

Pinning the main camera harness wiring

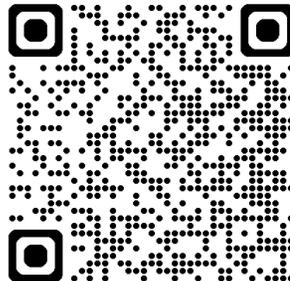

Pinning wiring to the radio if required

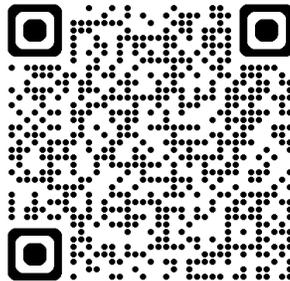

Note: Depending on the vehicle year, one of the camera wires pinning location at the green connector at the end of the dash may vary