




Metal Camper Shell V2 Manual

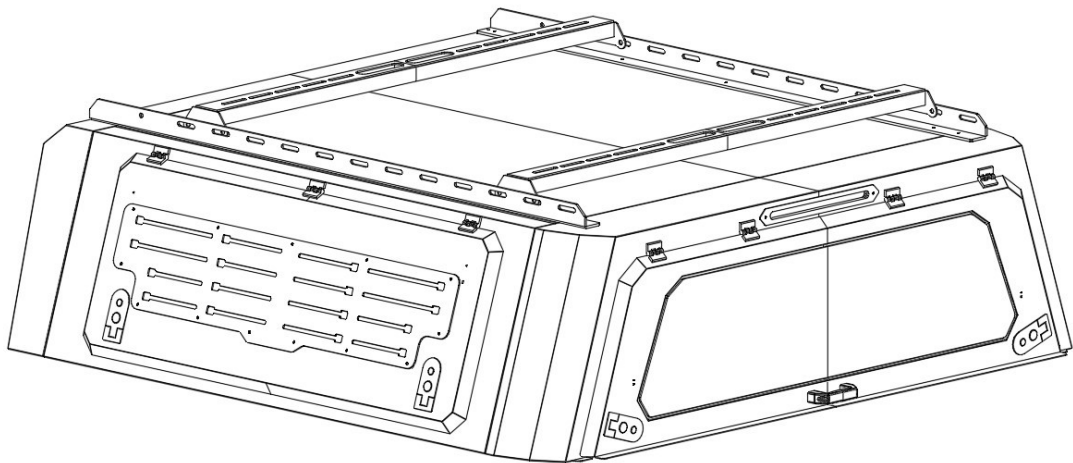


Items in Packages:

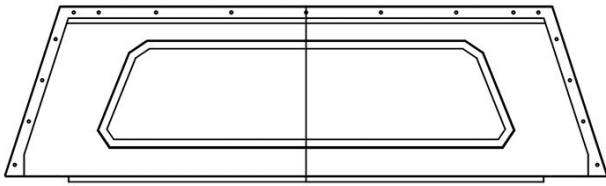


Front Panel

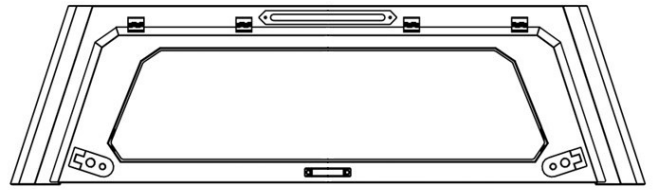


Rear Panel

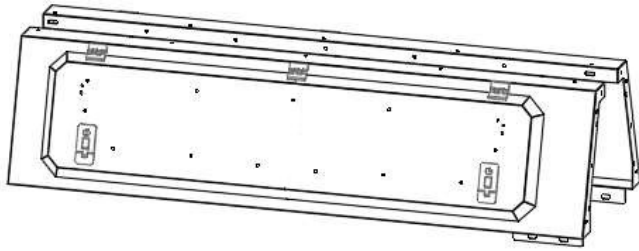


Side Panels

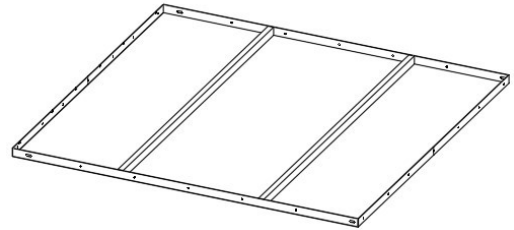


Roof Panel;
Some model might be divided
into 2 Pieces

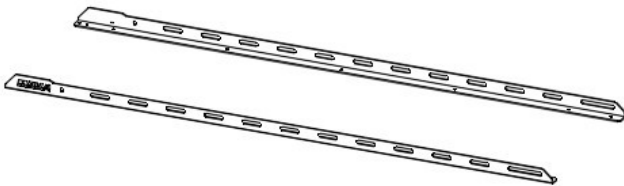

Top Rails

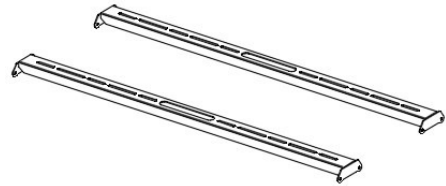

Cross Bars

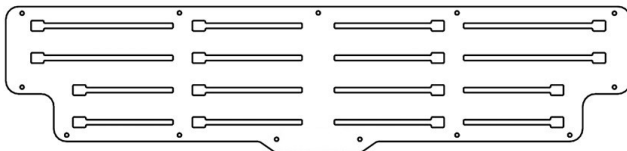

A Pair Of Molle
Panels



Nylon Spacers x 26



3rd Brake Light



Handle


Step 1

Attach the flat seals to the panels as the pictures show below




Step 2

Screw 2 roof panels together if applicable, ps: the side with letters "L" and /or " R" is the front side;

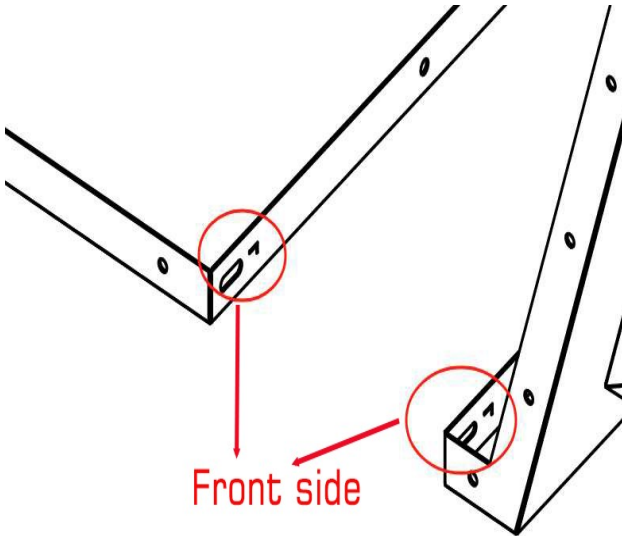

Step 3


Install the side panels, front and rear panel to the roof panel.
PS: The side with Letters "L" and/ or " R" is the front side.

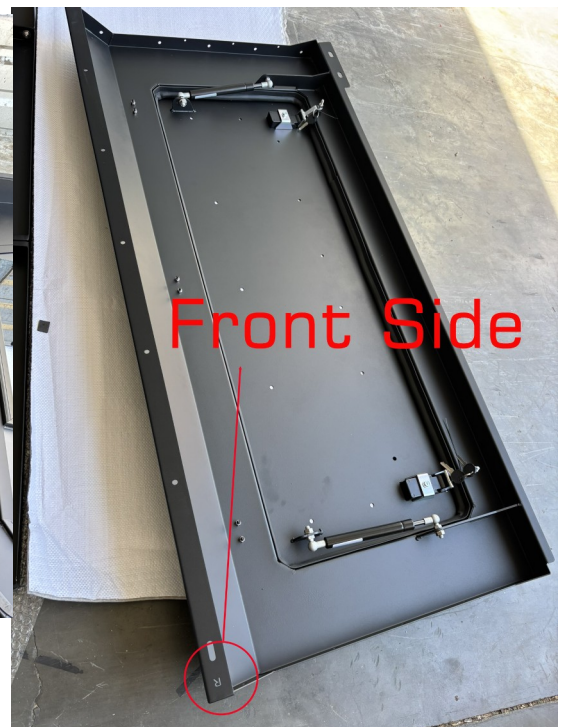




Step 4

Attach 2 molle panles to side doors.

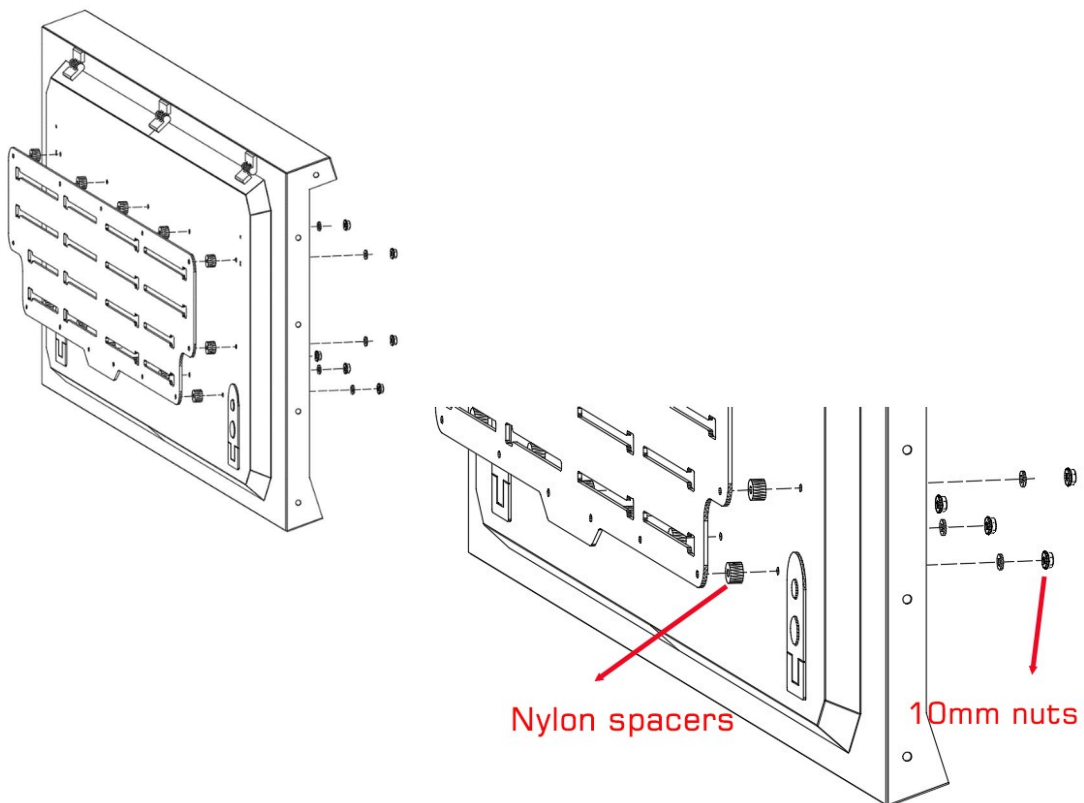

Step 5

Install the 3rd brake light and handle to the rear panel and door.


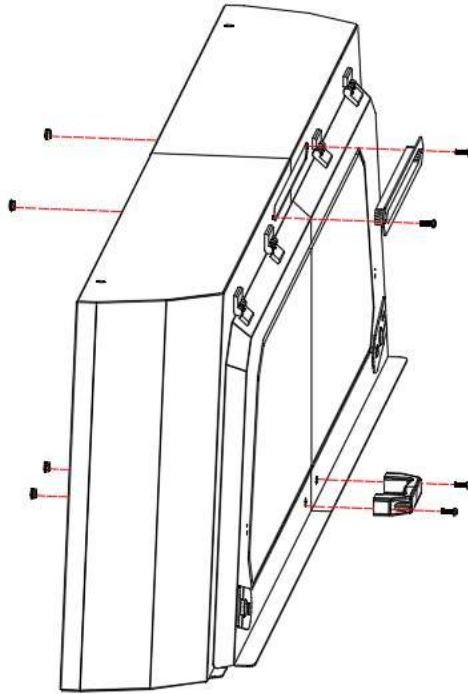


Wipe and clean the edge of the bottom of the topper, attach the 3M weather strip to the edge of the bottom of the topper as the picture shows



Step 6

Flip over the topper, and install the top rails to the roof panel, attach the cross bars to the top rails.

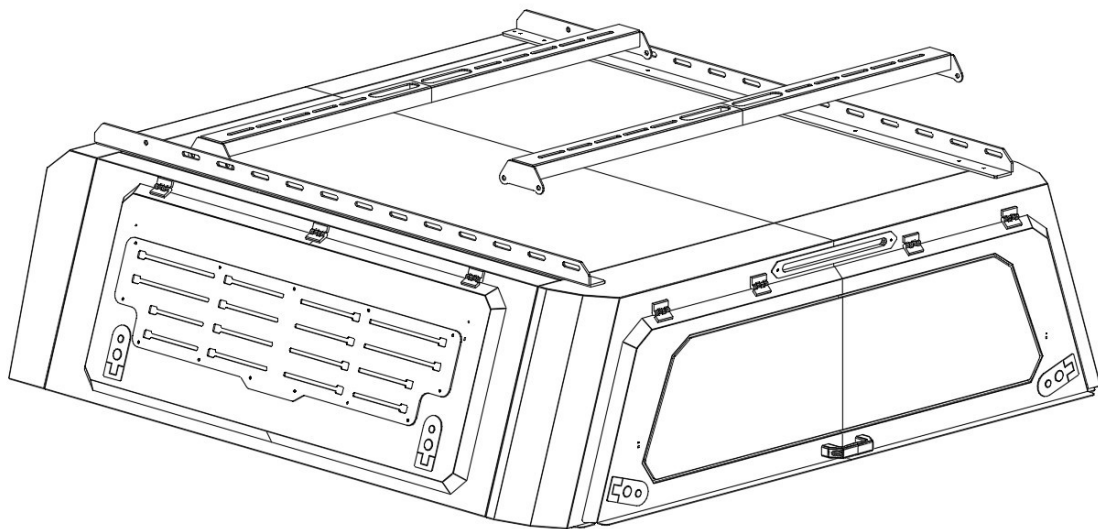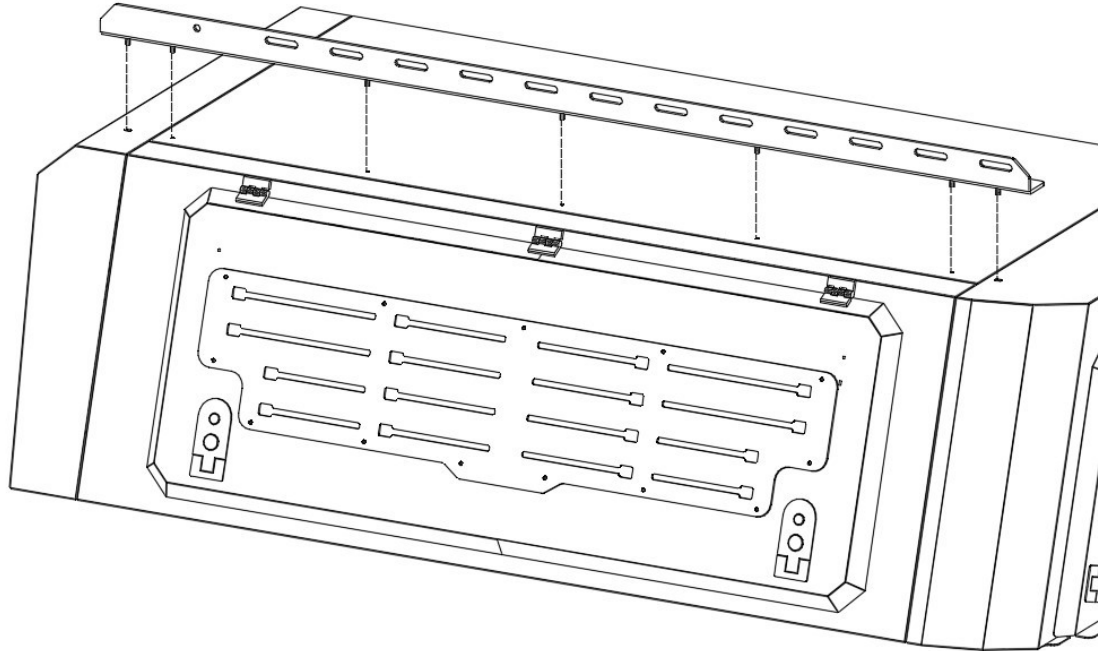

Step 7

Have at least 4 people to lift the topper to your truck bed and clamp it down.

