





EXO NAV 2017-2021 CAN-AM MAVERICK X3 FRONT GRILLS INSTALLATION INSTRUCTIONS

NOTE: The main (big) grill bolts directly onto the vehicle with no modifications required. Only two holes will need to be drilled to install the hood grill. Only two holes will need to be drilled to install the lower 3 grills.


MAIN GRILL

1. Remove the hood from the vehicle by prying up on each of the four corners then the front center.
2. Remove the two screws behind the original grill with a short screw driver. There are now only two to four clips holding the original grill on the vehicle. The grill can now be pulled off the car.
3. Remove original clips from vehicle. These will not be re-used.
4. Your new EXO NAV grill uses six bolts to attach. Place the grill into position, slip in the six bolts, then install the washer and nut behind the vehicle's plastic front end to hold it in. Tighten nuts only enough to hold the grill in place. Do not overtighten so much that the plastic vehicle front end is distorted.

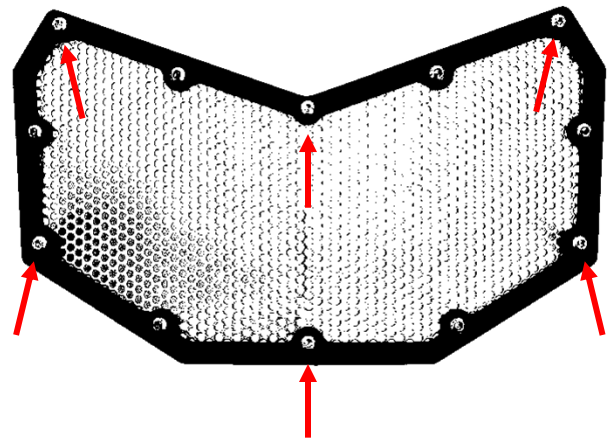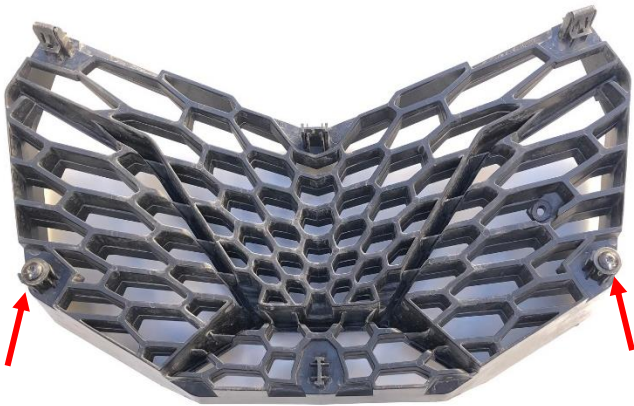

HOOD GRILL


1. Place hood grill into position.
2. Reinstall hood to check for correct placement of hood grill. Reposition hood grill as desired.
3. Once the hood grill is where you want it, drill two $\frac{1}{4}$ " holes on the sides of the plastic vehicle front end.
4. Bolt the hood grill in.
5. Re-install the vehicle's hood.

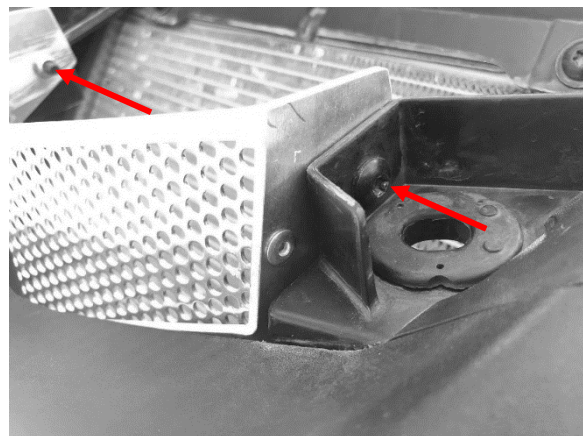

3 LOWER GRILLS

NOTE: Only 6 bolts total are used to bolt the 3 lower grills onto the stock plastic fascia of the vehicle. The original grills on the vehicle are not removable.

1. Place the EXO NAV passenger side lower grill onto the vehicle over the stock grill.
2. Bolt "B" will require a $\frac{1}{4}$ " hole drilled in the vehicle's plastic fascia. Note the location (in inside corner), remove EXO NAV grill, and drill the $\frac{1}{4}$ " hole. BE CAREFUL NOT TO DRILL INTO YOUR RADIATOR!
3. Place the EXO NAV lower grill onto the vehicle again, insert long bolt into new hole, and install lock nut (no washer) onto backside of vehicle's fascia. Hand tighten this lock nut for now.
4. Repeat steps 1-3 for driver's side lower grill.
5. Place EXO NAV center lower grill onto the vehicle over the stock grill.
6. Insert bolts "A" through the EXO NAV grills and through the holes in the vehicle's stock grill.
7. Insert fender washer and nut onto backside of the stock grill near radiator. Be careful not to damage your radiator. Tighten lock nuts snug but not so tight that parts get distorted.
8. Tighten lock nuts on bolts "B" but not so tight that parts get distorted.

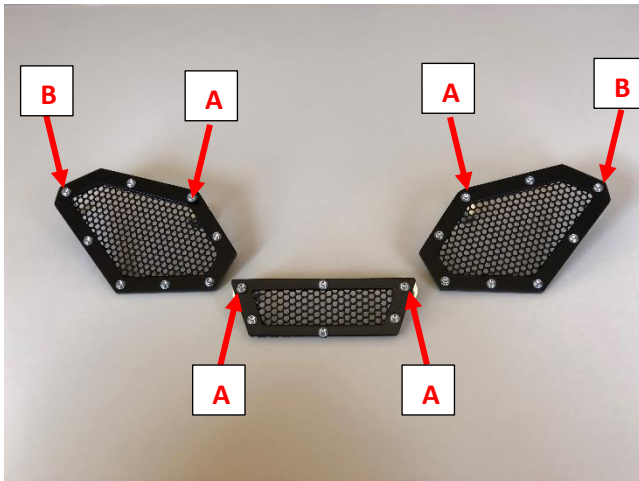

ENJOY AND THANK YOU!

