

JLU 2018 & UP 4 DOOR

EZ WINDOW ASSEMBLY

MANUAL

#1918 0045

MAKE IT EZ

Print the latest manual &
Watch the EZWINDOW Video
Part #1918 0045



Scan QR CODE for
Video & PDF MANUALS

READ FIRST

There are many variations of Jeeps, soft tops, hardtops, and those with & without speakers.

When **INSTALLING**, if your **EZTRUNK** or **EZWINDOW** doesn't fit due to your Jeeps' variations, please call us.

WE HAVE THE COMPONENTS TO MAKE IT WORK PROPERLY. We also offer help with installations via FaceTime, Skype, cell, or any other way you would like to get the install done quickly.



Customer Service

Any questions? WE ARE HERE TO HELP!

Text or Call 203-901-0055 / Call 203-591-9060

EMAIL US: SERVICE@EZTRUNK.NET





7 day a week 8:30 am EST

DO NOT RETURN, WE CAN HELP YOU!

PO# :

MAKE IT EZ: CHECK OUT THE ASSEMBLY INSTRUCTION VIDEO - USE QR CODE

Please read instructions fully before beginning assembly

NO	Illustration	Description	Part #	QTY.
1		Clamps For Roll Bar	25653-2B	2
2		Support Bar For Driver Side	53516B	1
3		Support Bar For Passenger Side	53517B	1
4		Plastic Bracket For Driver Side	189004	1
5		Plastic Bracket For Passenger Side	189003	1
6		Metal Plates	15900	2
7		Metal Pale Bolts M5x30	55301	4
8		Self-drill Screws	4122	2
9		Self-drill Screws	4322	5
10		Clamp Lock Nuts M6	10062	2+1 extra
11		Pins	25641	2
12		Velcro Straps	251802	2
13		Roll Bar Clamp Screws	66041	2+1 extra
14		Wrench	#10	1
15		Corrugated Pins	24811	2+1 extra
16		Bungee w/ Hooks	5001	2
17		Rubber Cap For Clamp Bolt	M6	1 extra


MAKE IT EZ: CHECK OUT THE ASSEMBLY INSTRUCTION VIDEO - USE QR CODE

1

#55301 #15900



#189004 Driver side #189003 Passenger side

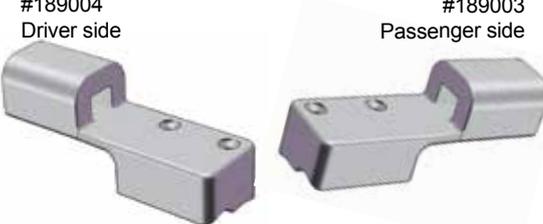

2

#15900

window rear bar

Drop metal plate inside groove of window rear bar.



Remove window rear bar



3

WINDOW REAR BAR WITH OPEN SLOT

#55301

#189004 Driver side

Line up part 189004 as close as you can to the first ridge



#189004 Driver side

#15900

window rear bar

4

#4322

WINDOW REAR BAR WITHOUT OPEN SLOT

Line up part 189004 as close as you can to the first ridge



#189004 Driver side

window rear bar

DO NOT USE POWER TOOLS

Follow instructions to install the left & right sides

5

#4122



1. Remove rear window off the Jeep

2. Use self-drill screw to make a hole 1/2" from the side

3. Drill a hole on each side of the rear window



1/2" [12mm]



6

#5001


#24811



MAKE IT EZ: CHECK OUT THE ASSEMBLY INSTRUCTION VIDEO - USE QR CODE

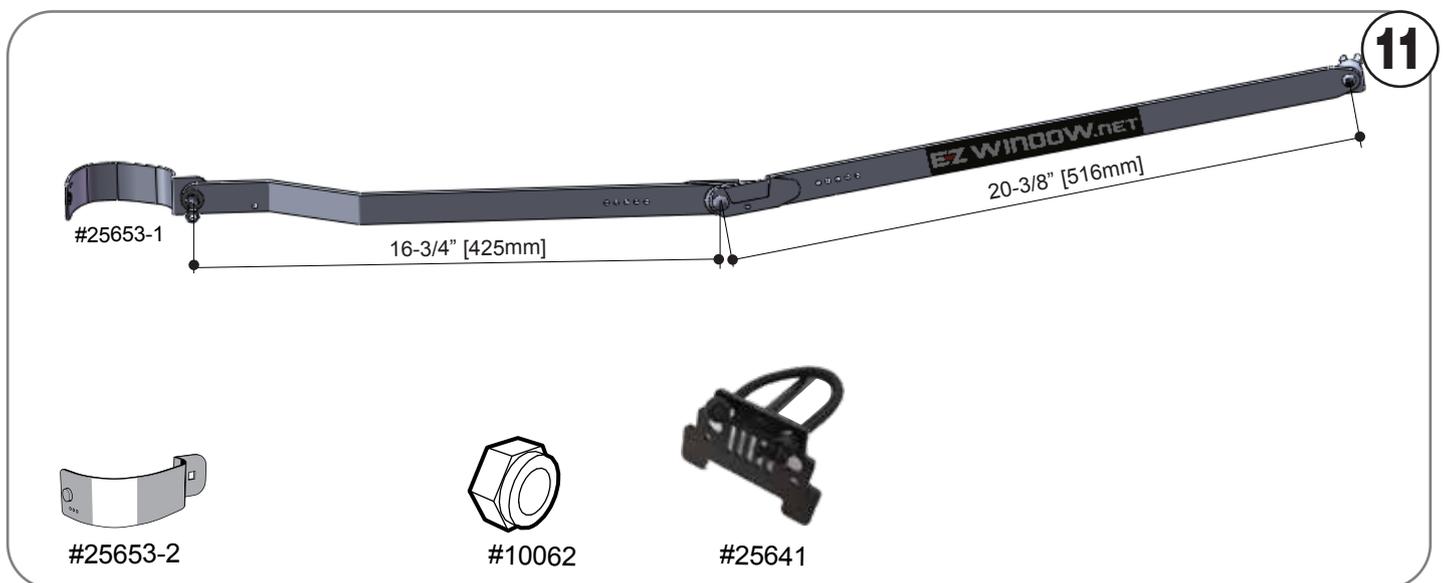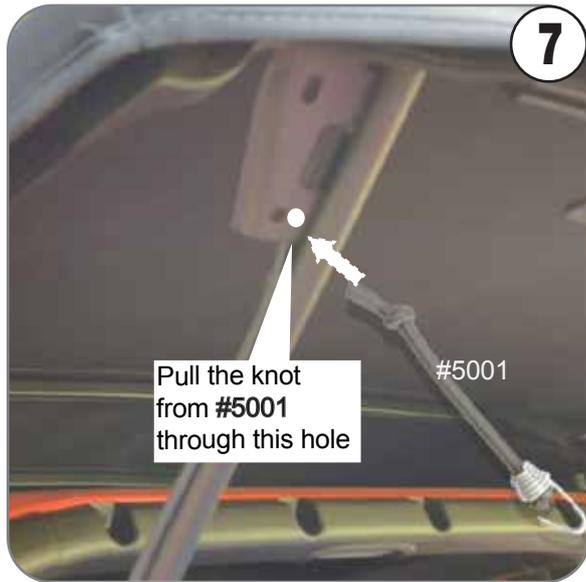

MAKE IT EZ: CHECK OUT THE ASSEMBLY INSTRUCTION VIDEO - USE QR CODE

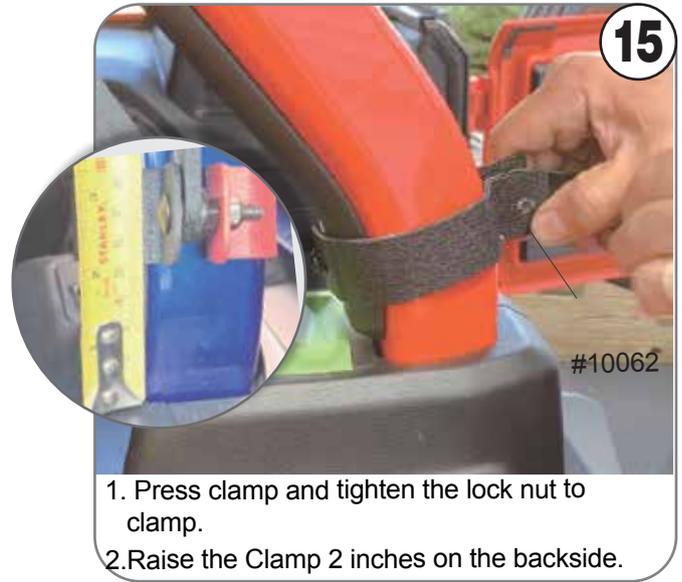


MAKE IT EZ: CHECK OUT THE ASSEMBLY INSTRUCTION VIDEO - USE QR CODE



How to use EZWINDOW



STORING EZWINDOW WHEN YOU INSTALL HARDTOP OR GO TOPLESS

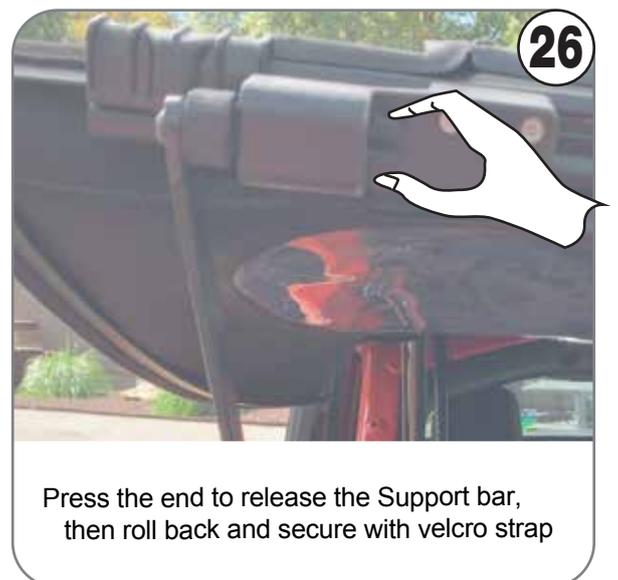



**Scan QR CODE for
Video & PDF MANUALS**

Customer Service

Any questions? WE ARE HERE TO HELP YOU!

Text or Call 203-901-0055 / Call 203-591-9060

EMAIL US: SERVICE@EZTRUNK.NET

7 day a week 8:30 am EST

DO NOT RETURN, WE CAN HELP YOU!