## EZ-FOLDING / ROLLING DOOR CART - 2 DOOR EZTRUÇK™ ASSEMBLY

### MANUAL


#1900 0082

### MAKE IT EZ


Print the latest manual & Watch the EZTRUNK Video Part # 1900 0082



Scan QR CODE for Video & PDF MANUALS

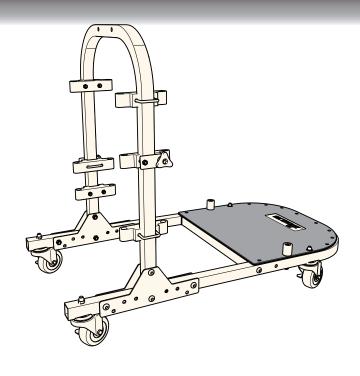

#### **RECOMMENDED TOOLS**



# **Customer Service**

Any questions? WE ARE HERE TO HELP!

Text or Call 203-901-0055 / Call 203-591-9060 EMAIL US: SERVICE@EZTRUNK.NET

7 days a week 8:00 AM - 8:00 PM EST

### **WE ARE HERE TO HELP YOU!**


PO#:


### Please read instructions fully before beginning assembly


NO	Illustration	Description	Part #	QTY.
1		Upper Frame Tube	81401	1
2		Base Frame Tube	81402	1
3		Base Frame Tube	81403	1
4	0,000	Side Plate	81404	4
5		Base Frame Plate	81405	1
6		Door Hinge Pin Bracket	81406	6
7		Plastic Bumper	81407	4
8		Wheel Castor	81408	4
9		Bottom Wheel Castor Plate	81409	4
10		U Bolt	81410	6
11	(6)	Thumb Turn Nut	81411	2
12	0 0	Rectangle Plate	81412	2
13	9000	Straight Base Tube	81413	1
14		Locking Pin	08352	8
15		Side Plate / Base Frame Tube Bolt	08452	10
16		Plastic Bumper Bolt	56652	4
17	$\odot$	Washer For Wheel Castor	1808012	4
18		Plastic Cap For Nut	20082	4
19		Large Lock Nut	10082	12+ 2 extra
20		Small Lock Nut	10062	12+ 1 extra
21		#6 Allen Wrench	#6	1
22		#10 & #13 Wrench	#10	1

PATENT NO.: 10,981,588 & PATENT PENDING CUSTOMER SERVICE: SERVICE@EZTRUNK.NET Text & Call: 203-901-0055 / Call: 203-591-9060

### BEFORE BEGINNING, SEE THE ASSEMBLY INSTRUCTION VIDEO ON **EZTRUNK.NET**

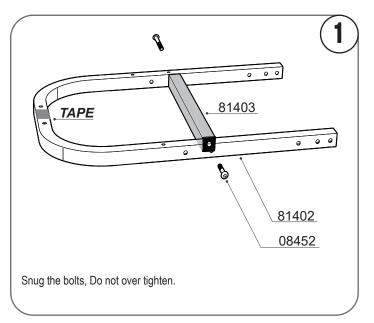

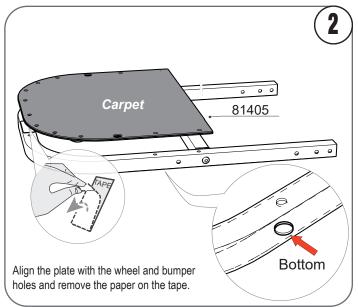


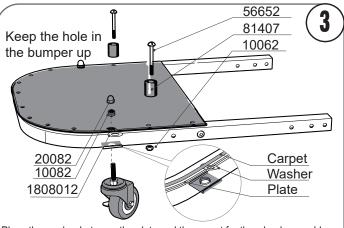


Place the washer between the plate and the carpet for the wheel assembly. Put the nuts on but don't tighten.

Place the plastic bumper screw in the plastic so the head of the screw is below the top of the plastic.


Tighten all bolts and then place plastic caps on the wheel nuts.

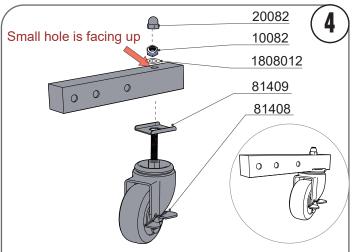

Place the bottom wheel Castor plate on wheel assembly to straight base tube. The small hole is facing up. Tighten the bolts and then place plastic caps on the wheel nuts.

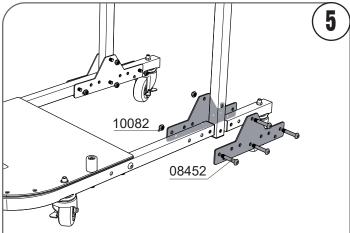


Connect the two plates and tubes together. Tighten the two middle upright tube screws. The folding outside screws should be snug not tight, so the bottom folding base swings up easily. The base should not drop down unless you pull it down.

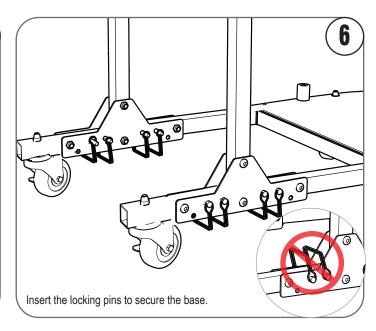

PATENT NO.: 10,981,588 & PATENT PENDING CUSTOMER SERVICE: SERVICE@EZTRUNK.NET Text & Call: 203-901-0055 / Call 203-591-9060


1900 0082-A813-Ver. A 9/26/21

### BEFORE BEGINNING, SEE THE ASSEMBLY INSTRUCTION VIDEO ON **EZTRUNK.NET**

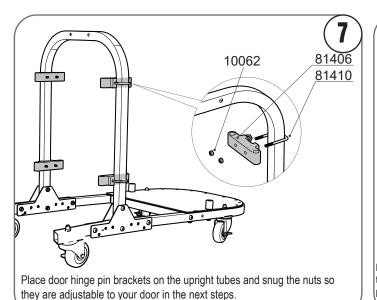


10062 81411 81406 81406


Place middle door hinge pin bracket on the upright tubes. Snug the nuts so they are adjustable to lock down your door in the next steps. The Middle bracket is a locking mechanism. This protects the doors from falling off when moving the cart.

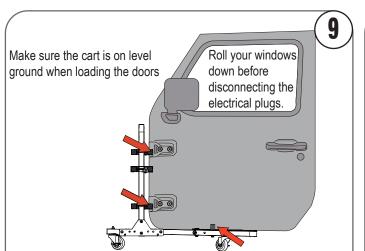


Place the doors on the cart with the bumpers on the outside and adjust the brackets so they are hitting the top of the door hinge brackets.

Tighten the cart hinge brackets so they do not move. Make sure the cart is on level ground when loading the doors.

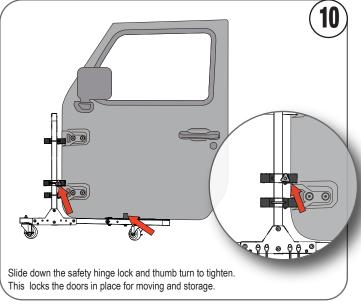

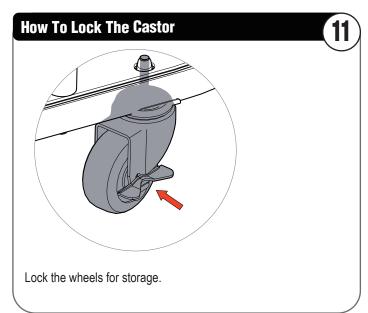


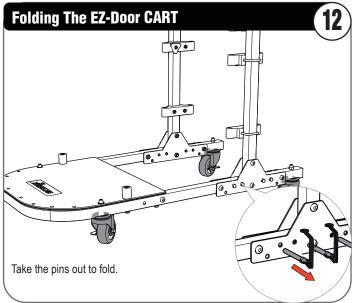

PATENT NO.: 10,981,588 & PATENT PENDING CUSTOMER SERVICE: SERVICE@EZTRUNK.NET Text & Call: 203-901-0055 / Call 203-591-9060

1900 0082-A813-Ver. A 9/26/21

### BEFORE BEGINNING, SEE THE ASSEMBLY INSTRUCTION VIDEO ON **EZTRUNK.NET**

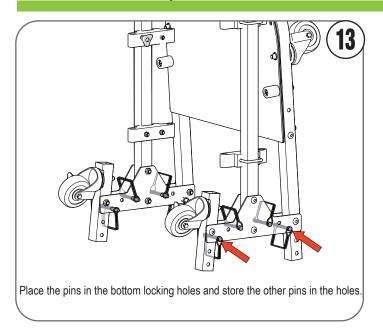

# **Customer Service**

Any questions? WE ARE HERE TO HELP!

Text or Call 203-901-0055 / Call 203-591-9060 EMAIL US: SERVICE@EZTRUNK.NET

7 days a week 8:00 AM - 8:00 PM EST

### **WE ARE HERE TO HELP YOU!**

PATENT NO.: 10,981,588 & PATENT PENDING CUSTOMER SERVICE: SERVICE@EZTRUNK.NET Text & Call: 203-901-0055 / Call 203-591-9060

1900 0082-A813-Ver. A 9/26/21