



JKU EZ WINDOW.NET

SLANT TOP ASSEMBLY MANUAL

LOT#:



Customer Service

If you have a question or concern

Email: service@neopmail.net






or call 203-591-9060

Monday-Friday 8:30am - 4:30pm EST

PDF manual on www.EZTRUNK.com





DO NOT RETURN TO THE STORE!

Please read instructions fully before beginning assembly

NO	Illustration	Description	Part #	QTY.
1		Clamp	25651B* 25651R*	2
2		Support bar_Driver	23516B* 23516R*	1
3		Support bar_Passenger	23517B* 23517R*	1
4		Plastic holder_Driver	188006	1
5		Plastic holder_Passenger	188007	1
6		Metal plate	25210	2
7		Bolt M5x35	55351	4
8		Bolt M6x30	26301	2
9		Lock Nut M6	10062	5**
10		Nut M6(on clamp)	10060	2
11		Pin	25641	2
12		Velcro strip	251801	2
13		Metal washer (black)	1806012	4
14		Plastic washer (dark grey)	1806112	4
15		Wrench #10	#10	1


* Two different colors. B for black and R for red

** 1 extra piece

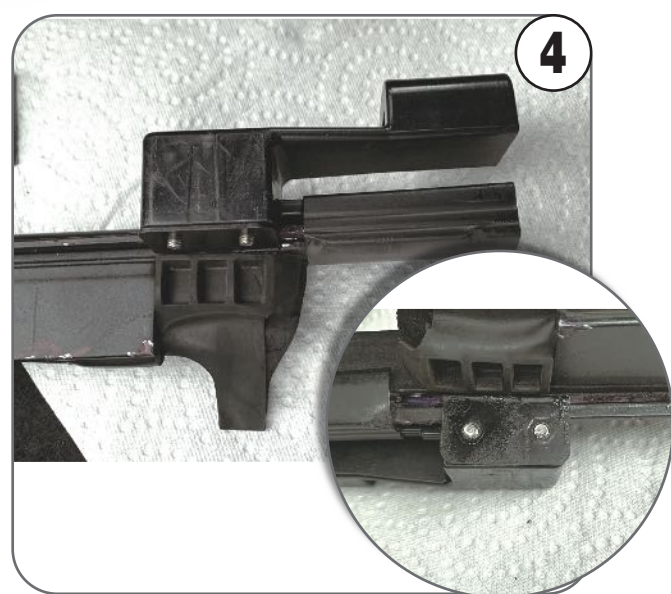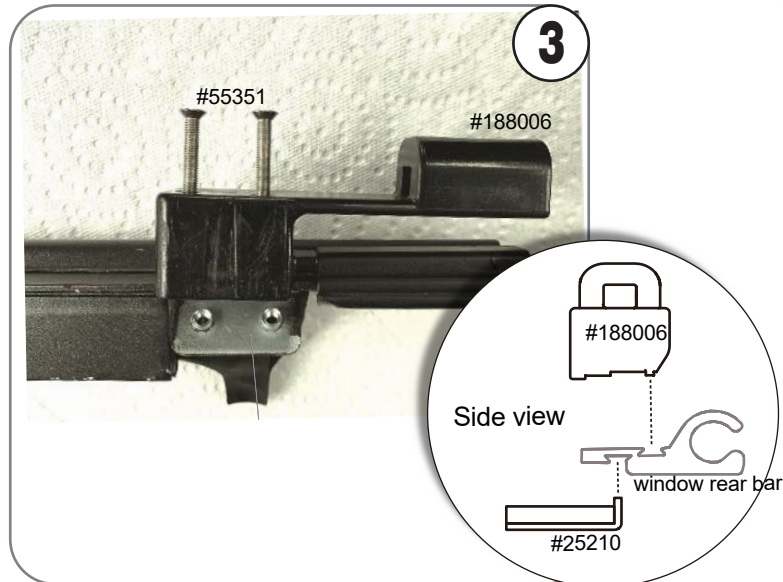
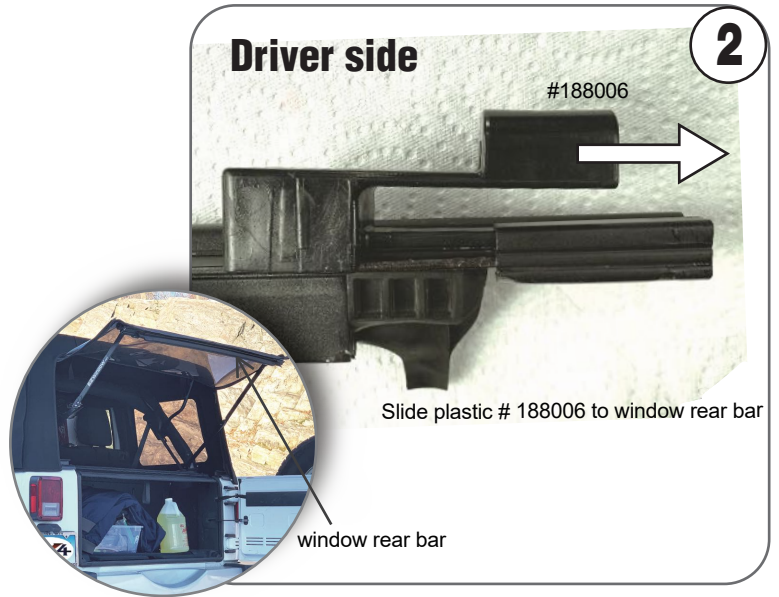
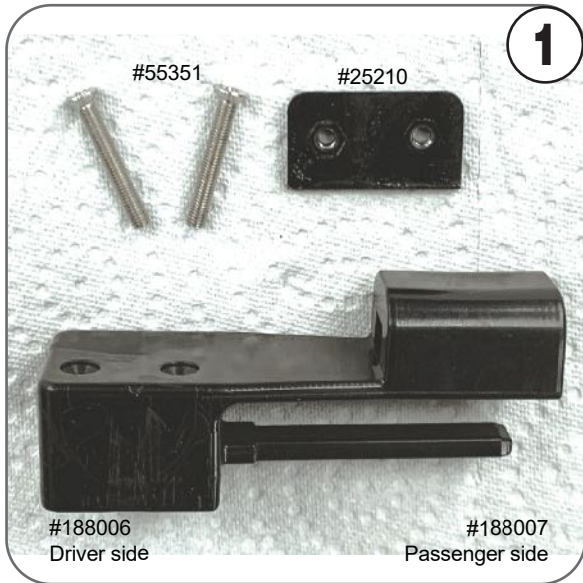


Repeat steps 1~4 for passenger side





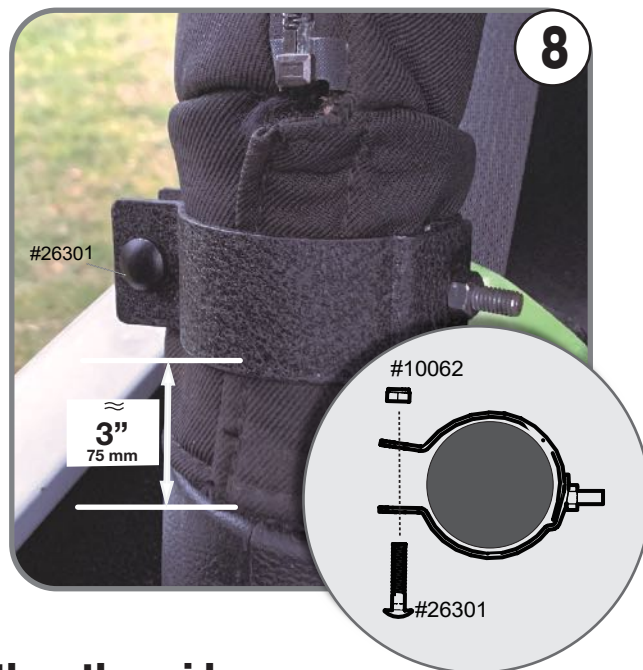


Repeat steps 5-8 for the other side

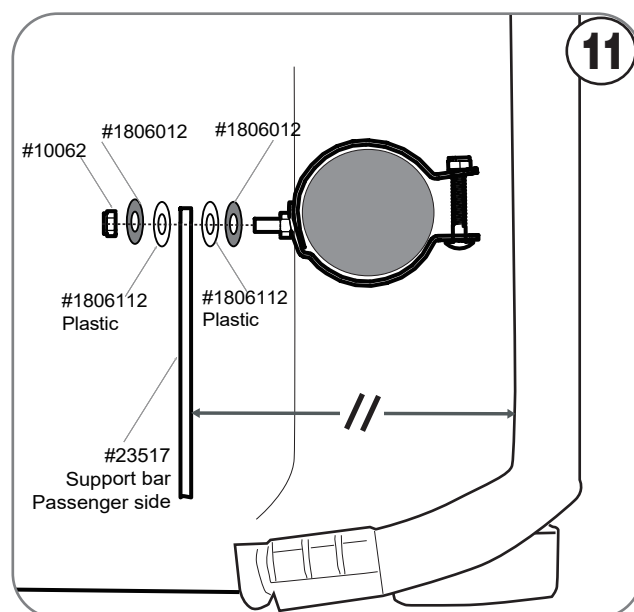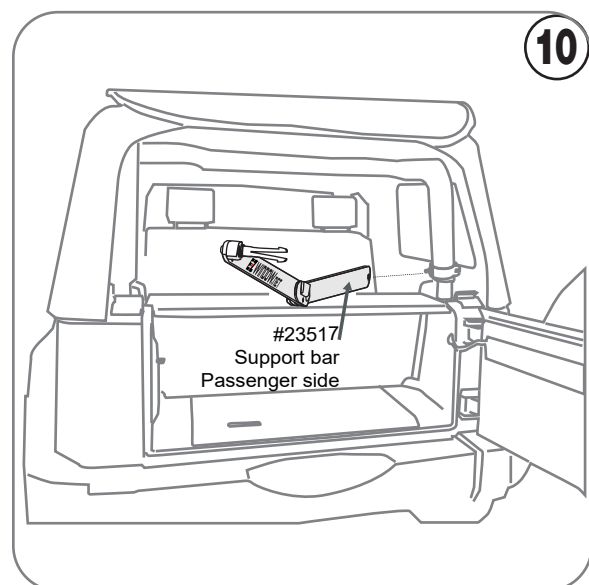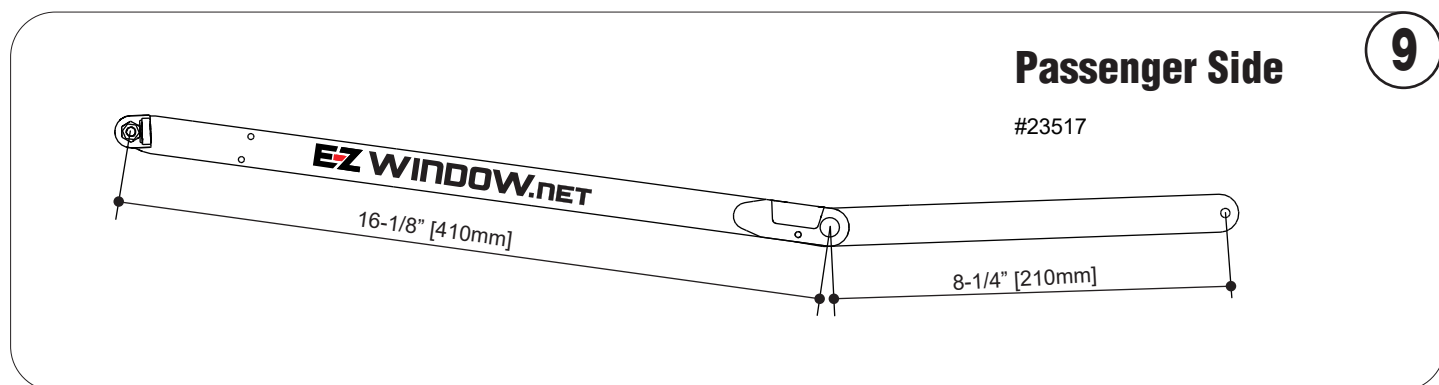



Repeat steps 10~12 for driver side

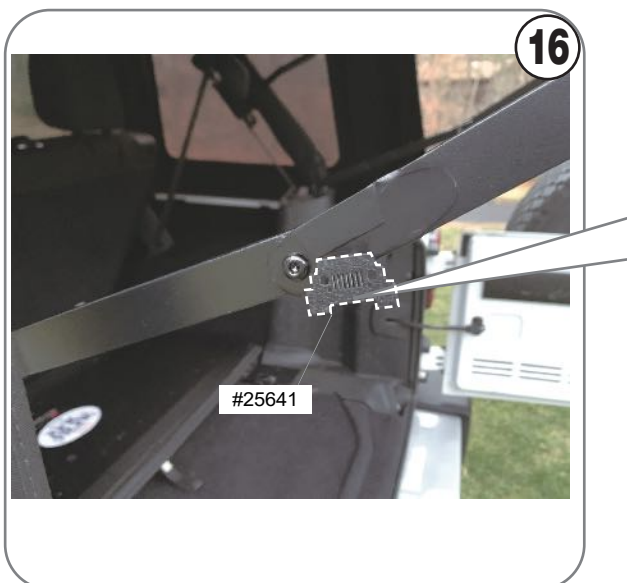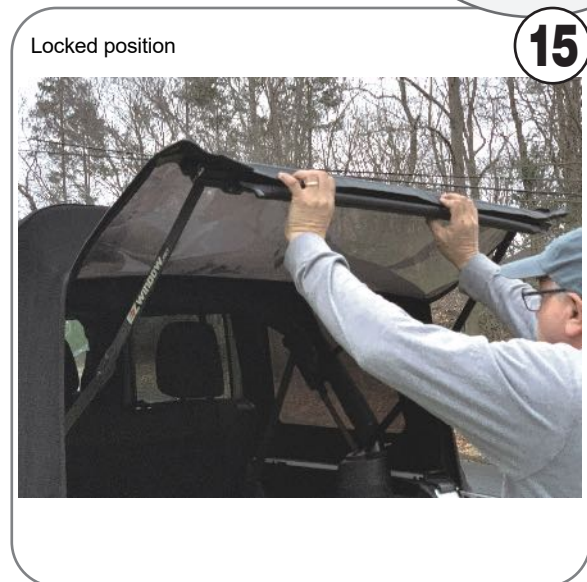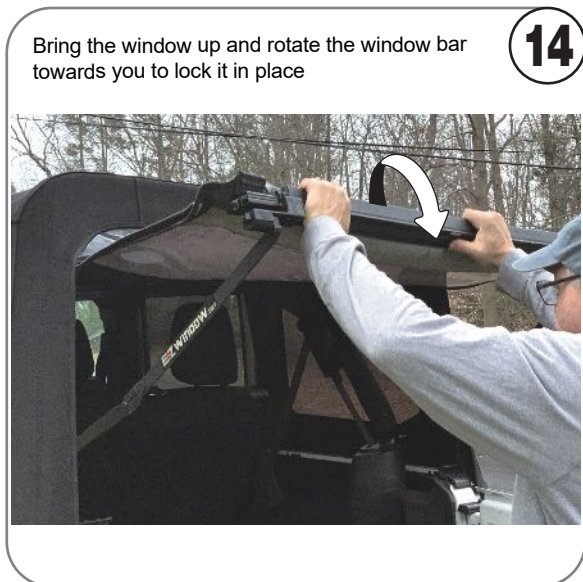

FOLDING

17



Remove the bungee and pull the pin

18



To store the pin

19



Bend the side bars up to fold the window down

20




STORAGE

21





Press the end and pull the Support bar out

22

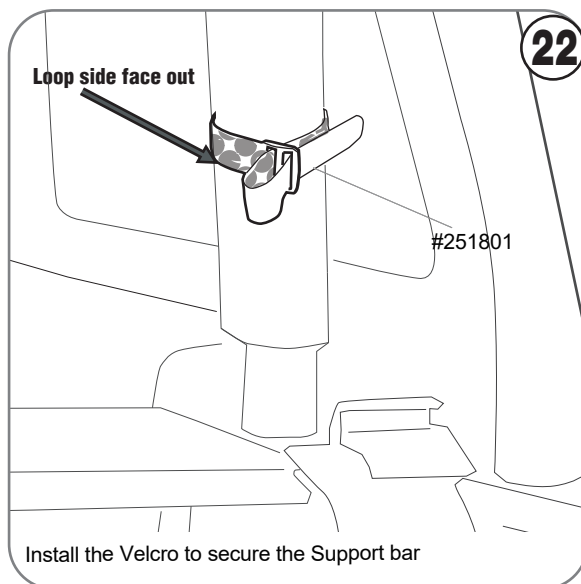

23

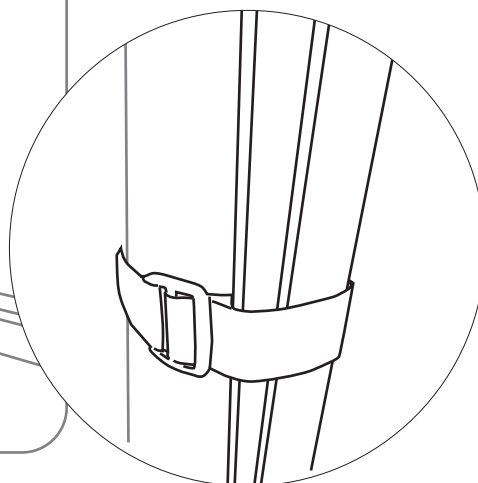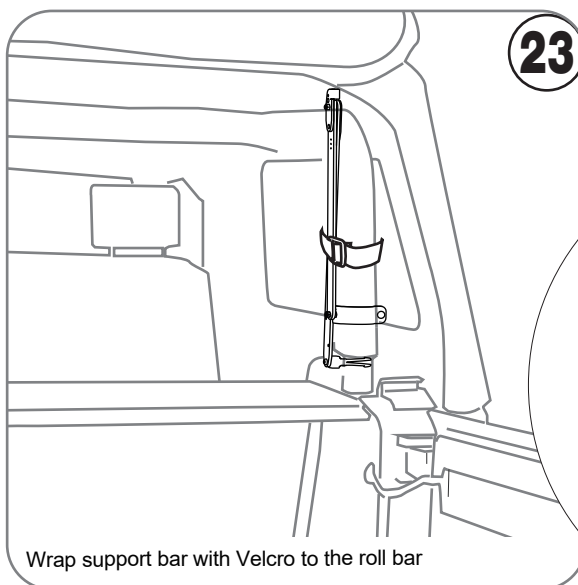

Customer Service

If you have a question or concern

Email: service@neopmail.net
or call 203-591-9060

Monday-Friday 8:30am-4:30pm EST

PDF manual on www.EZTRUNK.com

DO NOT RETURN TO THE STORE!