


LOT#:

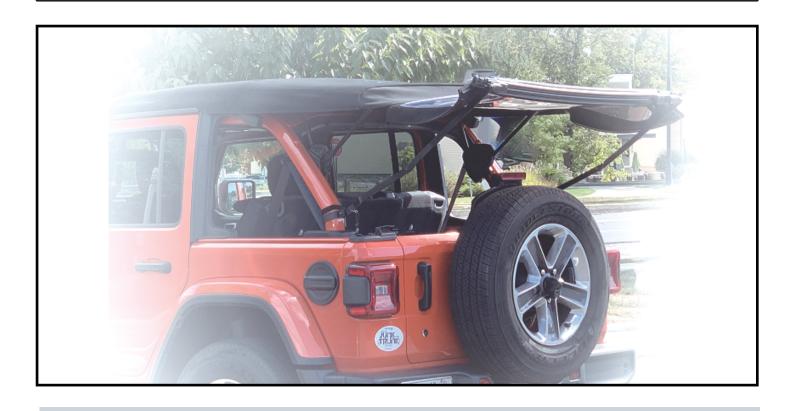

# **Customer Service**

If you have a question or concern

#### Email: service@neopmail.net or call 203-591-9060


Monday-Friday 8:30am - 4:30pm EST PDF manual on www.EZTRUNK.com

## **DO NOT RETURN TO THE STORE!**


## Please read instructions fully before beginning assembly


NO	Illustration	Description	Part #	QTY.
1		Clamp_H	25643-2B* 25643-2R*	2
2	#25643-1 #426 #416	Support bar_Drive	53416B* 53416R*	1
3	#417 #427 #25643-1	Support bar_Passenger	53417B* 53417R*	1
4		Plastic holder_Drive	189004	1
5	5	Plastic holder_Passenger	189003	1
6		Metal plate	15900	2
7		Bolt M5x30	55301	4
8	himo	Self-drill screws	4122	2
9		Lock Nut M6	10062	3**
10	Ref. (	Pin	25641	2
11		Velcro strip	251802	2
12	6	Round head screw	66041	3**
13	$\sum$	Wrench #10	#10	1
14	$\sim$	Corrugated Pin	24811	3**
15		Bungee w ith hook	5001	2


 $^{\ast}$  Two different colors. B for black and R for red  $^{\ast\ast}$  1 extra piece

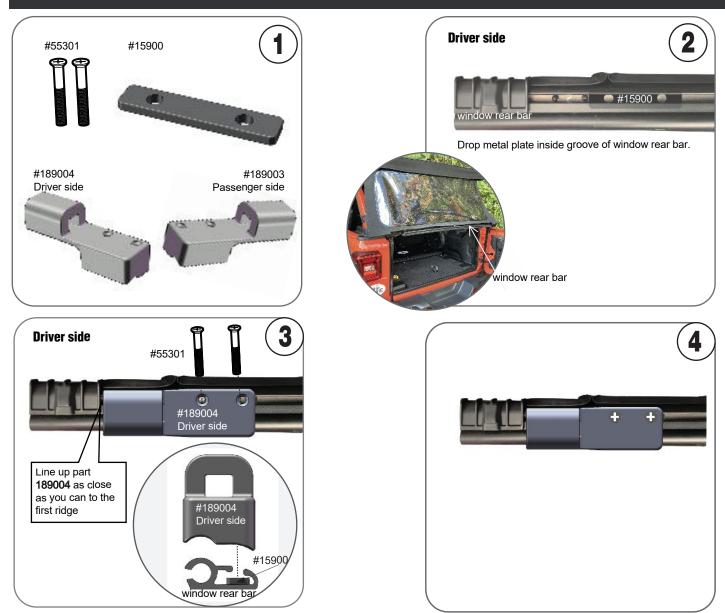

### Repeat steps 1~4 for passenger side

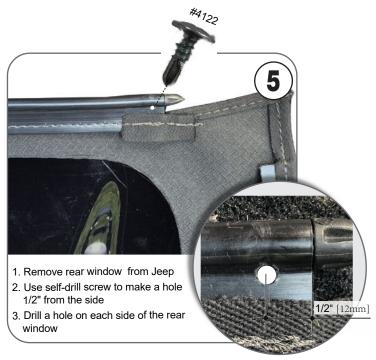

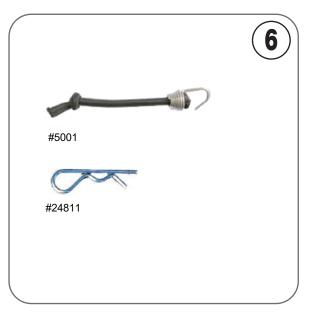


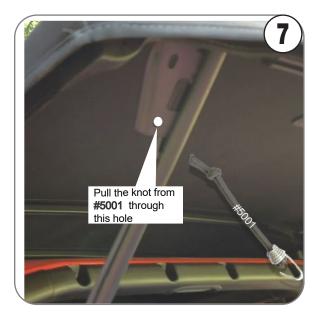







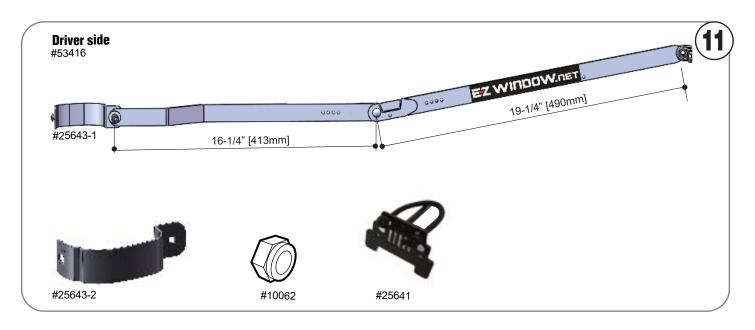









Hand press clamp and tightening a lock nut to clamp.
Clamp high 2 inch.



1. Install rear aluminium bar to soft windows.

### Repeat step 13~15 for the other side





### How to use EZWINDOW




Fold the side of the window with one hand
Pull the EZWINDOW with the other hand






Open the back door
Pull up the rear window with both hands

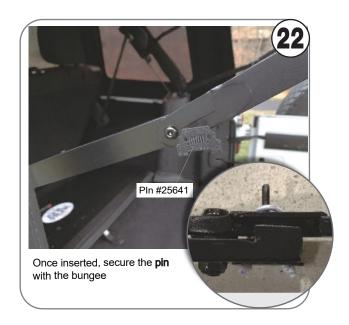

## How to Storage EZWIDOW

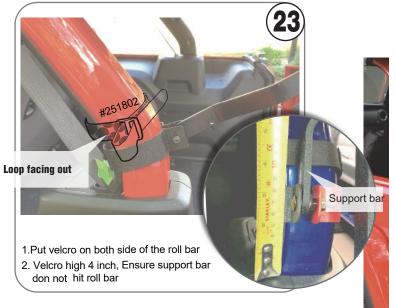





Fold the support bars to lower the window









JL-19180044\_ver. A 20192D

# **Customer Service**

If you have a question or concern

#### Email: service@neopmail.net or call 203-591-9060

Monday-Friday 8:30am-4:30pm EST PDF manual on www.EZTRUNK.com

## **DO NOT RETURN TO THE STORE!**