



DASHCAM HARDWIRE INSTALLATION GUIDE (A35/45 AMG)



Tools Required

T25 Torx

Panel removal tools (usually come with kit)

Hardwire kit – available [here](#)

Or

A fuse tap piggy-back fuse holder



Purchasing the kit

Most decent dashcam manufacturers sell hardwire kits alongside their cameras. The beauty of Amazon means you can also buy a universal hardwire kit which will fit most applications (as per my link). I would advise always to invest in the hardwire kit as recommended by the manufacturer, specifically on the more expensive brands where separate wifi dongles and battery supplies are required for parking cam etc. That said, it's perfectly achievable using universal kits. Always use fuses as recommended by the manufacturer (5-10 amp is the norm)

Installation

The fuse box you will need to access is located in the passenger side footwell (UK/Aus/Hk/Jap/Malta). To access it you need to pull back the interior carpet – It isn't fixed with adhesive at that point, just hooked on at the sides. It's an easy job and no panelling requires removal. See next page for photograph:

Fuse Access- peel back the carpet from the top.




- note fuse cover removed.

To access the fuses, you will need to remove the cover using a T20 Torx bit:




2) Routing cable- I would start by feeding the cable in at this point (using trim tool to ease back the rubber door seal and lever the plastic trim).

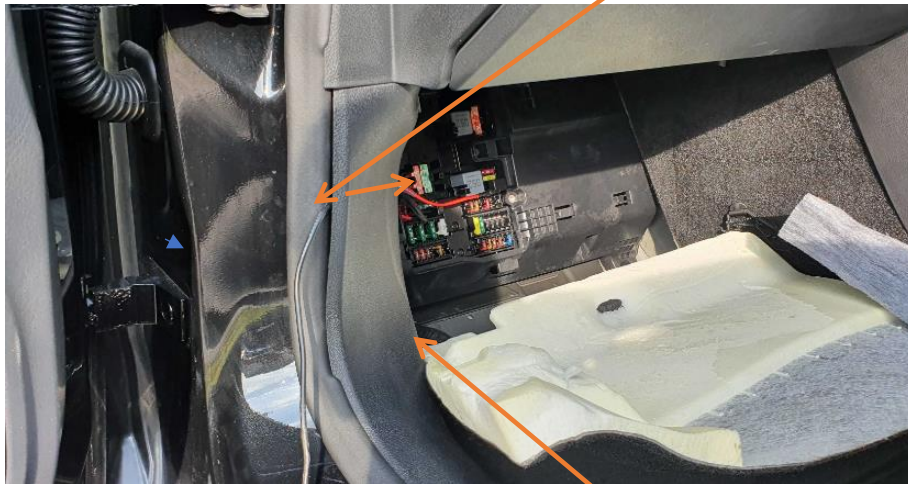

Push enough cable through to reach fuse slot 125 or 6. You can reach round and locate the end of the cable towards the floor.

3. Select the switched live spare fuse slot at 126 and place in your fuse piggy-back:



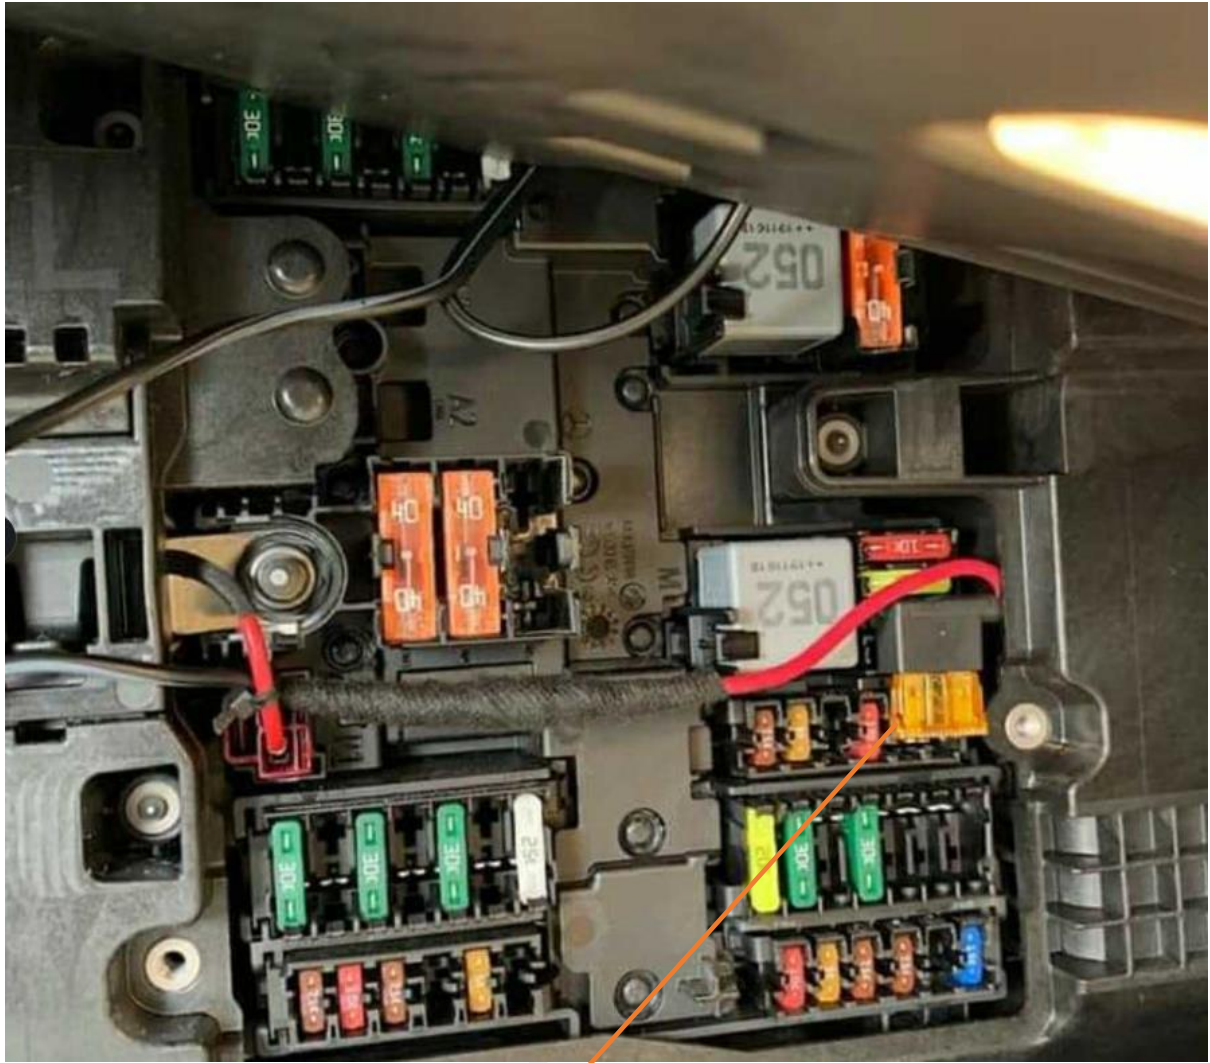

Fuse tap installed at position 126. Do not connect this to the main hardwire cable yet.

4) Cable Routing



Feed the wire as indicated above, using your trim tools.

Feed into the A-pillar. YOU MUST LOCATE THE WIRE AS TO NOT FOUL THE AIRBAG AT THIS POINT (BEHIND IT). THIS IS CRITICAL AS IT MAY NOT OPERATE OR CAUSE INJURY IN THE EVENT OF A CRASH



! Airbag !

Pull the trim back here (and locate wire accordingly)

Feed up in to the headlining and in to the interior mirror casing (levers off slightly)



Feed the wire inside the casing and expose enough cable to power your device at this point (mount the device there)

Other GG A35 guides available as of April 2020:

- 1) Quad tip installation guide v1.1
- 2) Panamericana / GT grille installation guide v1.1
- 3) Dashcam hardwire installation guide v1.0
- 4) W177 A Class Chrome handle wrap guide v1.0

Please get in touch if you require any of the above guides or any A35 help in general:

gibbo1981@gmail.com

Happy motoring,

Gabe G

**thanks to Rob Tandy for some pointers.*

www.a35store.com



V1.1