

Multicart Case Only

Assembly Instructions



Video
instructions



Safety Disclaimer

Depending on what you load into your multicart, you could introduce the risk of it being a tipping hazard. I have included wall anchor hardware with your product so that you can safely secure the cabinet to a wall to prevent this from happening. I recommend storing heavier items at the bottom. Unload the cabinet before rolling it, especially on an incline/decline or rough surface and only open 1 drawer/tray at a time.

Parts List

- Cabinet top, bottom, back, sides and the applied top and bottom
- Cabineo tightening tool (4mm ball end bit)
- Qty 26 of Cabineos (come pre-attached to cart) for connecting the carcass pieces
- Qty 26 Cabineo caps to cover the fasteners (optional)




Chuck Cabineo tool into your drill and set the torque to a really low setting.

Locate one of the sides

Grab the carcass bottom which should have the WW&W logo on it. Align the 3 Cabineo screws with the 5mm holes on the cabinet side.

Screw the middle Cabineo in a little so that it holds the part loosely. You will tighten it later. Double check the holes to accept the back are on the same side.

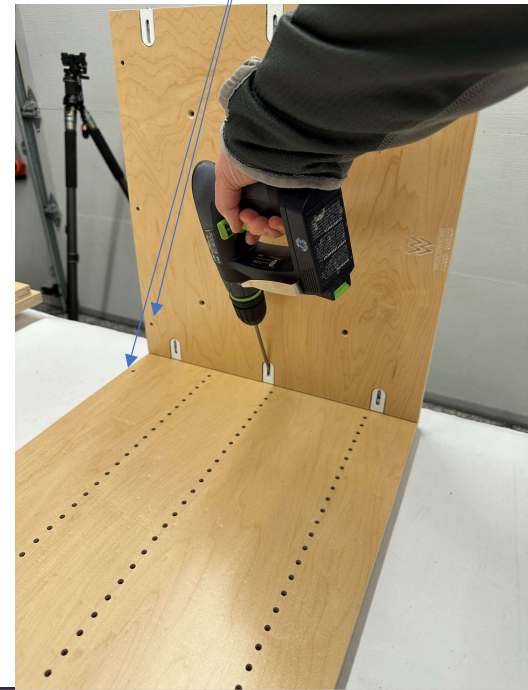

Tightening Cabineos

Do not to overtighten the hardware or it will strip out. Tighten until you feel the Cabineo bear down slightly and the gap goes away. It is also a little tricky to get the hex bit to release after tightening. Twisting the drill a little in a counter-clockwise direction helps removal. Worst case you can separate the bit from the drill and twist/wobble it a little to break it free.


Before Tightening




After Tightening




Twist/Wobble To Break Bit Free

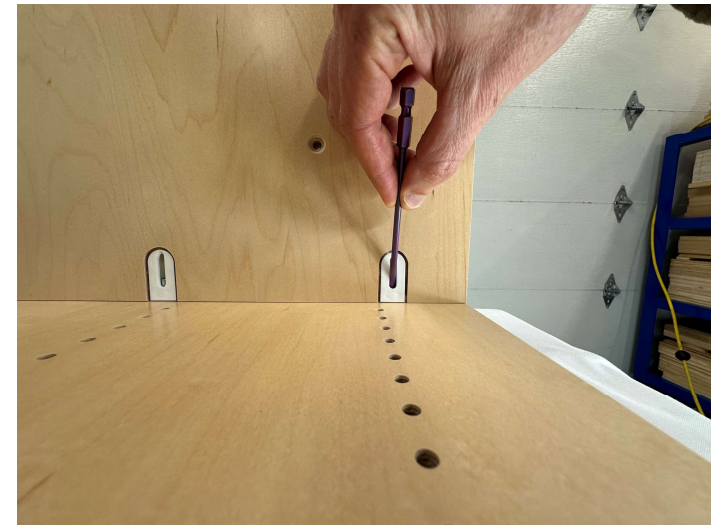


Cabinet Assembly

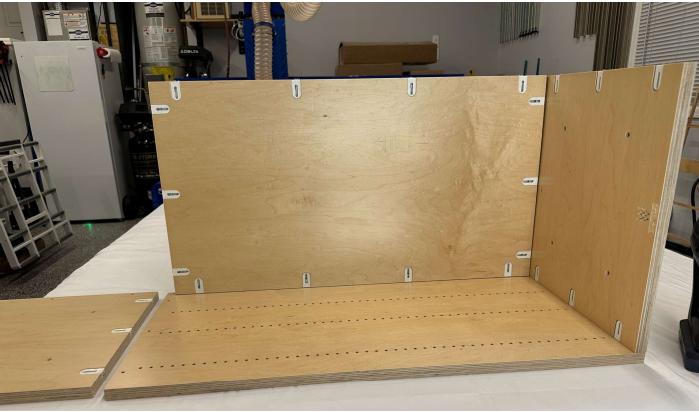

1. Set the cabinet back in position and tighten Cabineo screws loosely.

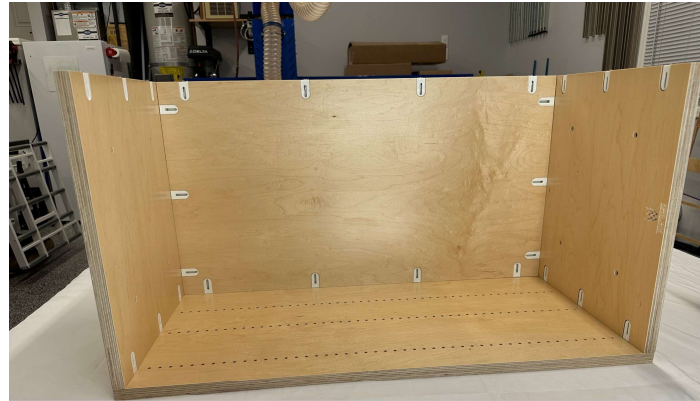

2. Loosely secure the top. Once all loosely set, tighten all Cabineo screws carefully until the gaps disappear (**don't over-torque!**).

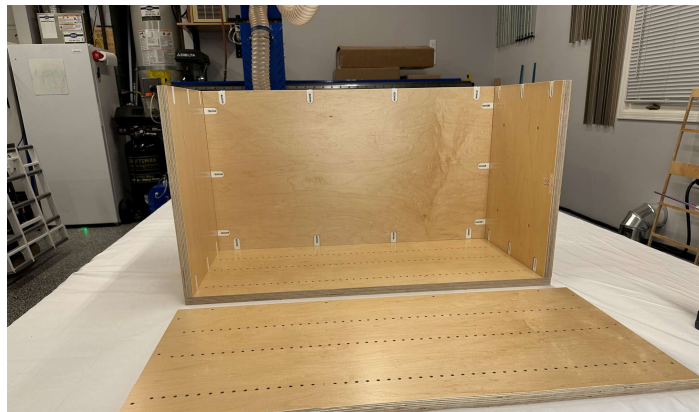

3. Orient the remaining side with the front facing you and flip the cabinet over onto it.



4. Loosely secure the remaining Cabineos and then do the final tightening just like step 2.

Put the back in and loosely secure the Cabineos. Once the back, bottom and top Cabineos are all in, secure them all to final tightness.

- Flip over the partially assembled cabinet onto the last side so that gravity can work in your favor. Align and loosely set the Cabineos as you did previously
- Tighten all the Cabineos from the last side

1. Cabineo caps can be installed to provide a finished appearance.



2. Slide the flat end of the cap up against the adjacent wall and press down



3. Continue placing the remainder of the caps throughout the inside of the cabinet.



Build the Shop of Your Dreams with the Multi-Cart System

THANK YOU FOR SUPPORTING MY SMALL BUSINESS!

ALL MULTI-CART PIECES WORK TOGETHER TO CREATE COHESIVE AND CLEAN ORGANIZATION.

ALL ACCESSORIES AND CARTS ARE AVAILABLE (OR WILL BE SOON) ON WOODWORKANDWELD.COM

FASTENER CART



DRAWER CART



PULL OUT TRAY



MITER SAW STAND

