

# UNLOCK YOUR ADVENTURE WITH 7 EASY STEPS.



## PREPARE THE ROOF


Clean the roof of your vehicle to ensure a smooth surface for the carrier. Remove any dirt, debris or old adhesive.

# 1

# 2

## PLACE THE ANTI-SLIP MAT

Lay the anti-slip mat on the roof. Make sure it's centred and positioned evenly. Smooth out any folds or wrinkles to maintain a flat surface.

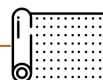

## POSITION THE CARRIER

# 3

With the straps visible on the top of the bag, centre the carrier on the roof, placing it on top of the anti-slip mat. Align the straps on the carrier with the four doors of your vehicle to ensure proper positioning.

## SECURE THE DOOR HOOKS

Open the vehicle door. Gently unfold the weather-stripping seal on the door frame. Place one of the included 6 door hooks on the metal doorframe. Push the weather-stripping seal back in place securely and close the door. Repeat for all four doors, attaching hooks to each metal doorframe. The 2 BONUS door hooks are for the middle strap – providing extra security. Use the straps on the carrier bag to assist with the alignment of the door hooks.

# 4


# 5

## PACK YOUR ESSENTIALS

Unzip your rooftop cargo carrier and pack it with your belongings. Zip the carrier closed at the back to minimize pressure on the zipper and shield it from direct wind and rain while driving.



# ROOFTOP CARGO CARRIER INSTRUCTIONS

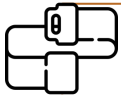

## FASTEN THE STRAPS

Make sure all straps are free from below the cargo carrier and not twisted. Bring the buckle and strap from below the bag, through the door hook / roof rack and connect to the clasp on the top of the bag. Tighten for a secure fit.

# 6

## STILL GOT QUESTIONS?



Have any questions or need assistance? Feel free to reach out to us at **[support@wildtrek.net](mailto:support@wildtrek.net)**. Our team is here to help and will be more than happy to assist you with any queries.

# 7

## LOCK & GO

The combination lock will be set to code 000. To change the code – unlock and rotate the shackle 90 degrees counter clockwise to align with the slit in the lock. Once aligned, push down and hold the shackle in the slit while turning the dials to a unique number. Once your unique number is dialled in, release the shackle returning it to the original locking position. Your new code is now set & you're ready for your journey!



# WILDTREK

PASSPORT TO THE GREAT OUTDOORS