

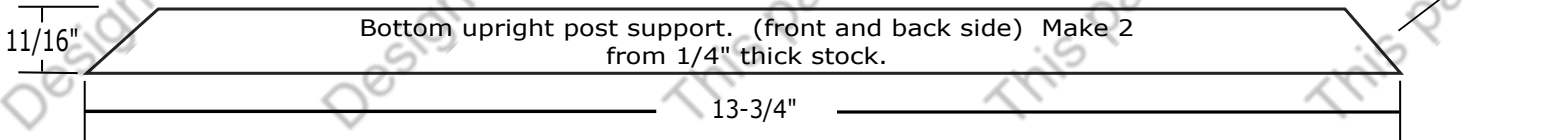
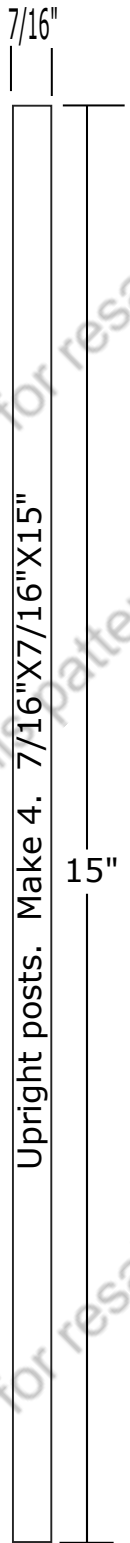
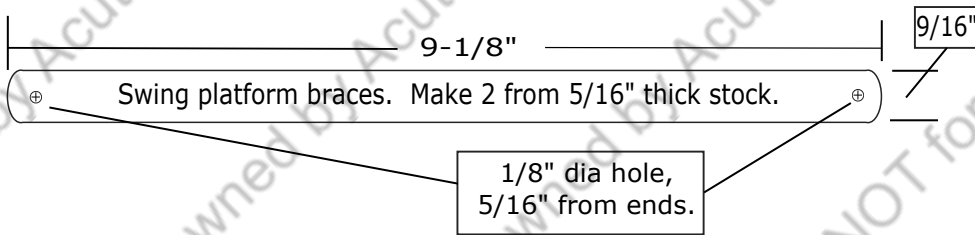
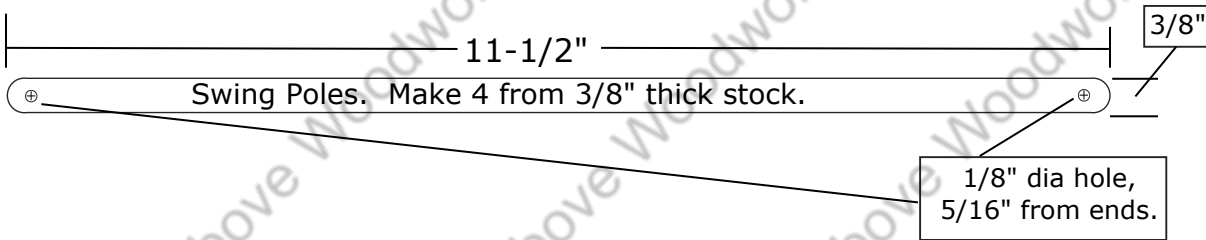
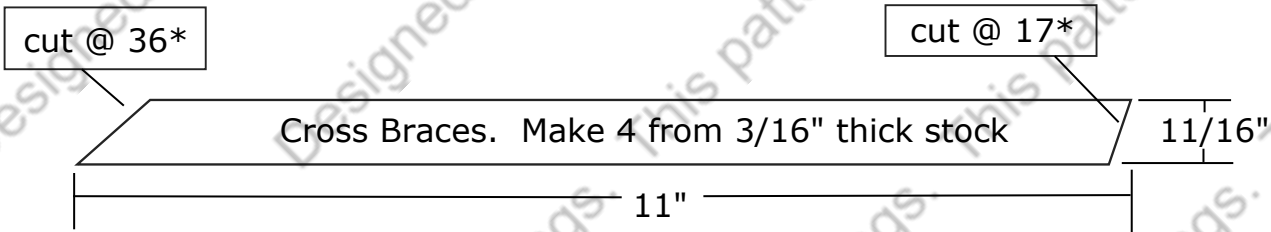
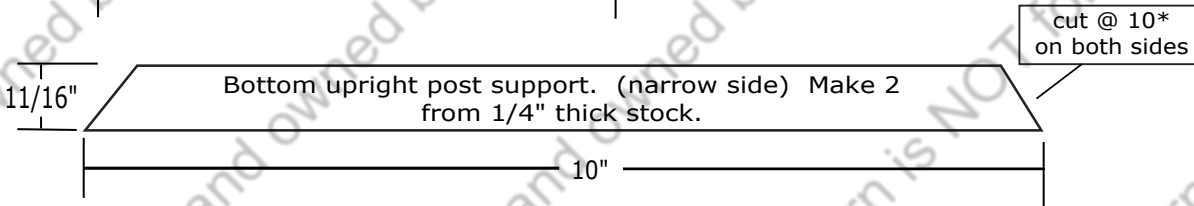
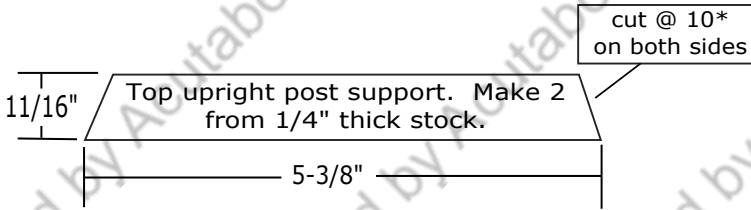
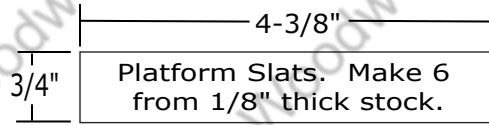
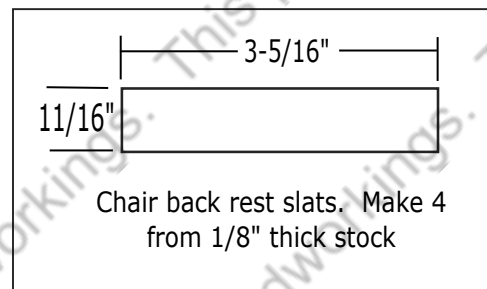
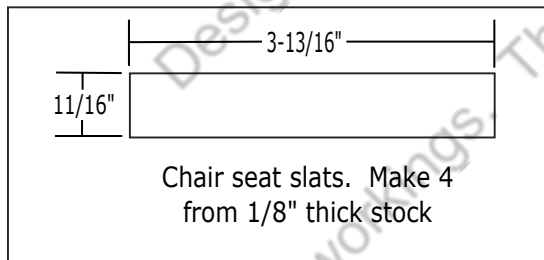
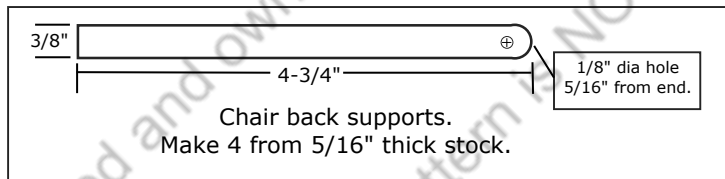


Acutabovewoodworkings  
Garden Swing Decoration  
www.acutabovewoodworkings.com

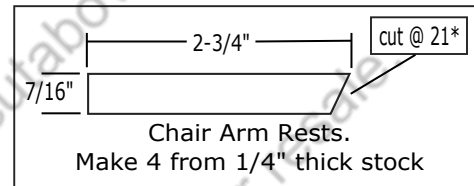

PLEASE NOTE THAT THIS DRAWING IS NOT TO SCALE. SOME MEASUREMENTS MAY NEED TO BE ADJUSTED.

Acutabovewoodworkings  
Garden Swing Decoration  
www.acutabovewoodworkings.com

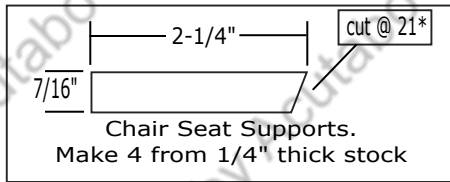

Chair seat slats are spaced @ 3/8" apart from each other.

Chair back rest slats are spaced 5/8" apart from each other.

For full instructions and the video tutorial, please visit [https://youtu.be/Gr0D\\_JURwCY](https://youtu.be/Gr0D_JURwCY)

PLEASE NOTE THAT THIS DRAWING IS NOT TO SCALE. SOME MEASUREMENTS  
MAY NEED TO BE ADJUSTED.