

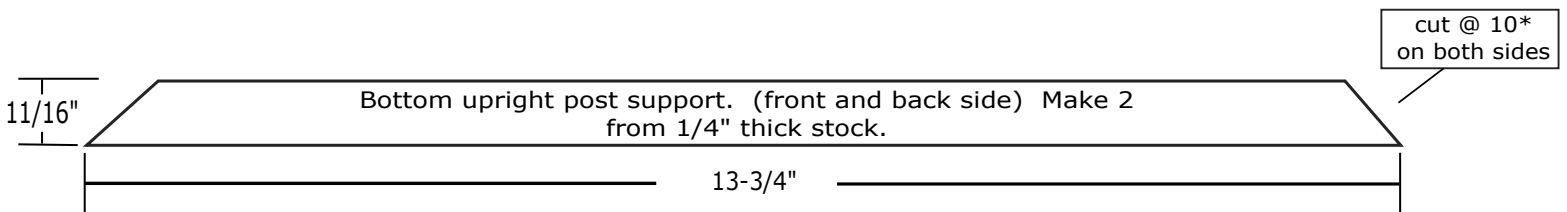
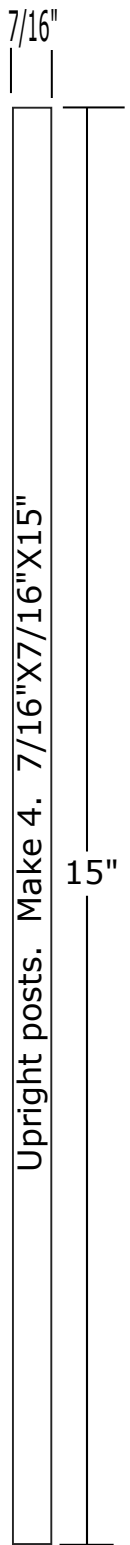
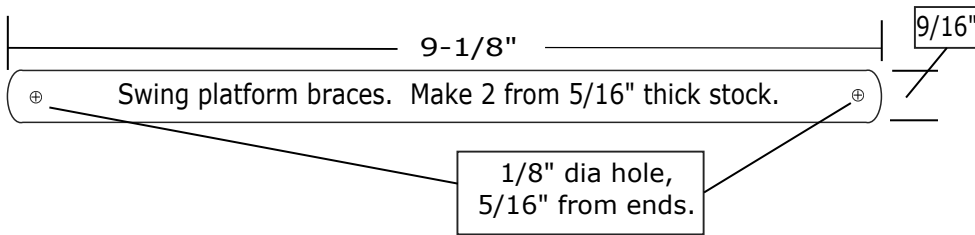
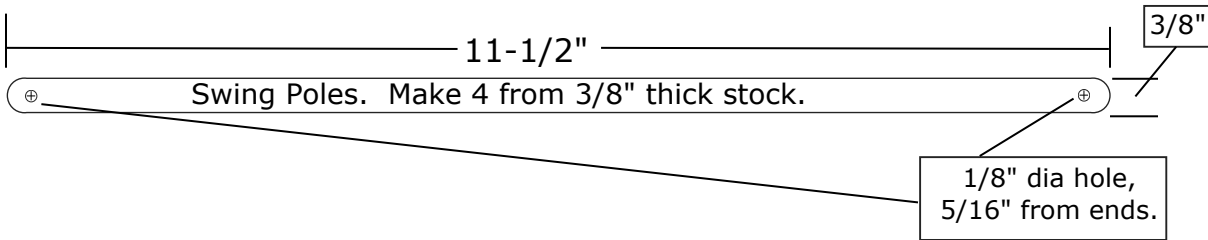
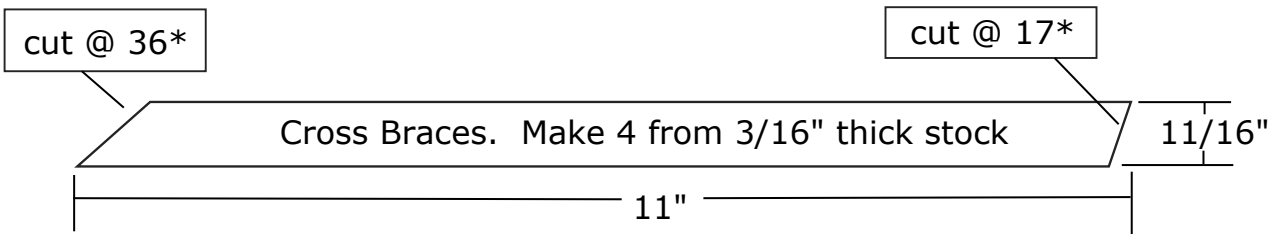
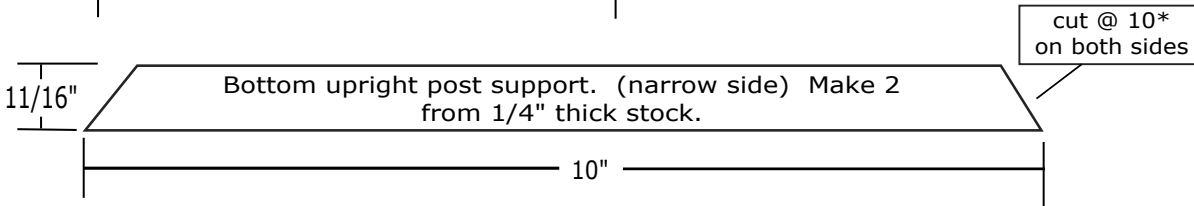
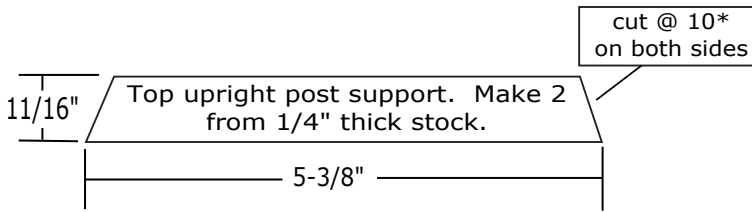
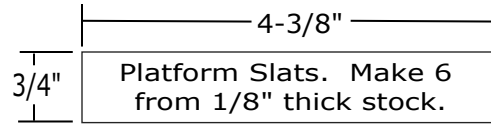
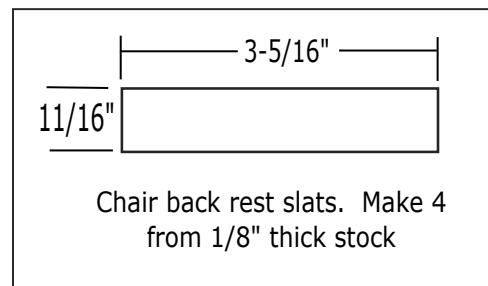
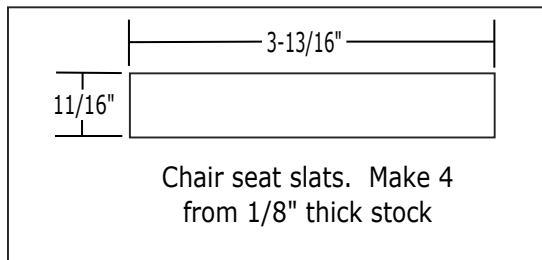
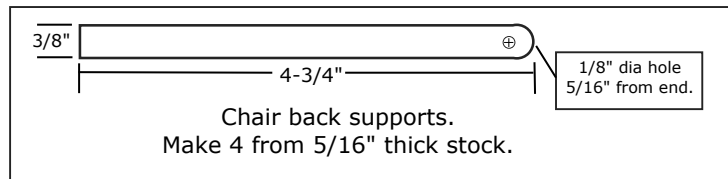


Acutabovewoodworkings
Garden Swing Decoration
www.acutabovewoodworkings.com

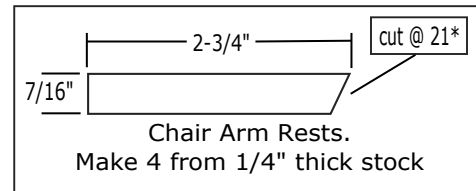

PLEASE NOTE THAT THIS DRAWING IS NOT TO SCALE. SOME MEASUREMENTS MAY NEED TO BE ADJUSTED.

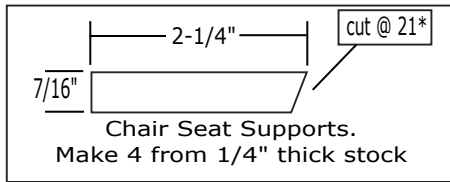

Chair seat slats are spaced @ 3/8" apart from each other.

Chair back rest slats are spaced 5/8" apart from each other.

For full instructions and the video tutorial, please visit https://youtu.be/Gr0D_JURwCY

PLEASE NOTE THAT THIS DRAWING IS NOT TO SCALE. SOME MEASUREMENTS MAY NEED TO BE ADJUSTED.